## ASSEMBLY AND INSTALLATION INSTRUCTIONS

## **CL1365**

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

## **Installation Steps**

**NOTE**: Do not install on ceilings with a Radiant Ceiling Heating System.

- 1. Carefully unpack your new fixture and lay out all the parts on a clear surface. Take care not to loose any small parts necessary for installation.
- 2. Attach the Circular Strap to the Outlet Box by using 2 Screws.
- 3. Weave the Fixture Wire and the Ground Wire through the Chain links. Spread one end of the chain link to clamp securely to the Loop.
- 4. Thread the Fixture Wire and ground wire through the Collar, Top loop, Canopy, Nipple-1 and Circular Strap in order.
- Thread the Nipple-2 into the Coupling, hen attached the ,cannul,ironwork-a,and then screw with the coupling.
- 6. Thread the Nipple-3 into the Coupling, , hen attached the cap ironwork-b, and then screw with the loop.
- 7. thread pole onto the body until tight.
- Thread the Nipple-4 into the pole hen attached the cannul,ironwork-c, cannul,ironwork-d and then screw with the finial.
- 9. Screw the Top Loop to the Nipple-1, and Clamp the other end of the Chain link to the Top Loop.
- 10. Make wire connections as follows securing with appropriate UL wire connectors.
  - ---The smooth wire (w/ marking) from fixture to Black Wire from power source.
  - ---The ribbed wire (w/o marking) from Fixture to White Wire from power source.
  - Wire from power source.
    ---Attach the Ground Wire and house ground wire to the Circular Strap with a green Ground Screw.
    Carefully tuck wires back into the Outlet Box.
- 11. Attach the Canopy to the Circular strap by inserting the Top loop, and then screw with the Collar.
- 12. Attached the Crystal strings onto the body according to the diagram.
- 13. Install the lighting bulbs in accordance with the fixture's specifications.

## DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

14. Turn on the power at fuse or Circuit Box.

**NOTE:** All parts must be used as indicated, and the physical integrity must be maintained to insure ETL/CETL listing of this fixture.

