

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-CKSY6335DL For Style CKSY6335DL

Tools Required: None

Bulb Recommended: (1) Medium Base (3-Way) 150W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Harp	1 pc.
B	Base	1 pc.
C	Finial	1 pc.
D	Shade	1 pc.


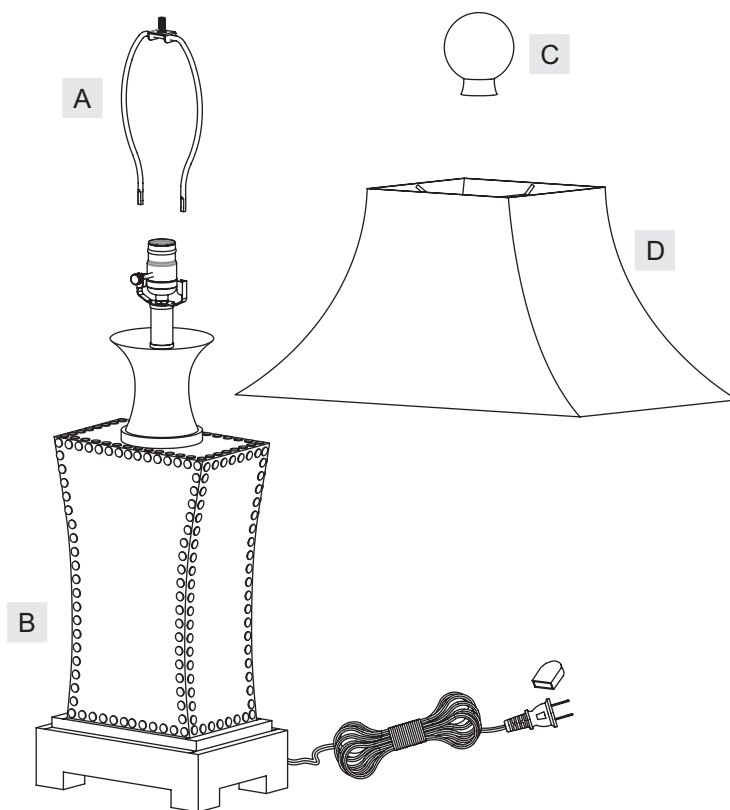


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

CKSY6335DL

FINISH: DARK CINNAMON LEATHER

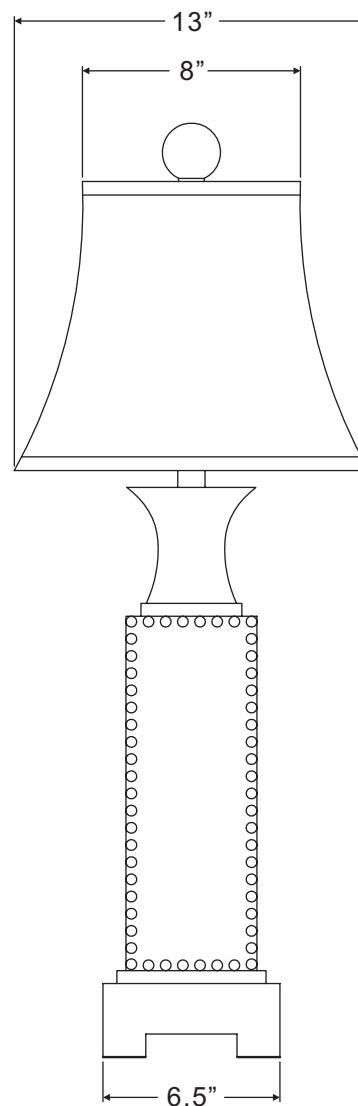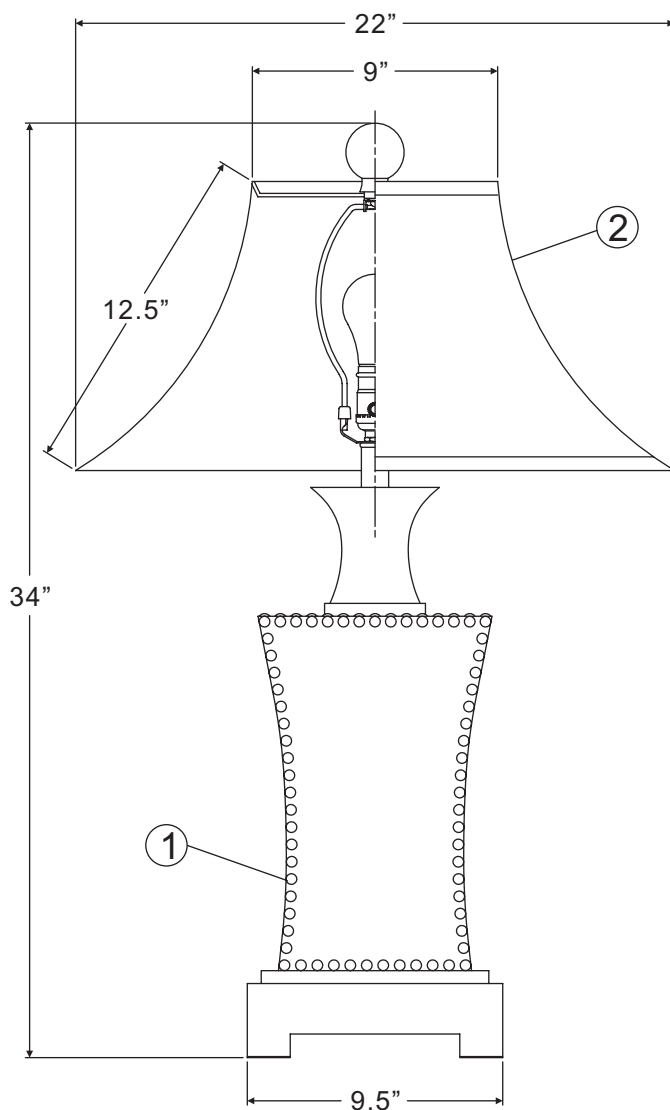

(1)150W Medium
Base (3-Way) Bulb
(Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	16335DLCKSY	BASE DARK CINNAMON LEATHER CKSY6335DL	1
2	S1428TN	TAN FABRIC SHADE (9/8)x(22/13)x12.5"H	1

Assembly Instruction Sheet #IS-CKSY6335DL For Style CKSY6335DL

STEP 1 – Install the Harp

- A. Install the Harp (A) by pressing the ends of the Harp (A) into the Harp Clips as shown.

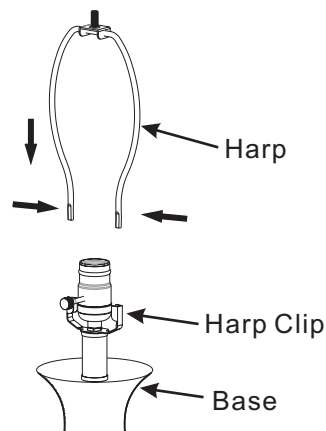


Figure 1

STEP 2 – Attach Shade

- A. Place the Shade (D) onto the top end of the Harp (A) and secure with the Finial (C). Hand tighten until snug.

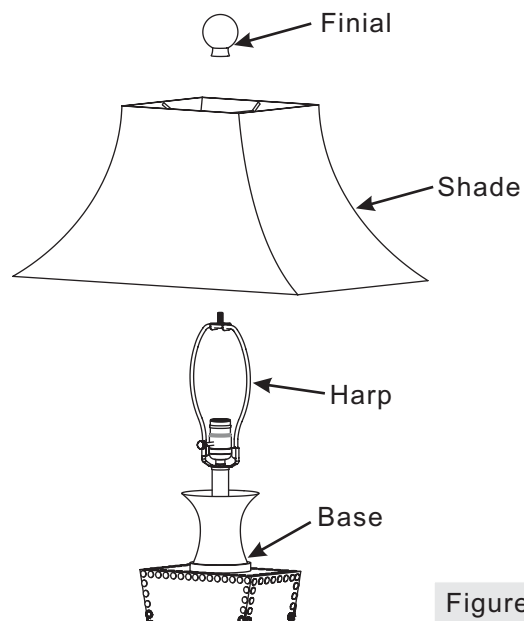


Figure 2

STEP 3 – Install Bulb

- A. This fixture uses standard bulb (3-Way) with medium base . Maximum 150 watts.
B. Insert bulb and screw snugly into place.

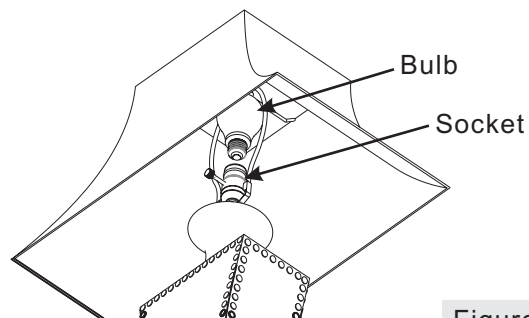


Figure 3

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com