

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-DW9362C For Style DW9362C

Tools Required: None

Bulb Recommended: (1) Medium Base 3-Way 150W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Finial	1 pc.
B	Shade	1 pc.
C	Harp	1 pc.
D	Fixture Body	1 pc.
E	Tube	1 pc.
F	Tube with Nipple	1 pc.
G	Base	1 pc.


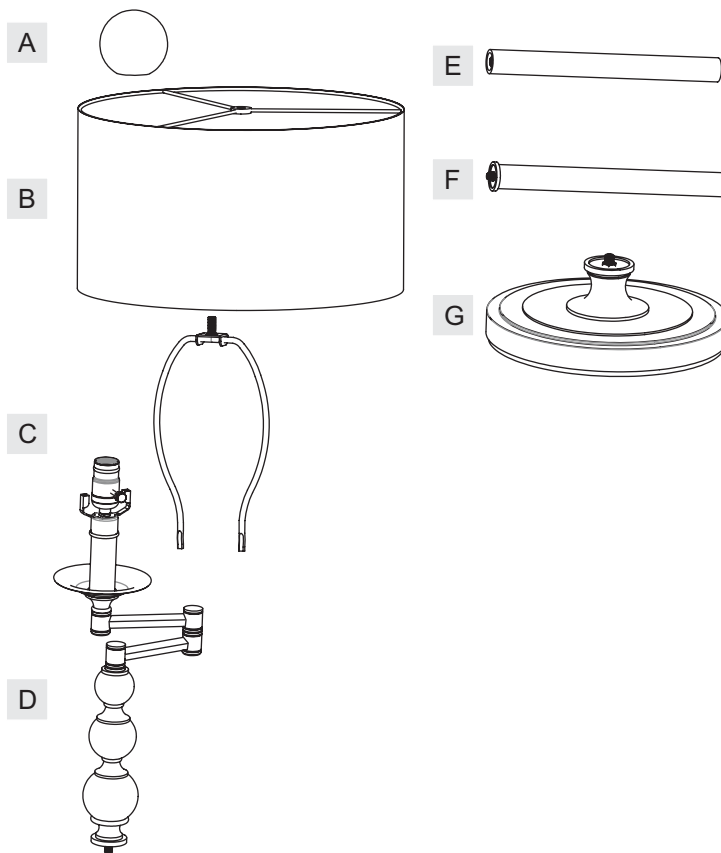


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

DW9362C

FINISH: POLISHED CHROME

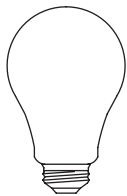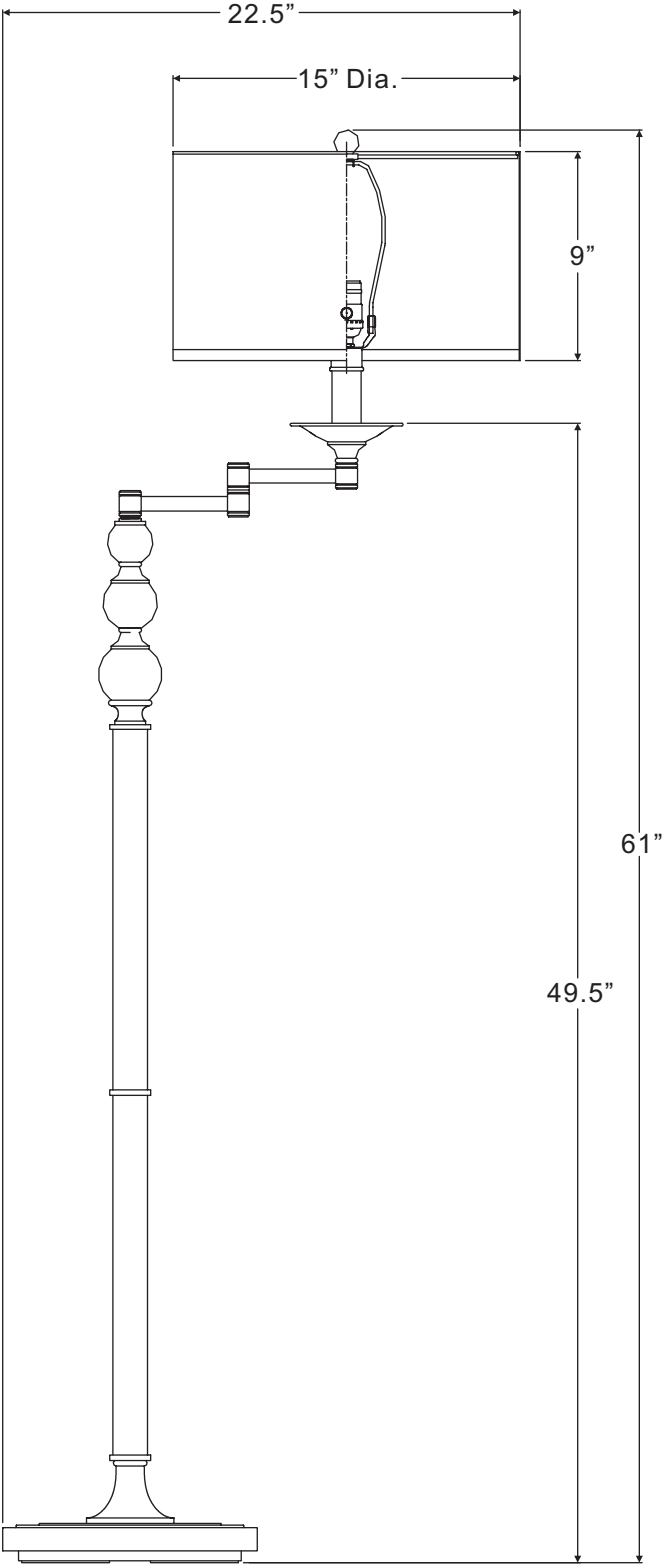


(1)150W Medium
Base (3-Way) Bulb
(Not Supplied)

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1			
2			
3			

Assembly Instruction Sheet #IS-DW9362C For Style DW9362C


STEP 1 – Assemble Rod and Socket Assembly

- Thread the Rod (E) and Rod with Connector (F) to the Base (G) as shown. Hand tighten until snug.
- Thread the Socket Assembly (D) into the top end of Rod (E). Hand tighten until snug.

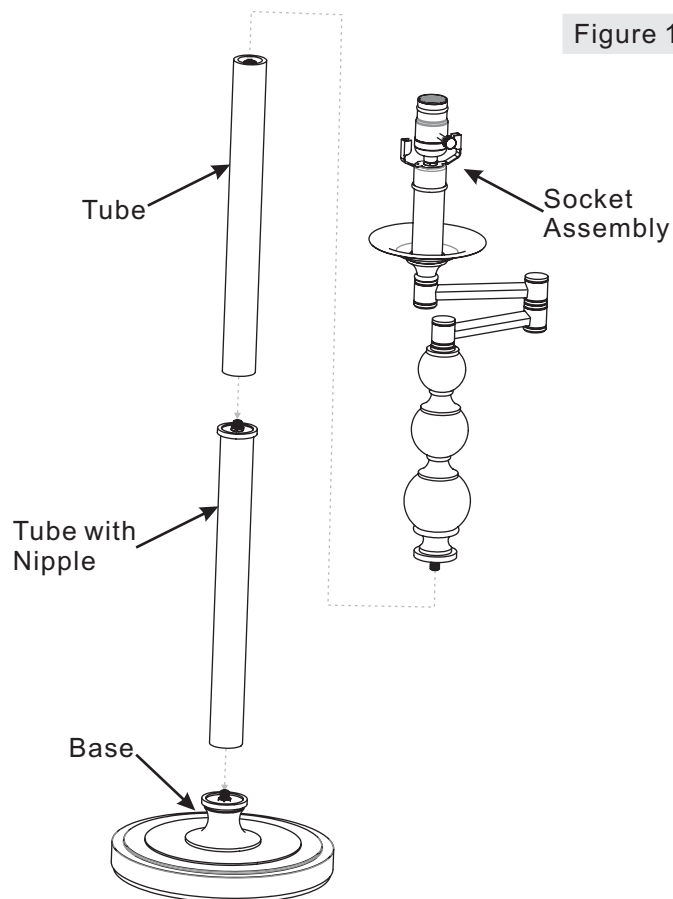

STEP 2 – Install Harp

- Locate the Harp (C) by pressing the ends of the Harp (C) into the Harp Clips on the top of Socket Assembly (D).

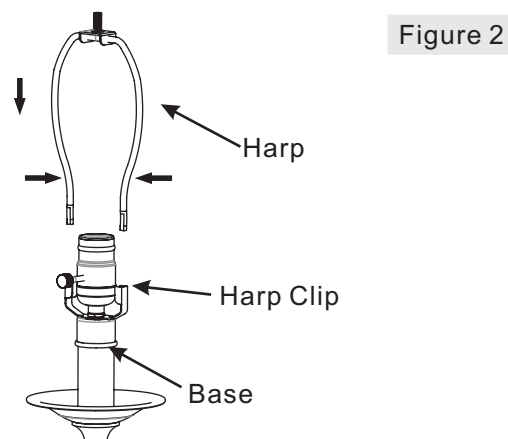

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-DW9362C For Style DW9362C

STEP 3 – Assemble Shade

- A. Place Shade (B) over the top end of the Harp (C).
Secure by thread the Finial (A) onto the Harp (C). Hand tighten until snug.

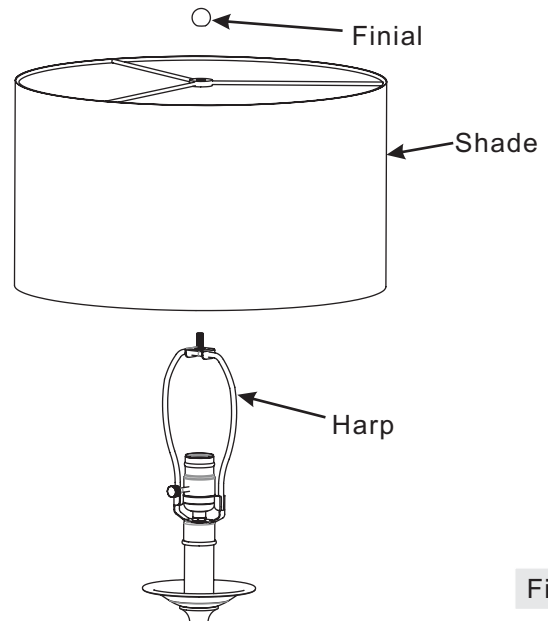


Figure 3

STEP 4 – Install Bulb

- A. This fixture uses standard bulbs with medium screw bases. Maximum 150 watts.
B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use.
Enjoy!

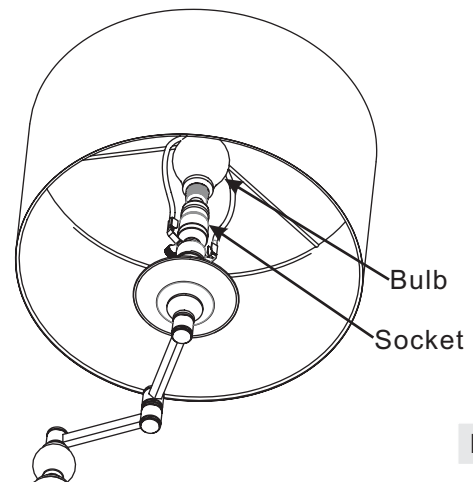


Figure 4

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com