

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (4) Medium Base 100W Maximum

Estimated Assembly Time: 30-45 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### **Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

○ 2011 QuoizelInc. November 2011

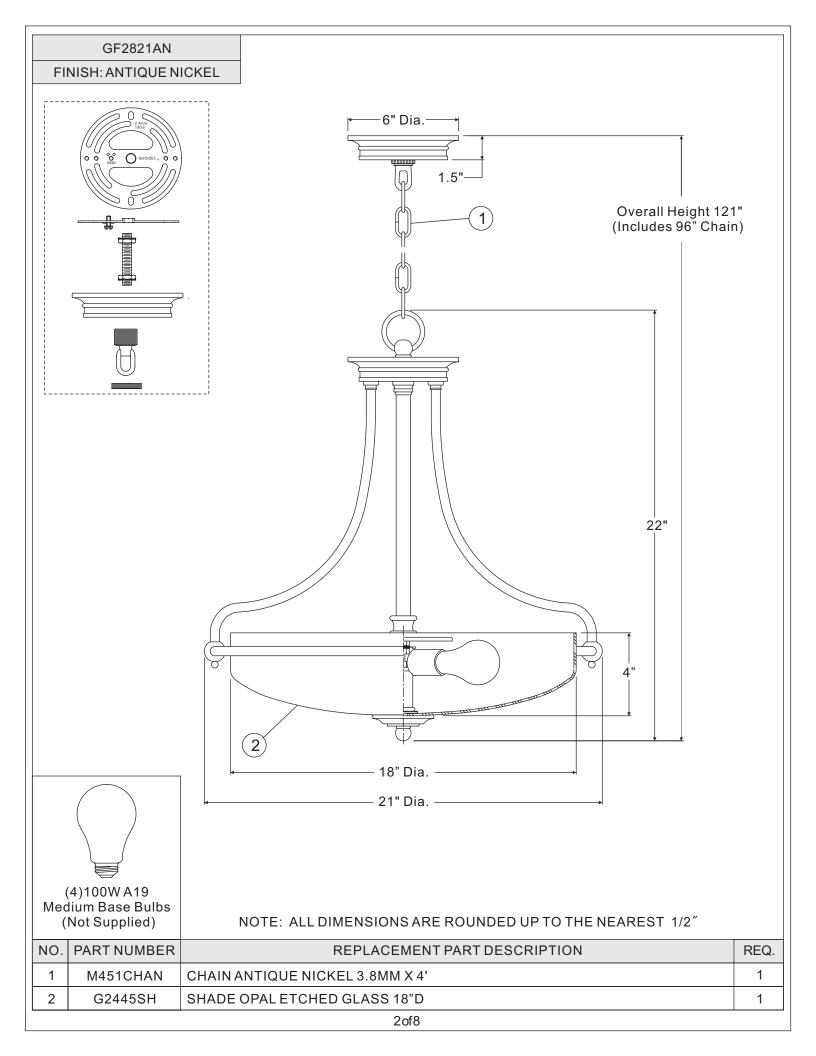




# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN

### **Package Contents**

<b>D</b> (	5	0
Part	Description	Quantity
Α	Crossbar	1 pc.
В	Nipple	1 pc.
С	Lock Washer	2 pcs.
D	Hex Nut	3 pcs.
Е	Ceiling Canopy	1 pc.
F	Canopy Chain Loop	1 pc.
G	Canopy Lock Ring	1 pc.
Н	Fixture Chain	1 pc.
I	Fixture Loop	1 pc.
J	Check Ring	2 pcs.
K	Spacer Tube	1 pc.
L	Rubber Washer	2 pcs.
М	Flat Washer	2 pcs.
N	Socket Assembly	1 pc.
0	Lock Ball	3 pcs.
Р	Center Stem	1 pc.
Q	Сар	1 pc.
R	Finial	1 pc.
S	Ring	1 pc.
Т	Shade	1 pc.

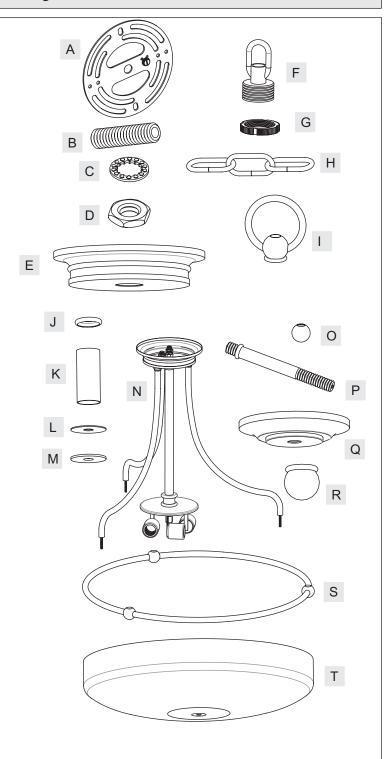

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700


or visit us on-line at www.quoizel.com

Comparison of the comparison of the

# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN


### STEP 1 - Attach Ring to Socket Assembly

- A. Unfold Side Arms on the Socket Assembly (N) to proper locations.
- B. Place the holes on the Ring (S) over the Bolts on the ends of Side Arms. Secure by threading Lock Balls (O) onto the Bolts. Hand tighten until snug.

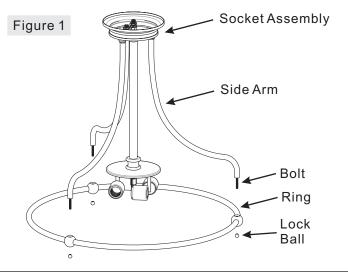


### STEP 2 - Install Fixture Loop

A. Thread the Fixture Loop (I) onto the nipple on the top center of the Socket Assembly (N). Hand tighten until snug.

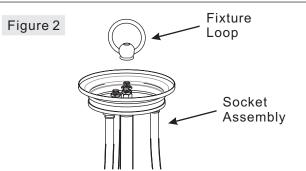

#### STEP 3 - Attach Crossbar to Outlet Box

A. Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

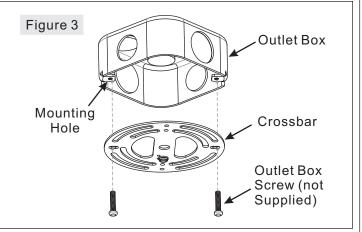

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700


or visit us on-line at www.quoizel.com

Overmber 2011 Quoizel Inc.

# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN


### STEP 4 - Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the hex Nut (D) against the Crossbar (A) and hand tighten until snug.

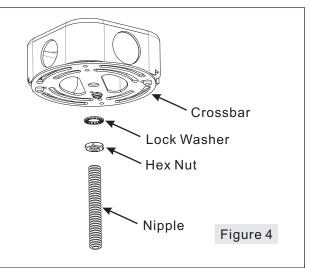


### STEP 5 - Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).
- B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).
- C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (F) and hand tighten until snug.

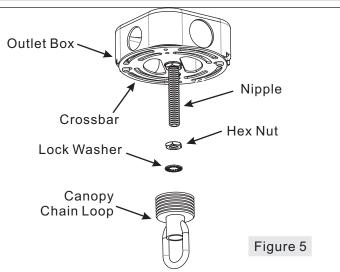

### STEP 6 - Assemble Ceiling Canopy

A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop (F) and tighten until snug to secure the Ceiling Canopy (E).

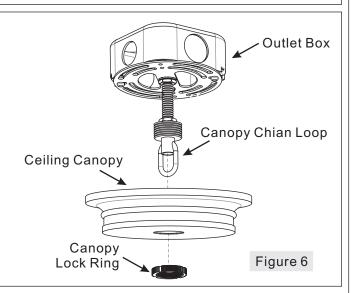

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


November 2011



# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN


### STEP 7 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. Adjust the Fixture Chain (H) to your desired length by removing the links if needed. You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- B. Attach one end of the Fixture Chain (H) onto the Canopy Chain Loop (F) and then attach the other end of the Fixture Chain (H) onto the Fixture Loop (I).

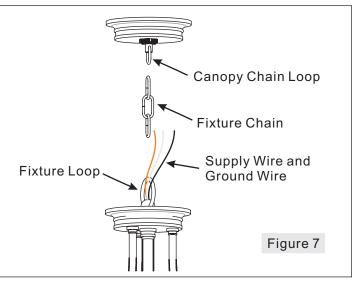

## STEP 8 - Pass Supply Wires through Fixture Chain

A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (H) alternating links. Push the wires up through the Canopy Chain Loop (F) into the outlet box.

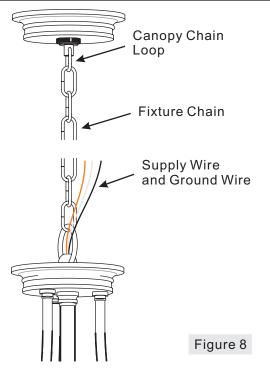

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


Overmber 2011


November 2011

# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN

#### STEP 9 - Make Wire Connections


- A. Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain (H).
- B. Push all slack fixture wire through Canopy Chain Loop (F) into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- E. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- G. Twist connectors until wires are tightly joined together.
- H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- G. Re-attach the Ceiling Canopy (E) as shown in Step 6.

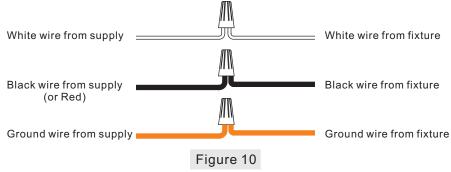

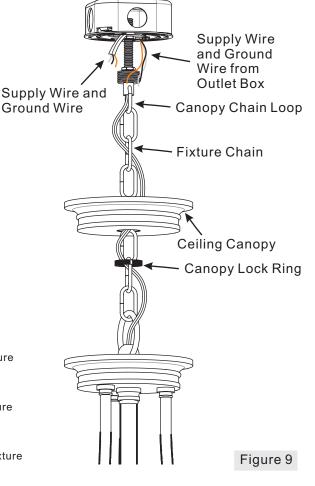

#### STEP 10 - Install Center Stem

A. Place one Check Ring (J) over the beaded end of the Center Stem (P) and then thread the beaded end of the Center Stem (P) into the Hex Coupling underside of the Socket Cluster. Hand tighten until snug.

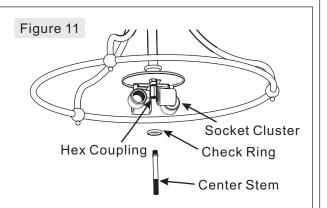

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700


or visit us on-line at www.quoizel.com

November 2011

# Assembly Instruction Sheet #IS-GF2821AN For Style GF2821AN


#### STEP 11 - Install Shade

A. Place the Spacer Tube (K), the Check Ring (J), Flat Washers (M), Rubber Washers (L) and the Shade (J) over the end of the Center Stem (P) in turn. Secure by threading the Hex Nut (D) onto the Center Stem (P). Tighten until snug.

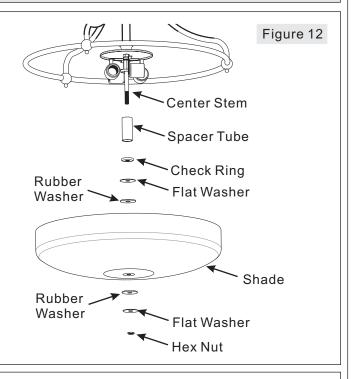

#### STEP 12 - Install Cap


A. Place the Cap (Q) over the end of the Center Stem (P) and secure with the Finial (R). Hand tighten until snug.

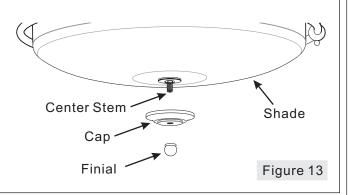

#### STEP 13 - Install Bulb

- A. This fixture uses standard bulb with a medium screw base. Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your fixture pendant lamp is now assembled and ready to use. Enjoy!

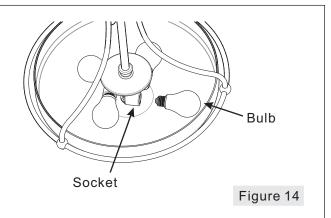

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

Overmber 2011

November 2011