Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Candelabra Base 60W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents


Part	Description	Quantity
Α	Crossbar	1 pc.
В	Nipple	1 pc.
С	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
Е	Ceiling Canopy	1 pc.
F	Canopy Chain Loop	1 pc.
G	Canopy Lock Ring	1 pc.
Н	Fixture Chain	1 pc.
I	Fixture Loop	1 pc.
J	Fixture Body	1 pc.
K	Glass Panel	4 pcs.

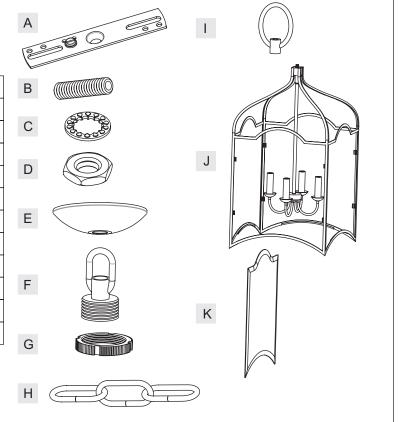

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2012 Quoizel Inc.

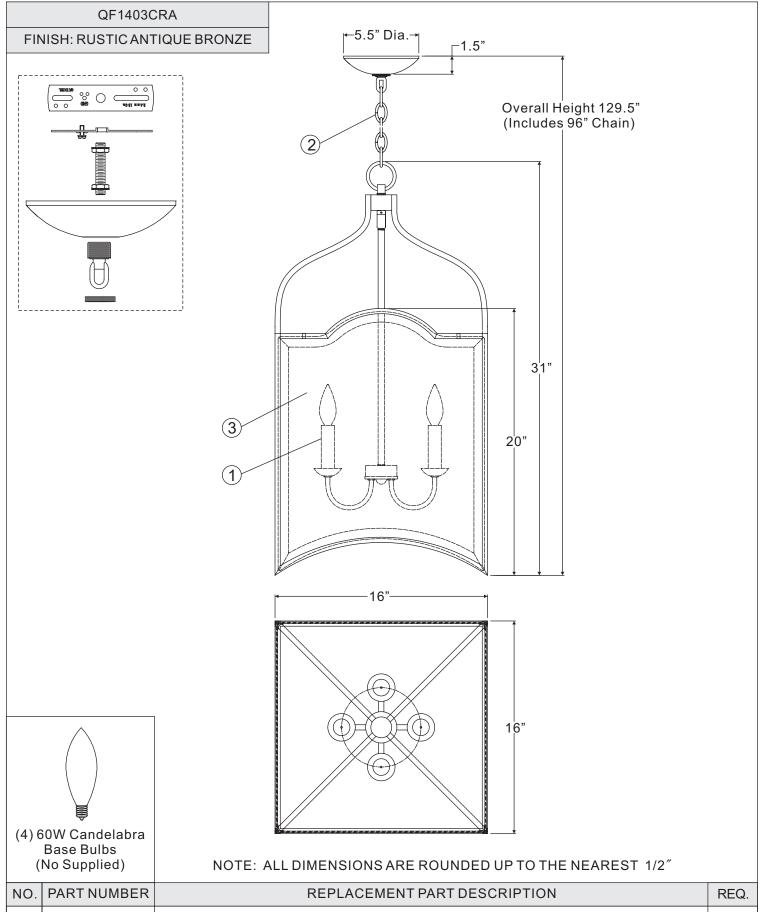


1	M2380CVRA	CANDLE COVER RUSTIC ANTIQUE BRONZE	4
2	M2140CHRA	CHAIN RUSTIC ANTIQUE BRONZE 3.8MM X4'	1
3	G3431PA	PANEL GLASS CLEAR 15.5"W	4

Q U O Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA


STEP 1 - Attach Fixture Loop to Fixture Body

A. Thread Fixture Loop (I) onto Nipple on the top of Fixture Body (J). Tighten until snug.

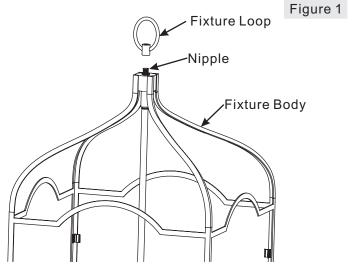

STEP 2 - Attach Panel to Fixture Body

A. Insert Glass Panels (K) into the Slot in the bottom of the Fixture Body (J) then fold the Tabs on the Fixture Body (J) to secure the Glass Panels (K).

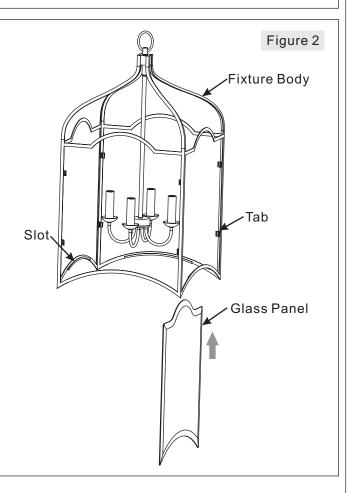

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


© 2012 Quoizel Inc.

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA


STEP 3 - Attach Crossbar to Outlet Box

A. Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

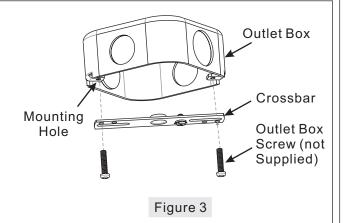


STEP 4 - Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the hex Nut (D) against the Crossbar (A) and hand tighten until snug.

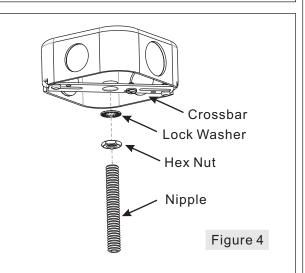

STEP 5 - Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).
- B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).
- C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (F) and hand tighten until snug.

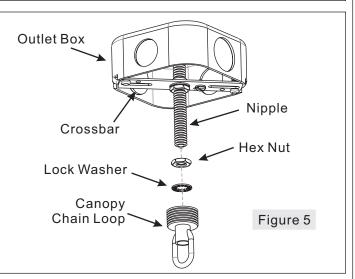

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


© 2012 Quoizel Inc.

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA


STEP 6 - Assemble Ceiling Canopy

A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop (F) and tighten until snug to secure the Ceiling Canopy (E).

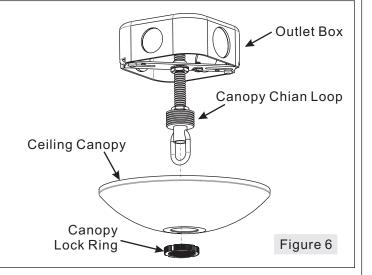

STEP 7 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. Adjust the Fixture Chain (H) to your desired length by removing the links if needed. You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- B. Attach one end of the Fixture Chain (H) onto the Canopy Chain Loop (F) and then attach the other end of the Fixture Chain (H) onto the Fixture Loop (I) on the top of the Fixture Body (J).

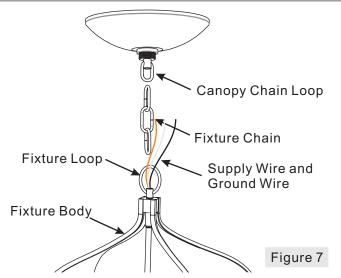

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

Q UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA


Supply Wire and Ground

Wire from

Outlet Box

STEP 8 - Pass Supply Wires through Fixture Chain

A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (H) alternating links. Push the wires up through the Canopy Chain Loop (F) into the outlet box.

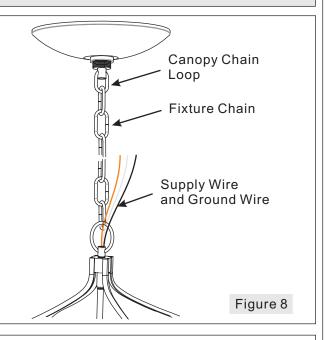

Supply Wire and Ground Wire


Canopy Chain Loop

Fixture Chain

Ceiling Canopy

STEP 9 - Make Wire Connections

- A. Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain (H).
- B. Push all slack fixture wire through Canopy Chain Loop (F) into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- E. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- G. Twist connectors until wires are tightly joined together.
- H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

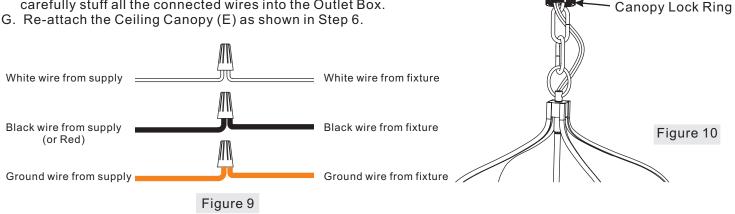

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

© 2012 Quoizel Inc.




Assembly Instruction Sheet #IS-QF1403CRA For Style QF1403CRA

STEP 10 - Install Bulb

- A. This fixture uses standard bulbs with a standard screw base. Maximum 60 watts.
- B. Insert bulb and screw properly into place.

Your fixture is now assembled and ready to use. Enjoy!

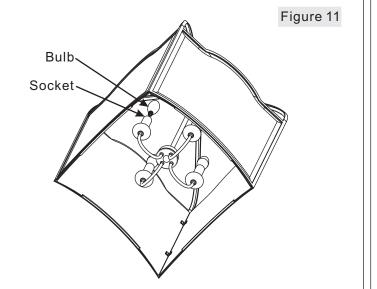

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com © 2012 Quoizel Inc.