Q U O I Z F L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

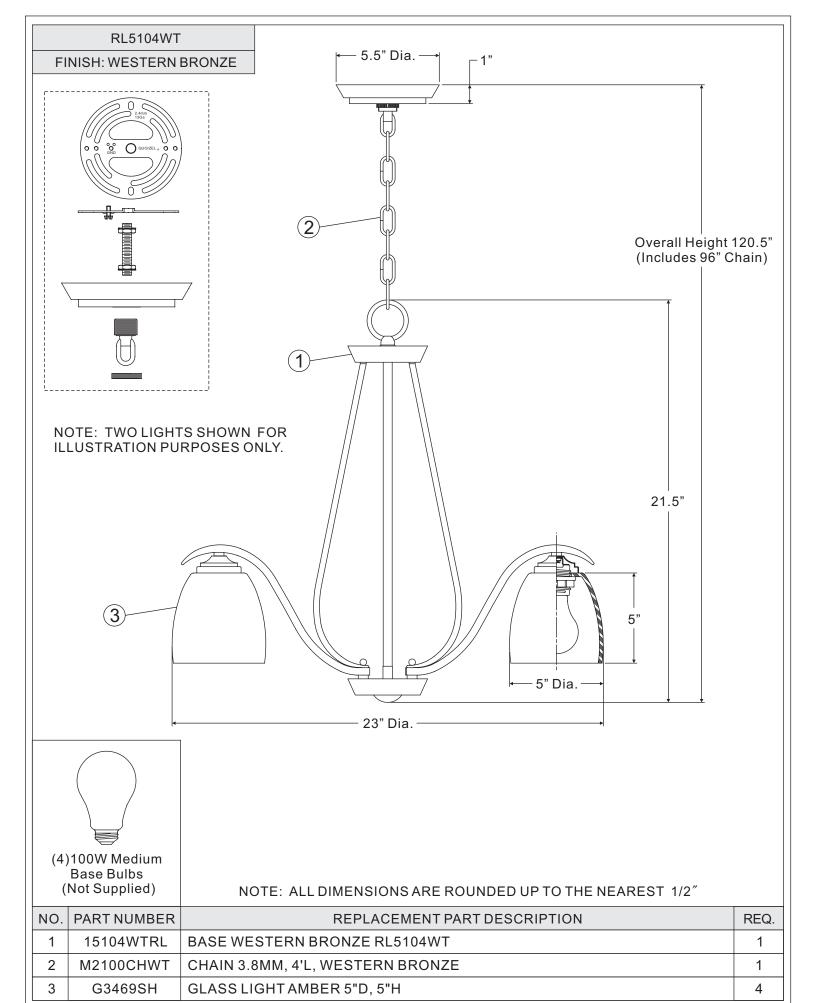


2of8



Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT

Package Contents

D	B	0
Part	Description	Quantity
Α	Crossbar	1 pc.
В	Nipple	1 pc.
С	Lock Washer	3 pcs.
D	Hex Nut	2 pcs.
Е	Canopy Chain Loop	1 pc.
F	Canopy Lock Ring	1 pc.
G	Fixture Chain	1 pc.
Н	Ceiling Canopy	1 pc.
I	Fixture Loop	1 pc.
J	Shade	4 pcs.
K	Socket Collar	4 pcs.
L	Lock Screw	4 pcs.
М	Fixture Canopy	1 pc.
N	Center Rod	1 pc.
0	Side Arm	4 pcs.
Р	Lock Ball	4 pcs.
Q	Socket Assembly	1 pc.

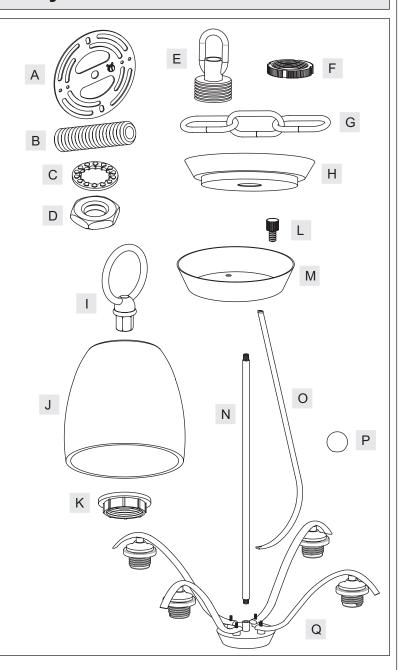

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

Q U O I Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT


STEP 1 – Attach Center Rod and Fixture Canopy

- A. Unfold Support Arms on the Socket Assembly (Q) to proper locations.
- B. Thread the Center Rod (N) into the coupling on the top center of the Socket Assembly (Q). Hand tighten until snug.
- C. Place the Fixture Canopy (M) over the top end of the Center Rod (N). Line up holes on the bottom of the Fixture Canopy (M) and Support Arms on the Socket Assembly (Q). Secure by threading one Lock Washer (C) and the Fixture Loop (I) onto the Center Rod (N). Hand tighten until snug.

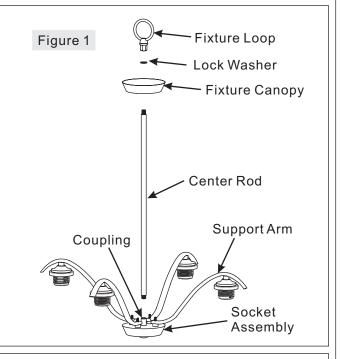

STEP 2 - Attach Side Arm

- A. Place the Hole on the end of the Side Arm (O) over the Bolt on the Socket Assembly (Q). Align another end of the Side Arm (O) to the holes on the Fixture Canopy (M).
- B. Thread Lock Screw (L) into the top end of the Side Arm (O) and thread Lock Ball (P) onto the Bolt on the Socket Assembly (Q). Hand tighten until snug to secure Side Arms.

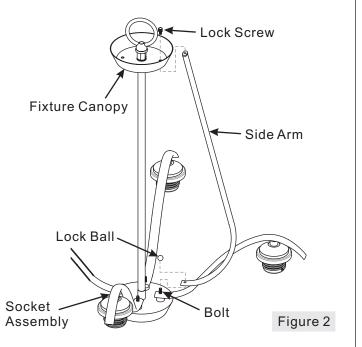

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

Q U O I Z F L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT


STEP 3 - Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the hex Nut (D) against the Crossbar (A) and hand tighten until snug.

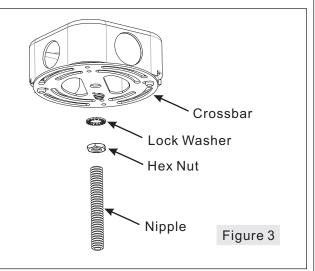


STEP 4 - Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).
- B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).
- C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (F) and hand tighten until snug.

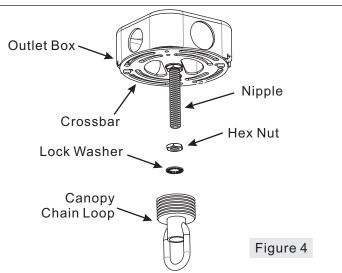

STEP 5 - Assemble Ceiling Canopy

A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop (F) and tighten until snug to secure the Ceiling Canopy (E).

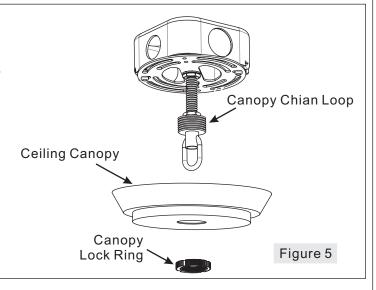

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2012 Quoizel Inc.


October 2012



Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT


STEP 6 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. Adjust the Fixture Chain (H) to your desired length by removing the links if needed. You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- B. Attach one end of the Fixture Chain (H) onto the Canopy Chain Loop (F) and then attach the other end of the Fixture Chain (H) onto the Fixture Loop (I) on the top of the fixture.

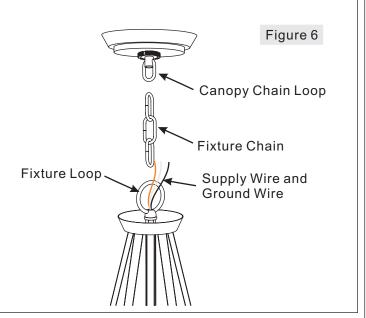

STEP 7 – Pass Supply Wires through Fixture Chain

A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (H) alternating links. Push the wires up through the Canopy Chain Loop (F) into the outlet box.

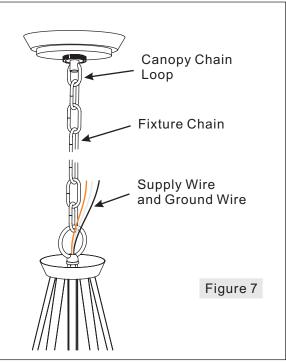

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT

STEP 8 - Make Wire Connections


- A. Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain (H).
- B. Push all slack fixture wire through Canopy Chain Loop (F) into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- E. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- G. Twist connectors until wires are tightly joined together.
- H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- G. Re-attach the Ceiling Canopy (E) as shown in Step 5.

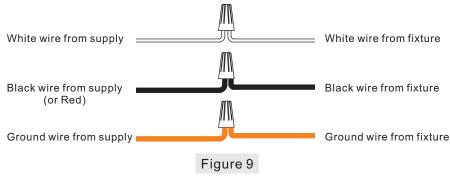

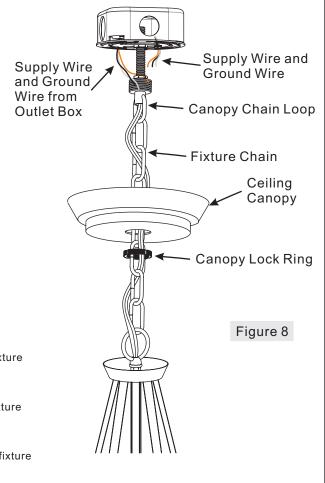

STEP 9 - Install Shade

A. Place the Shade (J) over the Socket and secure with the Socket Collar (K). Hand tighten until snug.

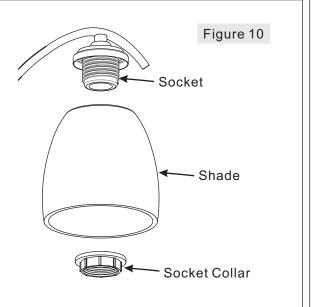

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com




Assembly Instruction Sheet #IS-RL5104WT For Style RL5104WT

STEP 10 - Install Bulb

- A. This fixture uses standard bulb with medium screw base. Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

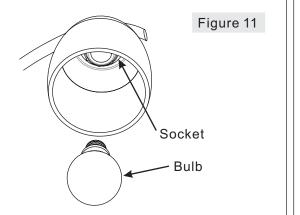

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com