

INSTRUCTION SHEET IS-RNT1815


STYLE NUMBER: RNT1815

PACKAGE CONTENTS

ISSUED 03-2010

REVISED 2010-04-02

PART	DESCRIPTION	QUANTITY
A	Crossbar	1 pc
B	Green Ground Screw	1 pc
C	Mounting Screw	2 pcs
D	Lock Washer	2 pcs
E	Hex Nut	2 pcs
F	Mounting Ball	2 pcs
G	Cord Kit	1 pc
H	Retainer Ring	1 pc
I	Paper Shade	1 pc
J	Woven Rattan Pendant	1 pc

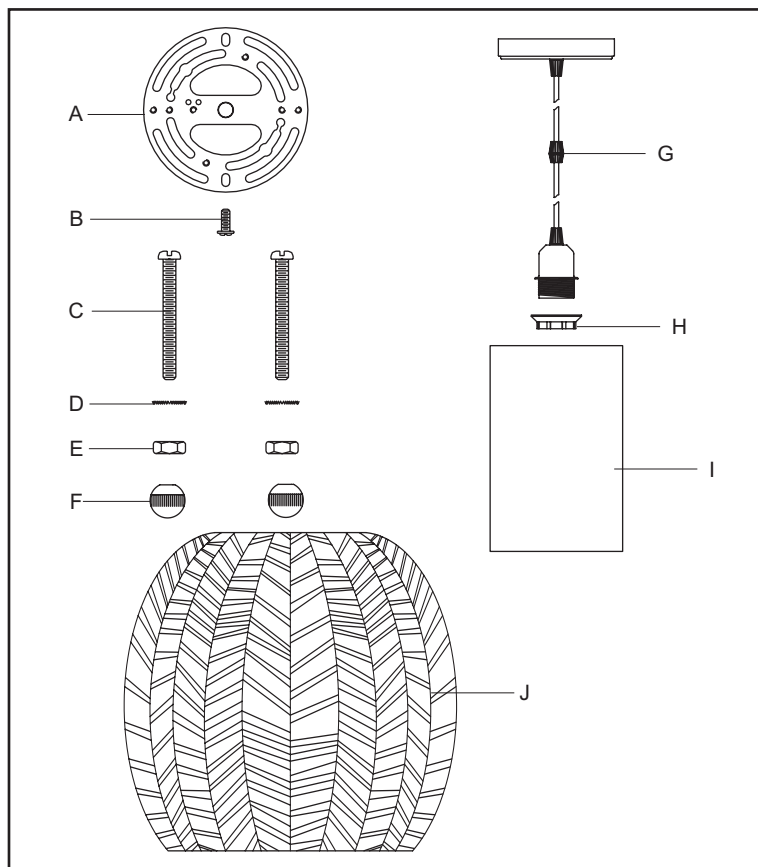

WARNINGS AND CAUTIONS

WARNING:

- Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.

CAUTION:


- These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.
- Disconnect fixture from the power source before replacing the bulb(s), making sure that bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

PREPARATION

- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time: 20 - 30 minutes
- Tool Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutter, Safety glasses and (1) 100W A19 medium base bulb.
- Helpful Tools (not included): Wire strippers.


STEP 1:

- a. Unscrew the Cord Grip on the bottom center of the Ceiling Canopy. Take away the Strain Relief, Hex Nut, Lock Washer and the Ceiling Canopy from the Cord.

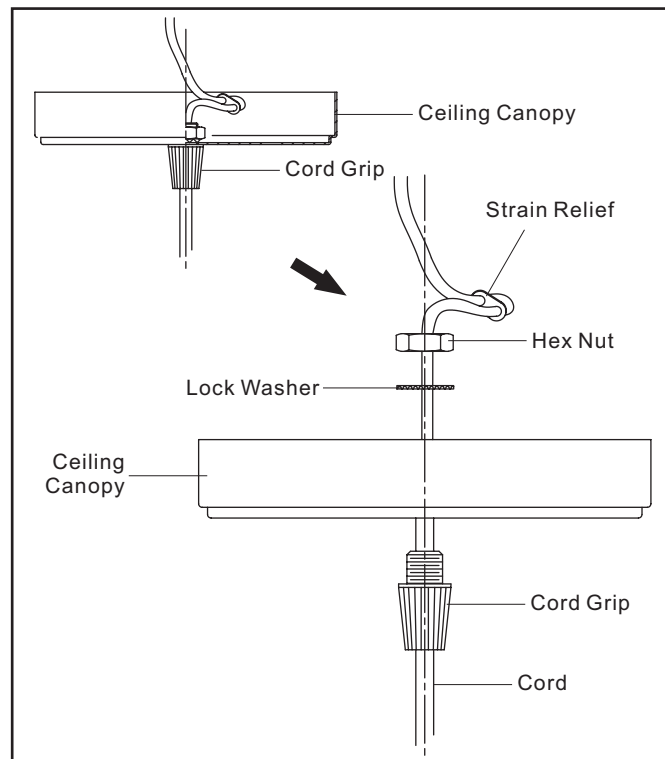


STEP 2:

- ★ Refer to PERSPECTIVE for the installation.
- a. Unscrew the Double Cord Grip on the Cord.
- b. Insert the end of the wire through the bottom of the Woven Rattan Pendant and pass it through to the top. The double cord grip is inserted in the Slotted Hole in the Metal Washer. Then thread the Double Cord Grip back together to secure the Woven Rattan Pendant. Hand-tighten until snug. Note: The Socket should be positioned so that the Paper Shade is centered in the Woven Rattan Pendant.

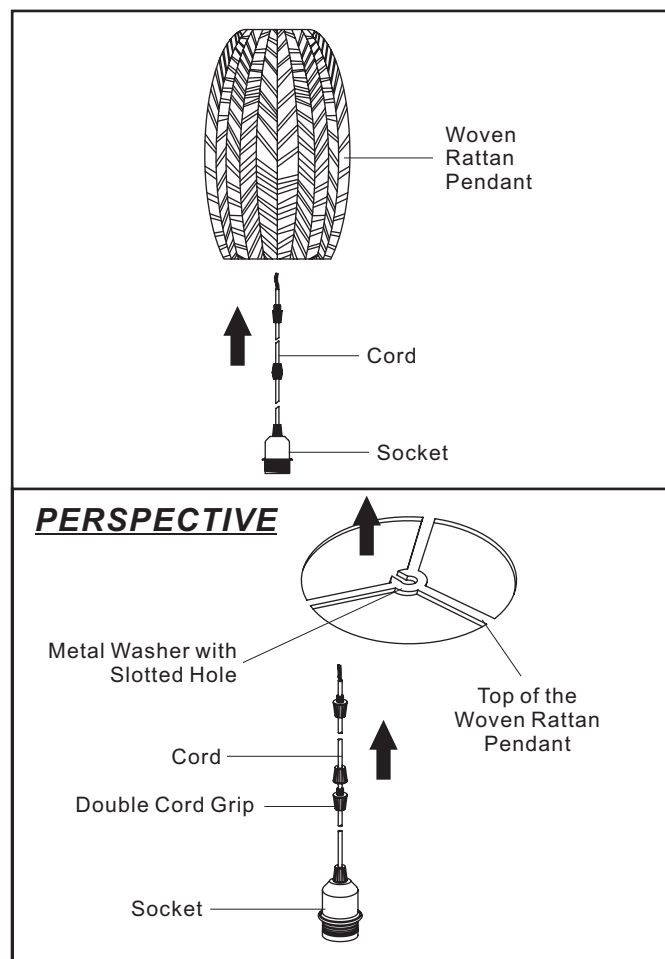


STEP 3:

- a. Place the Cord Grip at the top end of the Cord back through the Ceiling Canopy and Lock Washer as shown. Secure by threading the Hex Nut back onto the Cord Grip. Tighten until snug.

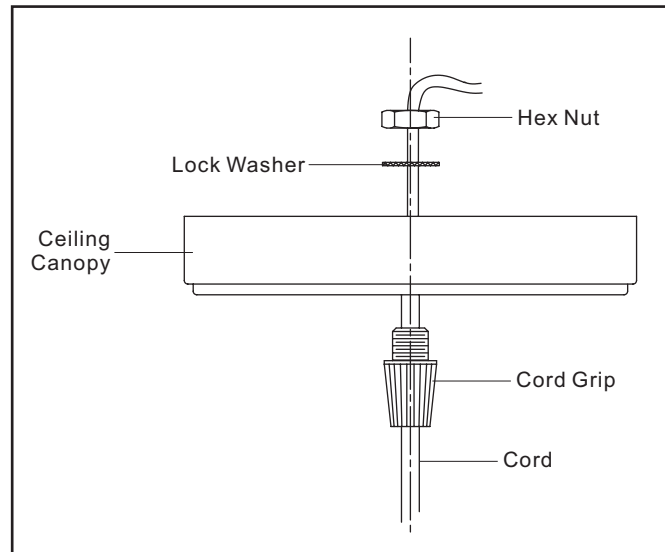


STEP 4:

- a. Place the Paper Shade inside of the Woven Rattan Pendant, over the Socket. Secure by threading the Retainer Ring onto the Socket. Hand-tighten until snug.

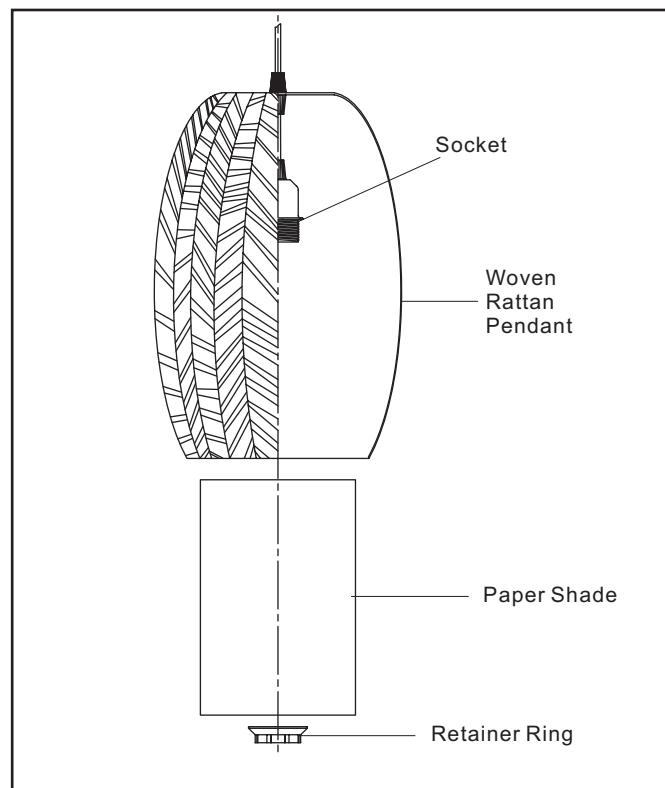

STEP 5:


- Screw the Mounting Screws into the Crossbar, place the Lock Washers over the Mounting Screws and thread the Hex Nuts onto the Mounting Screws as shown. Secure the position of the Mounting Screws by tightening the Hex Nuts against the Crossbar.
- Secure the Crossbar to the Outlet Box with Outlet Box Screws.

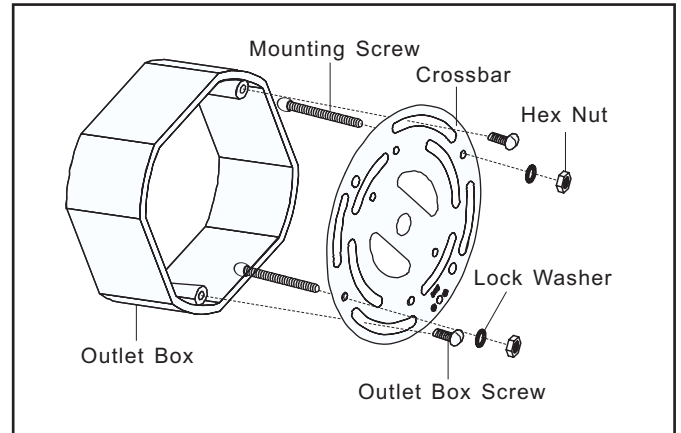

STEP 6:


- ★ Use Wire Connectors (not supplied) to connect the wires.

 - Connect the House Ground Wire to the Fixture Ground Wire.
 - Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

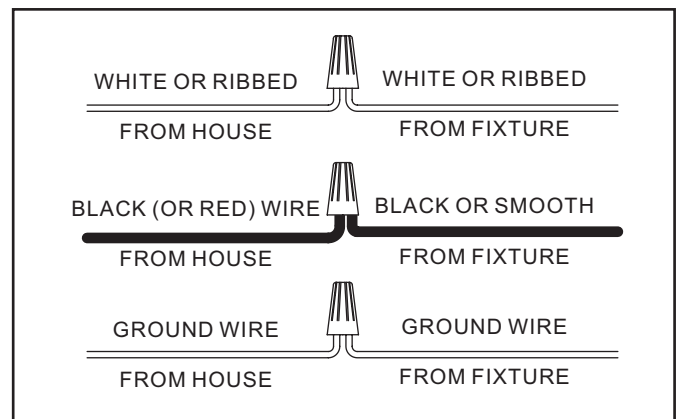

STEP 7:

- Pull the Cord through the Strain Relief as the narrow direction in the diagram.
- Place the Ceiling Canopy over the Mounting Screws and secure with Mounting Balls. Hand-tighten until snug.

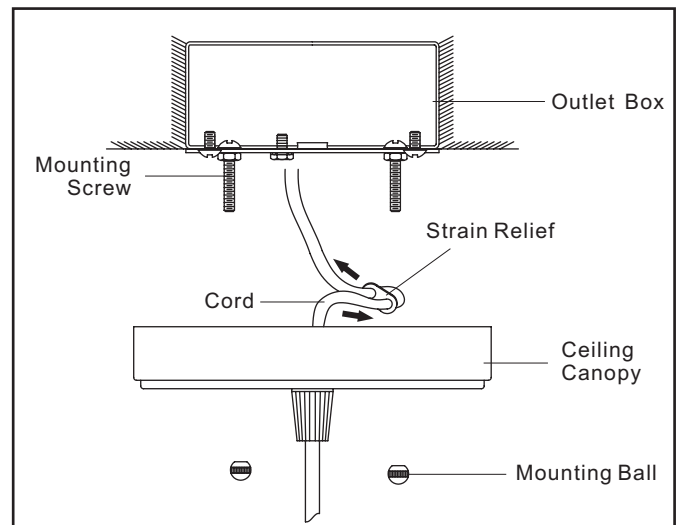

STEP 8:

- Install the correct bulb referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.