

# INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

## CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL.

IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF, NEXT, TURN THE WALL SWITCH OFF, FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPE OF FUSE MUST BE UNSCREWED TO SHUT OFF THE POWER

ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

1. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX.
2. ATTACH THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE WIRE CONNECTORS. ATTACH THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER, ATTACH THE FIXTURE AND SUPPLY GROUND WIRE ONTO THE CROSSBAR USING THE GROUND SCREW.
3. RAISE THE CANOPY TO THE OUTLET BOX AND SECURE IT BY FINIAL.
4. INSTALL THE HANGING ROD, ONE END SCREW TO THE CANOPY AND THE OTHER END SCREW TO THE SOCKET. (YOU CAN CHOOSE THE LENGTH OF THE ROD)
5. INSTALL THE SHADE ONTO THE SOCKET AS BELOW FIGURE, AND THEN INSERT THE BULB.

