

General

Assembling the Fixture

Carefully remove the fixture from the carton, and check that all parts are included, as shown in figure. Be careful not to misplace any of the screws or parts which are needed for installing the fixture.

- 1 Position backplate on wall. Align slotted hole in backplate to threaded holes in Outlet Box. Attach with two screws (Screws not Provided).
- 2 Secure backplate to the wall through the key hole each end.
- 3 If the GREEN GROUNDING SCREW is supplied with a WASHER. Slip the WASHER over the GREEN GROUNDING SCREW. With the cupped side of the WASHER facing the head of the SCREW. Screw into the small threaded hole in the backplate. Do not tighten.

Connecting the Wires

Connecting the wires to the connectors is shown in figure 2

- 1 If your OUTLET BOX is provided with a GROUNDING WIRE (GREEN or BARE COPPER only), attach it to the GREEN GROUNDING SCREW by wrapping it around the SCREW between the WASHER and the HEAD of the SCREW. Tighten the SCREW.

Warning: Do not attach any other wires to this screw

- 2 Place the white wires from the fixture evenly against the white wire from the Outlet Box, and then twist together the bare parts of the wires.
- 3 Fit the connector over the twisted wires and screw the connector in place until you feel a firmness.
- 4 Try gently to pull the connector off the wires. If you can pull the connector off, carefully redo steps 1 and 2 above, and check again for a firm connection.
- 5 Connect the black wires in the same manner.
- 6 After the wires are connected, tuck them carefully inside the Outlet Box.
- 7 Assemble front assembly to backplate with thumb screws Provided.

Installation Instructions AC5751, 52, 53, 54-Aspen

Warning

Be sure the electricity to the wires you are working on is shut off—either the Fuse removed or the Circuit Breaker set at Off.

