


# ASSEMBLY INSTRUCTIONS

ITEM NO : BO-218-AB/BS/RU/DB

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW TUBE ( F ) ONTO SOCKET PART ( G ), THEN PUT WASHER ( E ), BASE ( D ), WASHER ( C ) AND ( B ) THROUGH THE BOTTOM OF TUBE ( F ) AND TIGHTEN IT BY NUT ( A ) WITH THE WRENCH ( J ).
3. INSERT THE HARP ( H ) INTO THE SADDLE OF THE SOCKET PART ( G ).
4. PUT THE SHADE ( NOT INCLUDED ) ONTO THE HARP ( H ) AND SCREW THE FINIAL ( I ) TIGHTLY.
5. INSERT THE POLARIZED PLUG ONTO OUTLET, TURN ON THE SWITCH AND ENJOY YOUR LAMP.

WATTAGE : 3-WAY 150W TYPE A ( BULB NOT INCLUDED )

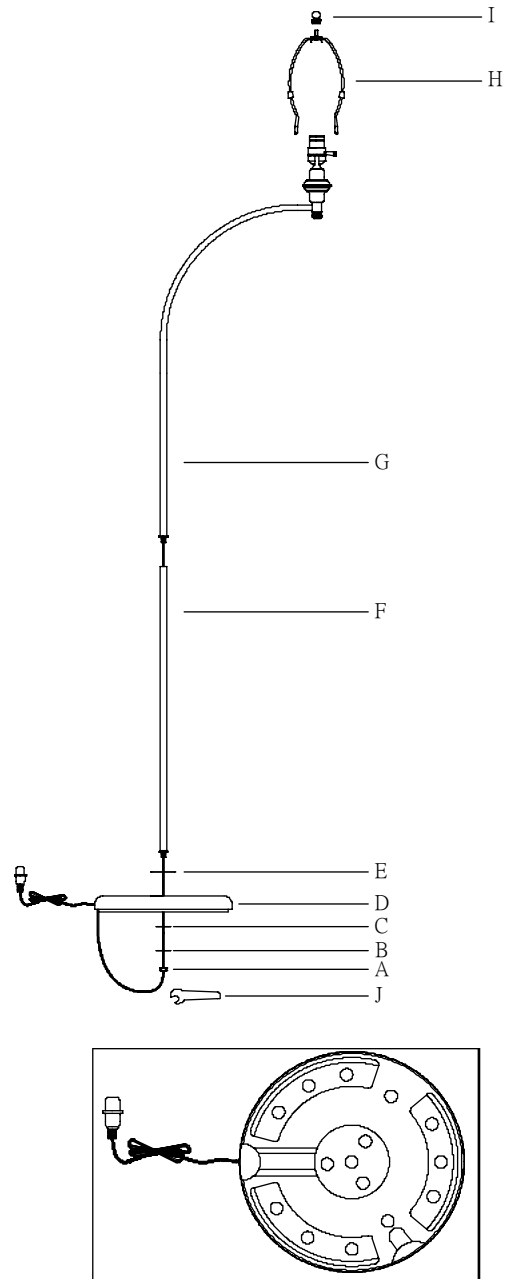

## IMPORTANT SAFETY INSTRUCTIONS :

THIS PORTABLE LAMP HAS A POLARIZED PLUG ( ONE BLADE IS WIDER THAN THE OTHER ) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE