


ASSEMBLY INSTRUCTIONS:

ITEM NO:BO-2443SWTB

1. Carefully unpack and lay out the parts as shown in illustration.
2. Screw the socket section (B) into the base section(A) ,pull the cord from base.
3. Insert the harp(C) into the saddle of socket section(B).
4. Place the shade(D) on harp(C), and tightening it by finial (E),then adjust the shade in balance.

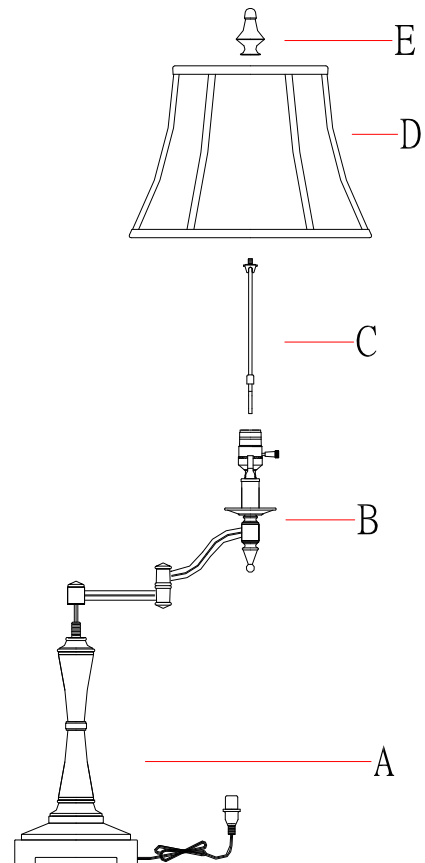

Your lamp now is ready to enjoy

**Use 150 Wattage (Maximum)
Type A bulb (Bulb not included)
3-Way rotary socket switch**

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

328197B