## **ASSEMBLY INSTRUCTIONS:**

## **ITEM NO: BO-2472TB**

- 1. Carefully unpack the carton and then lay out all the parts on the flat surface.
- 2. Screw Tube Section (B) into the Base(A). Loose Nut(C), then adjust the Up And Down Tube(D) to the right height, then tighten Nut(C). If difficult to adjust the Up And Down Tube(D) to down, please pull the cord from the base first, then adjust it.
- 3. Screw Harp(E) into saddle of the Up And Down Tube(D).
- 4. Put Shade(F) on Harp(E), then tighten it by Finial(G) and make the shade keep horizontal.

Your lamp now is ready to enjoy

E D C C B

Use 3-WAY 150 Wattage (Maximum)
Type A bulb (Bulb not included)

## **IMPORTANT SAFETY INSTRUCTIONS:**

THIS TABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.