


ASSEMBLY INSTRUCTIONS

ITEM NO:

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1.SCREW SOCKET ASSEMBLY (D) CLOCKWISE INTO POLE (E) TO TIGHTTEN.
- 2.SCREW POLE (E) CLOCKWISE INTO POLE (F) TO TIGHTTEN.
- 3.SCREW POLE (F) CLOCKWISE ONTO BASE (G) TO TIGHTTEN.
GET THE REMAINING SLACK OF THE POWER CORD OUT FORM BASE HOLD.
- 4.INSERT HARP (C) TO THE SADDLE (D).
- 5.PLACE SHADE (B) ONTO HARP (C) BY FINAL (A) CLOCKWISE TO TIGHTTEN .
- 6.INSTALL BULB (NOT INCLUDED) INTO THE SOCKET .
- 7.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

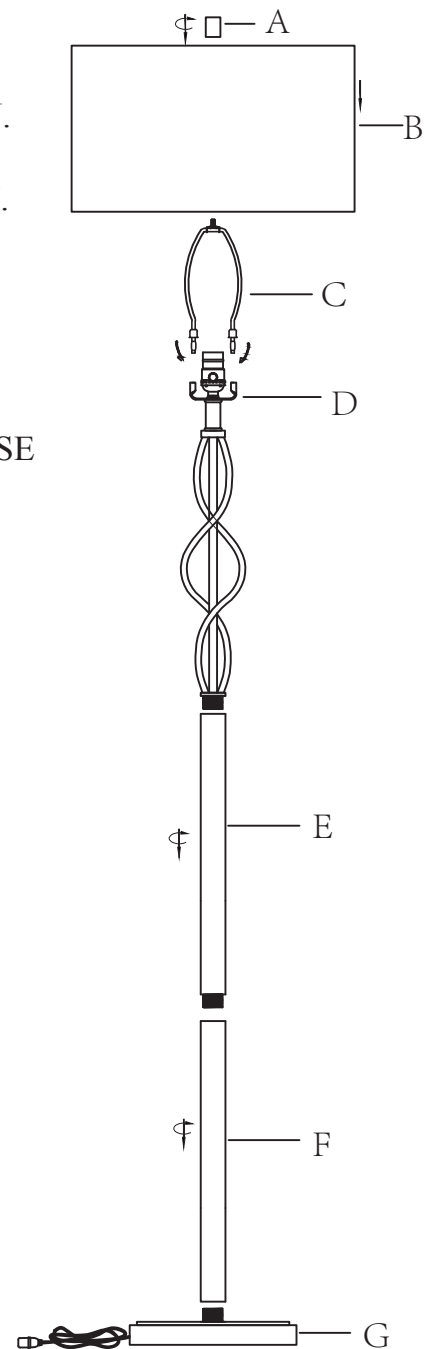

Use MAX 3-way 150 Wattage type A bulb (bulb not included)

IMPORTANT SAFETY INSTRUCTIONS:

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.