
ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2867TB

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1. INSERT HARP (1) TO THE BRACKET OF THE SOCKET.
- 2. PUT SHADE (2) ON HARP (1) AND TIGHTEN BY FINIAL (3).
- 3 INSTALL RECOMMENDED BULB (NOT INCLUDED IN THIS PACKING) (4).

INSERT PLUG INTO AN OUTLET AND ENJOY YOUR LAMP!!

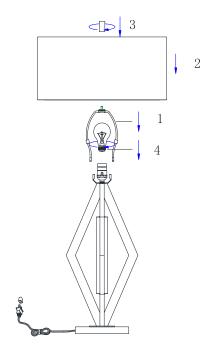

Use 3-WAY Max 150W type A bulb (bulb not included)

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.