

IMPORTANT

IMPORTANT! PLEASE READ:

All Craftmade lighting fixtures are prepared with a durable lacquer finish or a powder-coated/painted finish. Your proper care of lighting fixtures (see below) will enhance both the life and appearance of the lighting fixtures. Post treatments, such as clear lacquer, are not recommended.

PROPER CARE

In order to maximize the appearance of a Craftmade brass lighting fixture, it is important that dust and debris is removed from the surface of the lighting fixture periodically. It is recommended that the lighting fixtures be wiped down weekly using a soft, dry or damp cloth.

DO NOT use any abrasives such as car wax, brass cleaners or other polishes, glass cleaners or chemicals, as this will scratch/remove/damage the protective coating, allowing moisture and pollutants to come in contact with the brass, which will result in discoloration and pitting.

ALL Craftmade cast aluminum lighting fixtures receive a durable powder coat finish, which enhances the durability of the lighting fixture. This finish should also be wiped down weekly with a soft, dry or damp cloth to remove the dust and debris that will accumulate on the surface. DO NOT use any abrasives such as car wax, brass cleaners or other polishes, glass cleaners or chemicals as this may damage the finish.

FAILURE TO FOLLOW THE ABOVE CARE INSTRUCTIONS WILL VOID THE WARRANTY OF THE LIGHTING FIXTURE.

For information regarding replacement parts, please write to:
Craftmade, P.O. Box 1037, Coppell, TX 75019

Please send the following information...

1. The Model Number and Finish – Polished, Antique, White, etc.
2. The name of the part – if you have a parts problem.
3. Your name, mailing address and phone number (with area code).

LIMITED WARRANTY

Craftmade warrants against defects in materials or workmanship for a period of ONE (1) YEAR from date of purchase for use, and agrees to repair or, at our option, replace a defective unit without charge. Brass finish is covered 90 days from purchase date.

IMPORTANT: This Warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care (see above), the affixing of any attachment not provided with the product, alteration of any attachments factory installed, loss of parts or subjecting the fixture to any but the specified electrical service. This warranty does not cover failure of bulbs due to accidents, abuse, misuse, vandalism, power surges, and acts of nature such as lightning damage or any bulbs purchased separately and installed by the consumer or any damage to the fixture caused by a separately purchased bulb.

No responsibility is assumed for any special incidental or consequential damages. Damages occurring during transit are not covered by this warranty.

To obtain warranty service, mail sales receipt as proof of purchase-date, and a brief explanation of the nature of the defect, to P.O. Box 1037, Coppell, TX 75019. You will receive, by mail, a Return Goods Authorization number issued by Craftmade, and returned freight prepaid.


For Installation or Technical Support, call 1-800-486-4892, 8 a.m. - 5 p.m., Central Time, Monday-Friday.

CRAFTMADE
air • light • sound

Ceiling Mount Installation Guide

Models:

9124PR3, 9127PR5, 9128PR5, 9138PR8,
9138PR10, 9107PR1, 9112PR1, 9152PR20
and 9144PR3

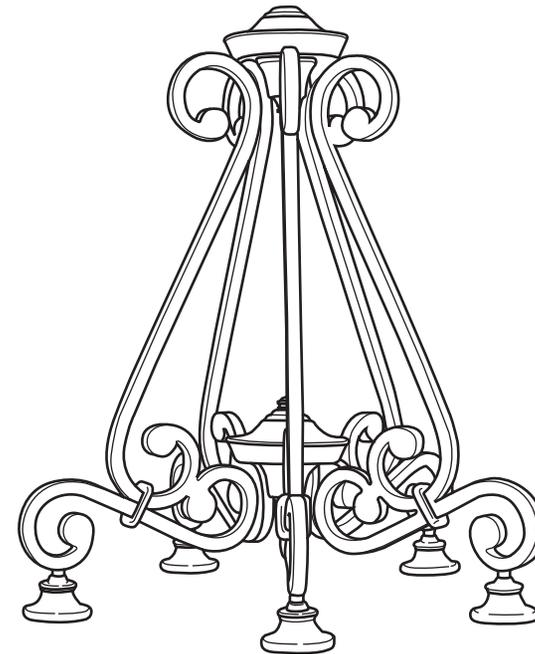

CAUTION

Disconnect Power

Always shut off power at the circuit breaker or disconnect fuse when installing or repairing this, or any other electric appliance.

FAILURE TO
DO SO MAY
RESULT IN
SEVERE
INJURY
OR DEATH.



1


Prepare Ceiling Outlet

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES.

IMPORTANT: YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE


NOTE: For lighting fixtures over 50 lbs (25 lbs. in Canada), the mounting bar must be supported independently of the ceiling junction box. Please consult a qualified electrician.

- a. Prepare outlet box by pulling black, white and ground wires out of electrical outlet box (see figure 1a).
- b. Prepare fixture by assembling Ceiling Mount Assembly and Column Assembly (as shown in Figure 1b on next page). Make sure to weave fixture and ground wires through chain as shown in diagram on next page. Next, connect Ceiling Mount Assembly and Column Assembly by opening chain link, attaching fixture chain to top and bottom collar loops. Be sure to close chain link completely before hanging fixture (see figure 1b on next page).

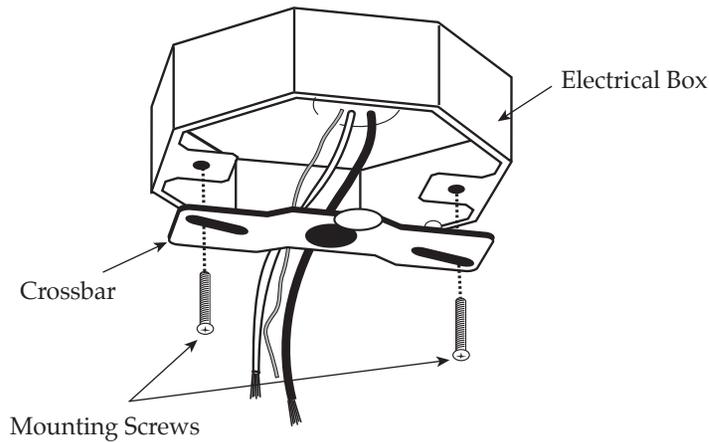**2**

Prepare Ceiling Outlet (Cont'd)

Figure 1b

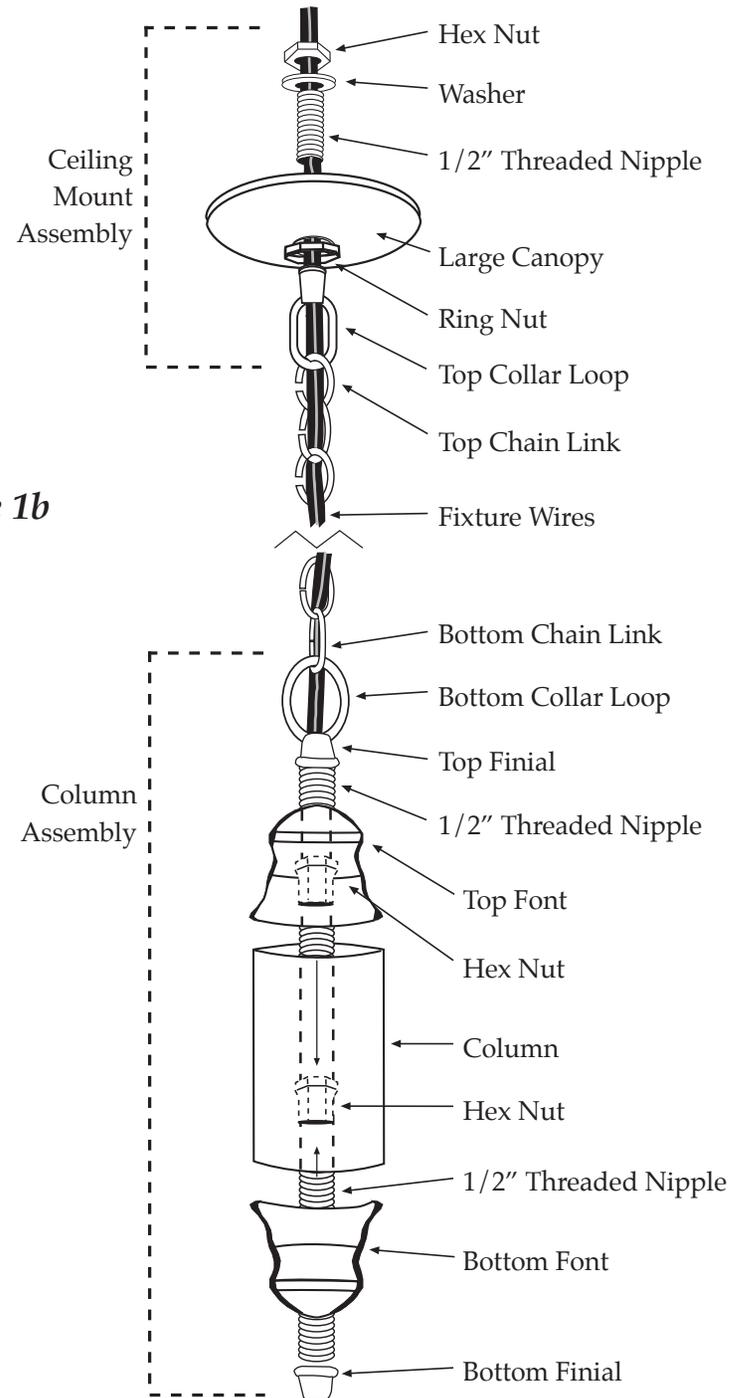

Installation and Wiring

Installation (see Fig.A)

- a. Disconnect power at main electrical panel before installation.
- b. Attach mounting strap to outlet box using box screws provided with outlet box.
- c. Screw threaded nipple into collar loop as far as it will go. Secure with lock washer and hexnut.
- d. Screw threaded nipple into mounting strap approximately 1/2 inch. Adjust height of collar loop by temporarily holding canopy in place against ceiling with collar loop extending downward through hole in canopy.
- e. Use pliers to open one end link of the chain and attach to loop on fixture. Close link. Thread fixture wire through chainlinks, weaving wire through every second link.
- f. Pull ends of chain and wires through collar ring and canopy.
- g. Use pliers to open the other end link of chain and attach to collar loop. Close link.
- h. Pass ends of fixture wires through center hole of collar loop, threaded nipple and mounting strap.

Wiring (see Fig.B)

- i. Split the conductors of the fixture wire about 4 inches. Being careful not to expose any of the wire inside of the insulation.
- j. Connect the fixture ground wire to the outlet box ground wire using wirenut (not provided). Connect outlet box ground wire to mounting strap with Green hex-head ground screw to tapped hole in mounting strap marked "GND".
- k. Connect the half of the fixture wire that is white, marked or has a ribbed surface to the outlet box supply wire (WHITE). Connect the other half of the fixture wire that is black, unmarked, or has a smooth surface to the outlet box supply wire (BLACK or RED). Use wirenuts provided.
- l. Spread the electrical splices so that the black wire is on one side of the outlet box and the white wire is on the other side.
- m. Slide canopy up into place against ceiling. Slide collar ring up and thread onto collar loop to secure canopy in place.

NOTE: Make sure chain supports the weight of the light fixture and no weight is on either supply or ground wires.

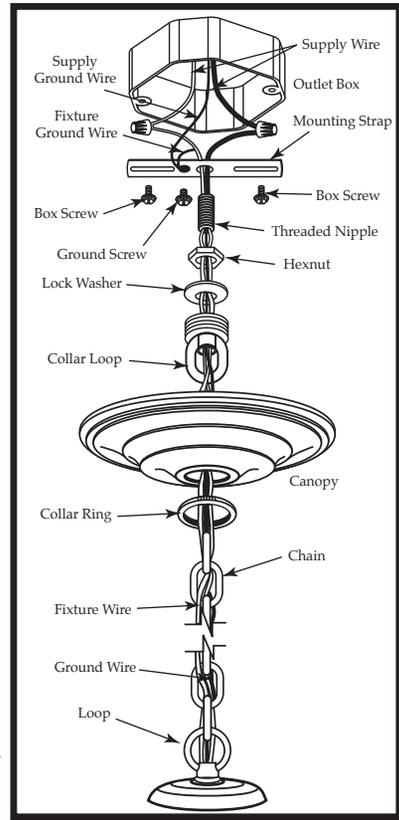


Fig. A

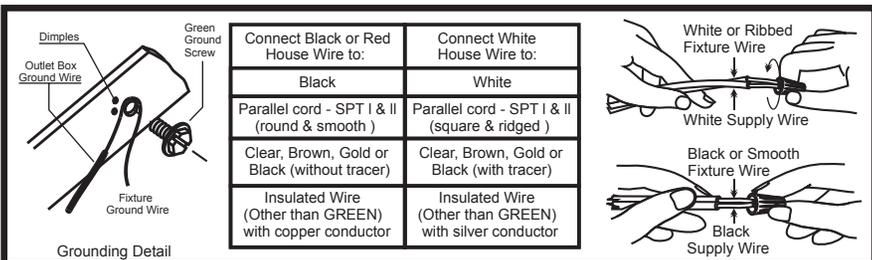


Fig. B

Installation for the 9138PR8 Chandeliers

- a. Disconnect power at main electrical panel before installation.
- b. Attach mounting strap to outlet box using box screws provided with outlet box.
- c. Screw threaded nipple into mounting strap approximately 1/2".
- d. Follow wiring instructions carefully (listed in Step 3, ignoring Step m).
- e. Position canopy, allowing the threaded pipe to pass through the hole in the wall plate. Secure wall plate by threading the finial onto the exposed threads of the threaded nipple.


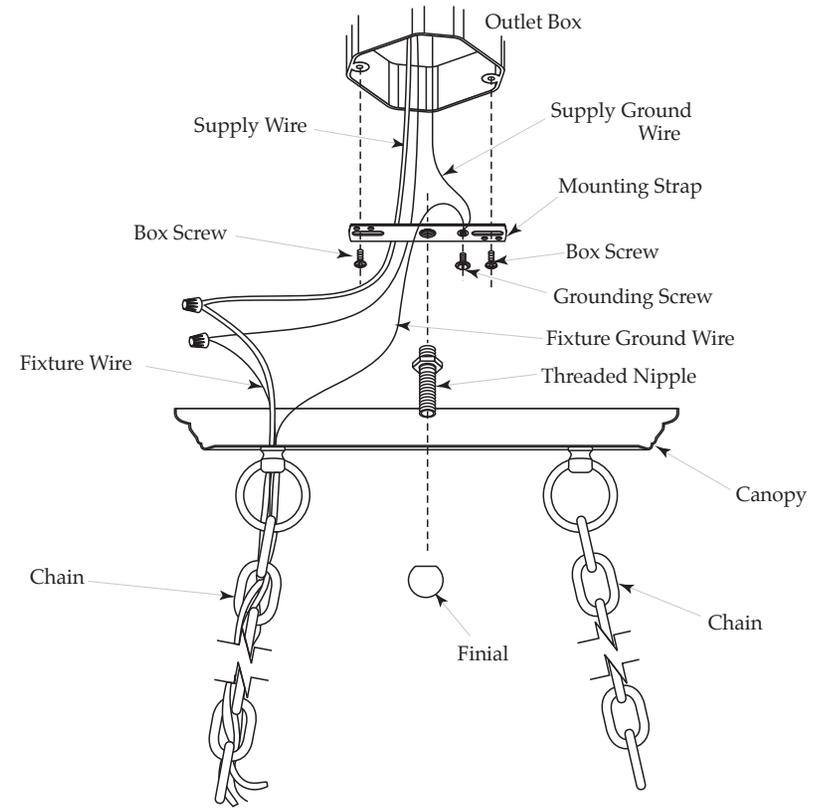


Fig. A

5

Prepare 9128PR5 Chandelier


- The chandeliers come folded in the box. Remove the chandelier and unfold it, spacing the arms an equidistance apart.
- Attach the nipple to the coupling and make sure part of nipple is threaded into coupling.
- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

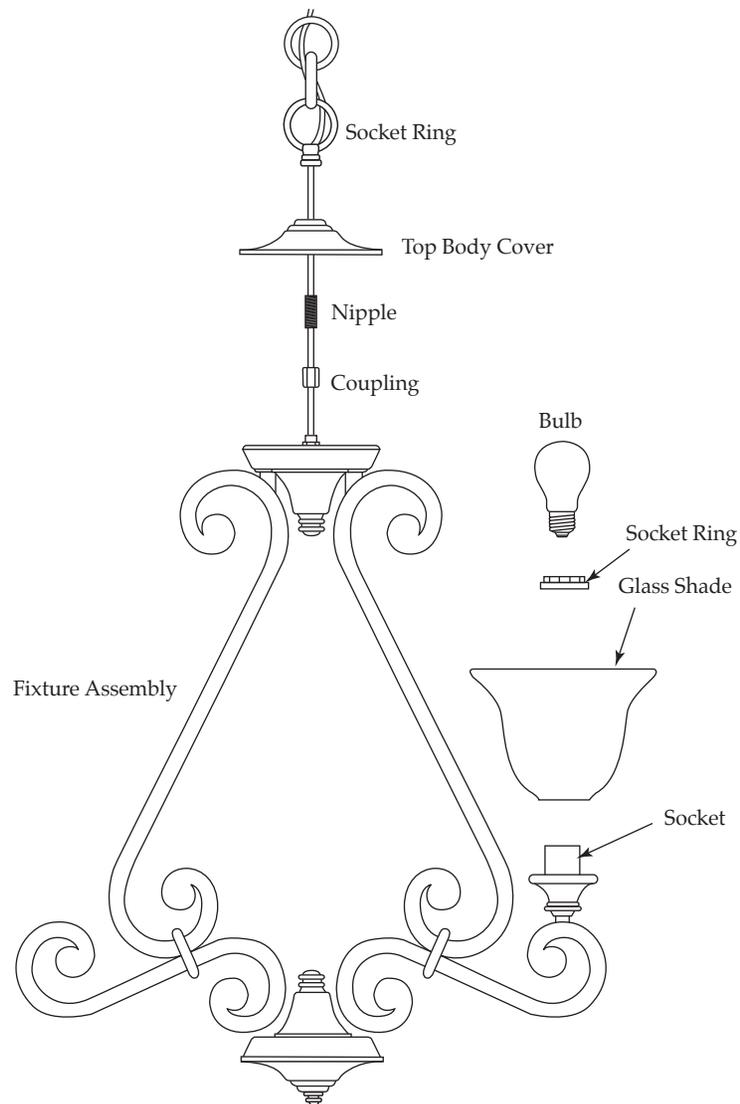

6

Prepare 9124PR3 Chandelier


- The chandeliers come folded in the box. Remove the chandelier and unfold it, spacing the arms an equidistance apart.
- Attach the nipple to the coupling and make sure part of nipple is threaded into coupling.
- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

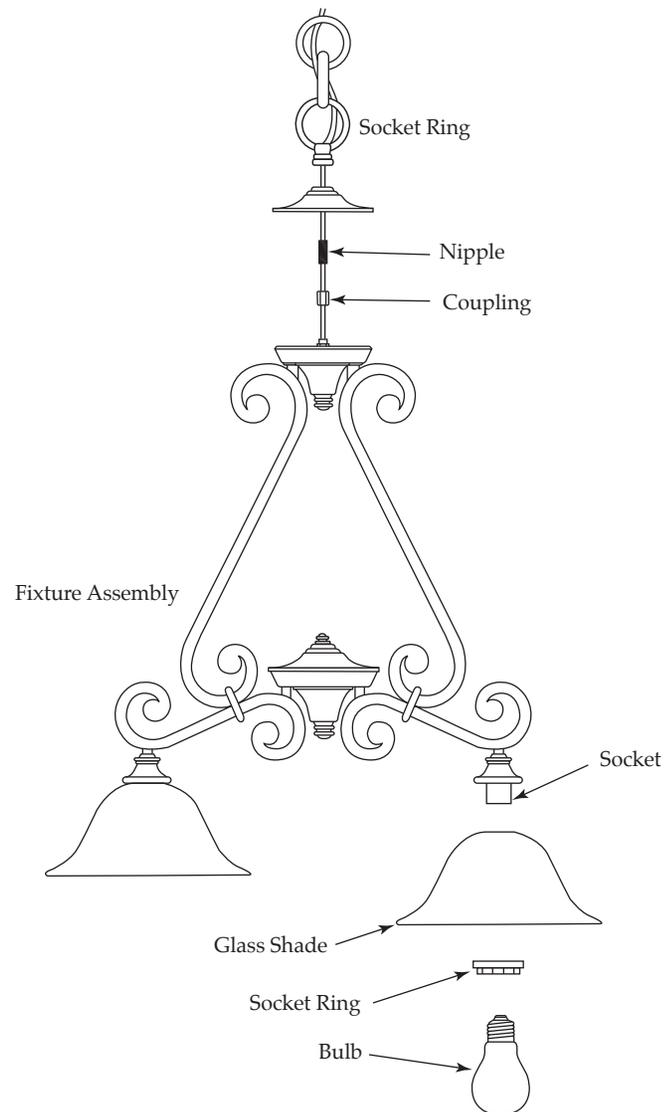

7

Prepare 9152PR20 Chandelier


- The chandeliers come folded in the box. Remove the chandelier and unfold it, spacing the arms with the top font as seen below.
- Attach the nipple to the coupling and make sure part of nipple is threaded into coupling.
- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

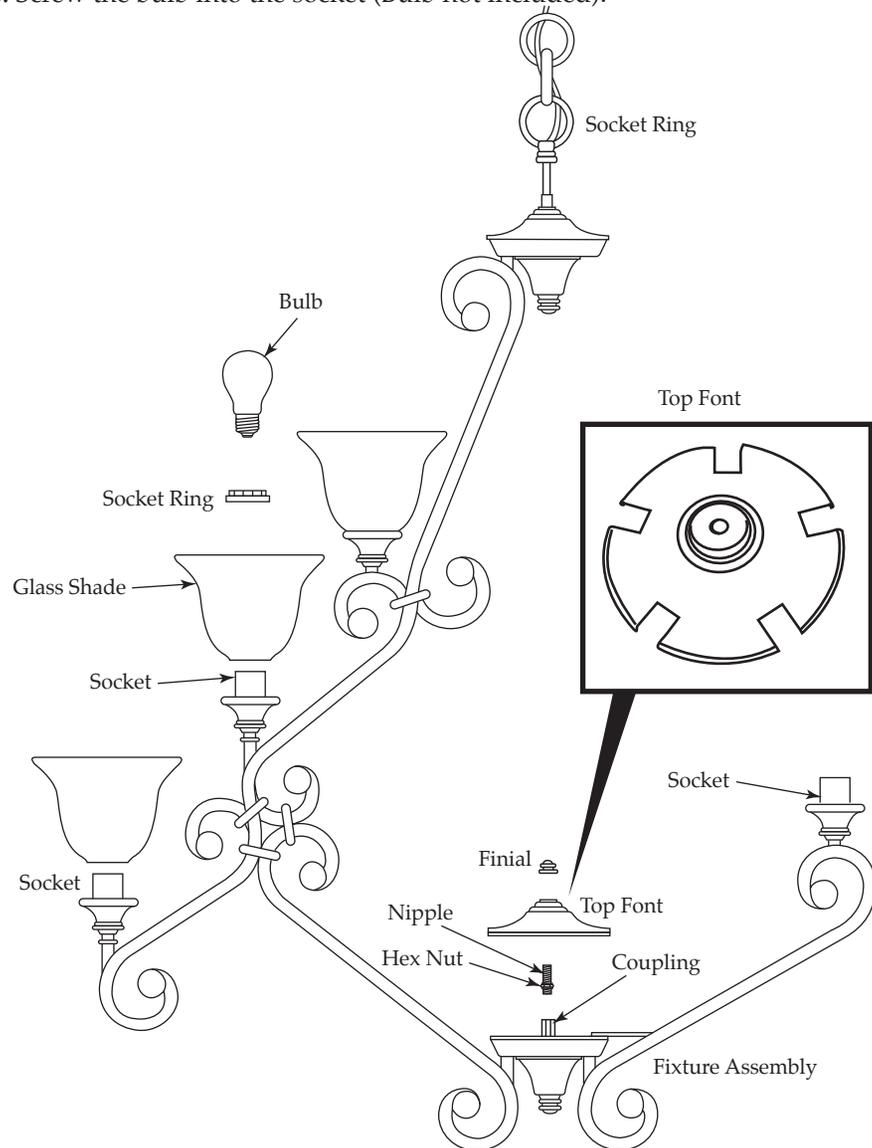

8

Prepare 9138PR10 Chandelier


- The chandeliers come folded in the box. Remove the chandelier and unfold it, spacing the arms an equidistance apart.
- Attach the nipple to the coupling and make sure part of nipple is threaded into coupling.
- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

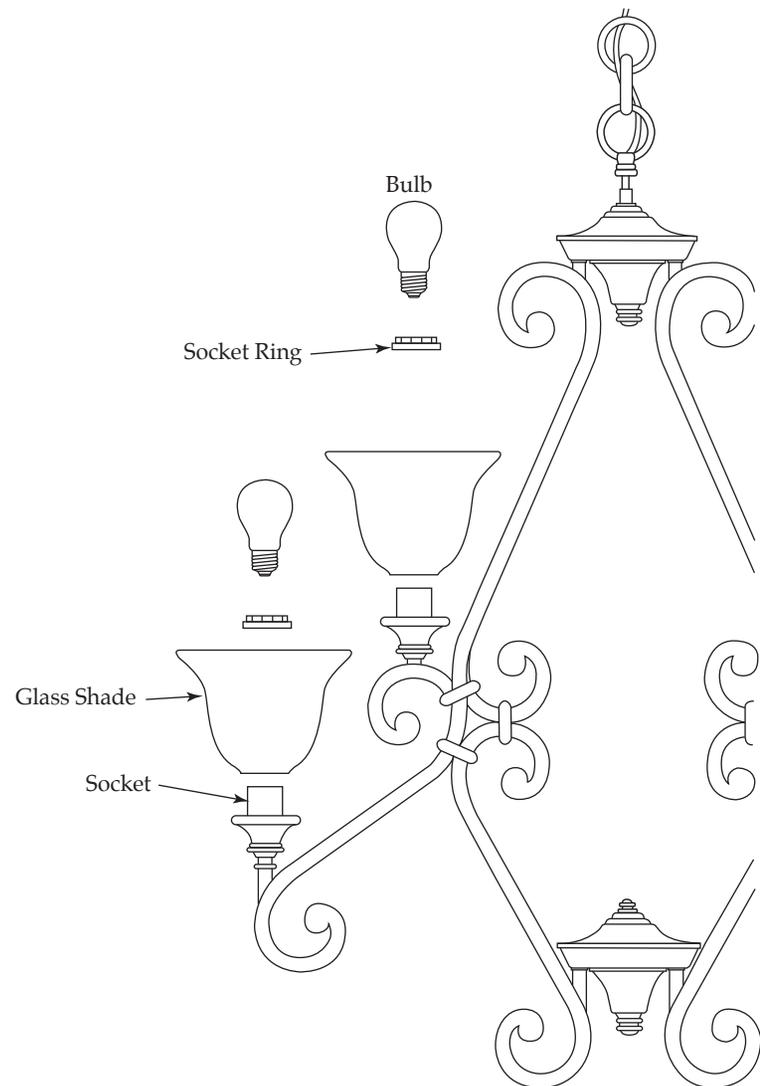

9


Prepare 9127PR5 Chandelier

- The chandeliers come folded in the box. Remove the chandelier and unfold it, spacing the arms with the top front as seen below.
- Attach the nipple to the coupling and make sure part of nipple is threaded into coupling.
- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

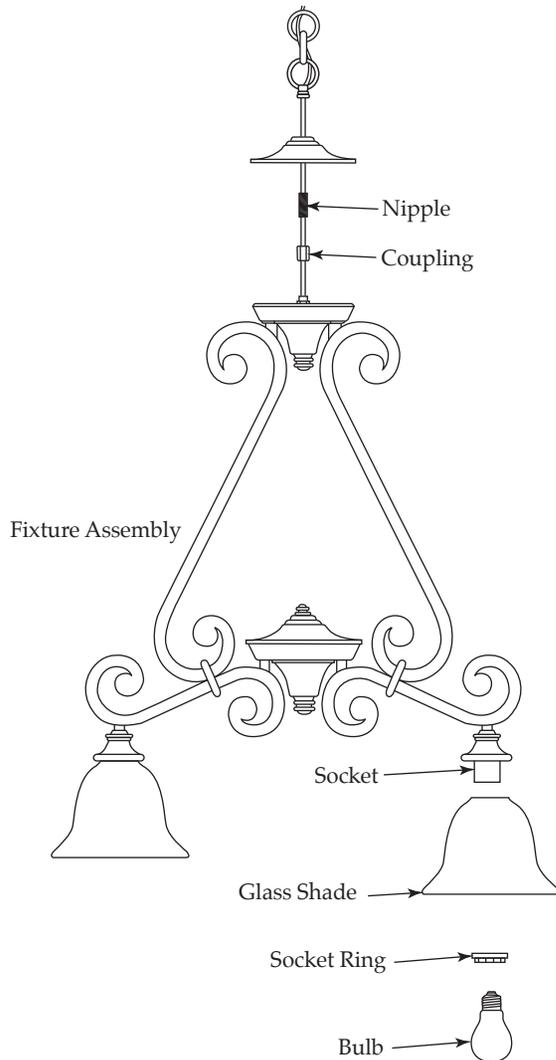**10**


Prepare 9138PR3 Chandelier

- Slide the glass over the socket until flush with pan.
- Secure glass bowl by screwing socket ring on to socket, tightly.
- Screw the bulb into the socket (Bulb not included).

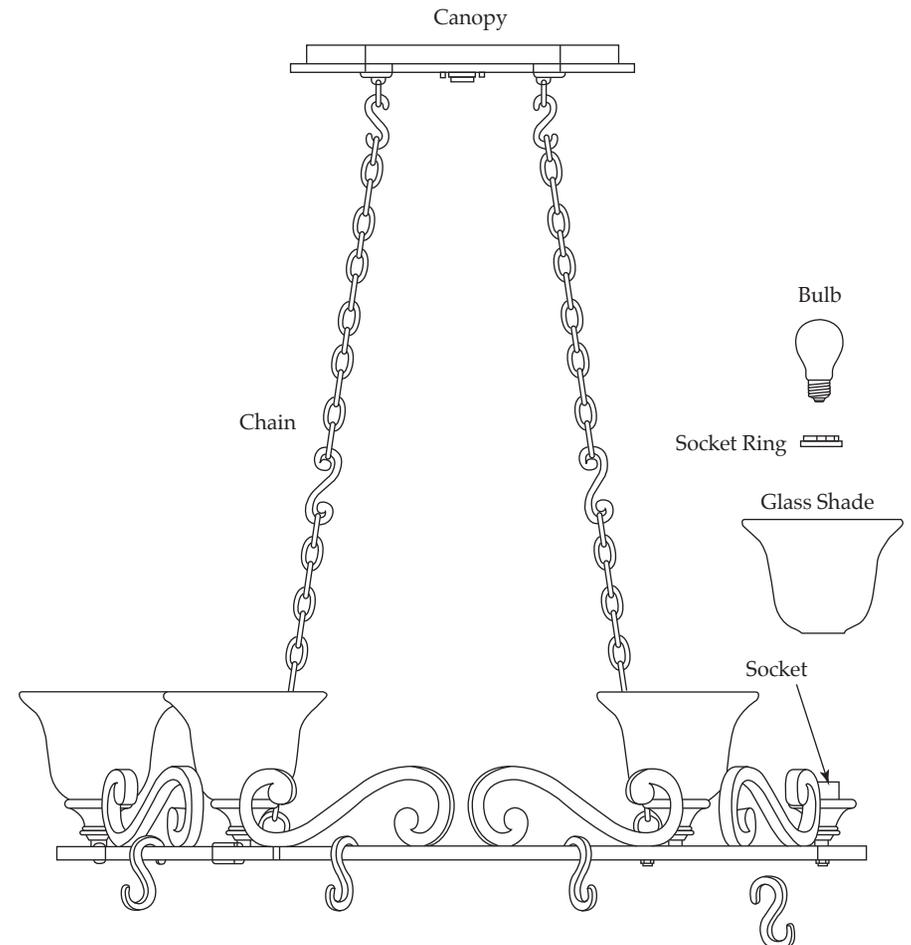

11*Prepare 9144PR3 Chandelier*

- a. Slide the glass over the socket until flush with pan.
- b. Secure glass bowl by screwing socket ring on to socket, tightly.
- c. Screw the bulb into the socket (Bulb not included).

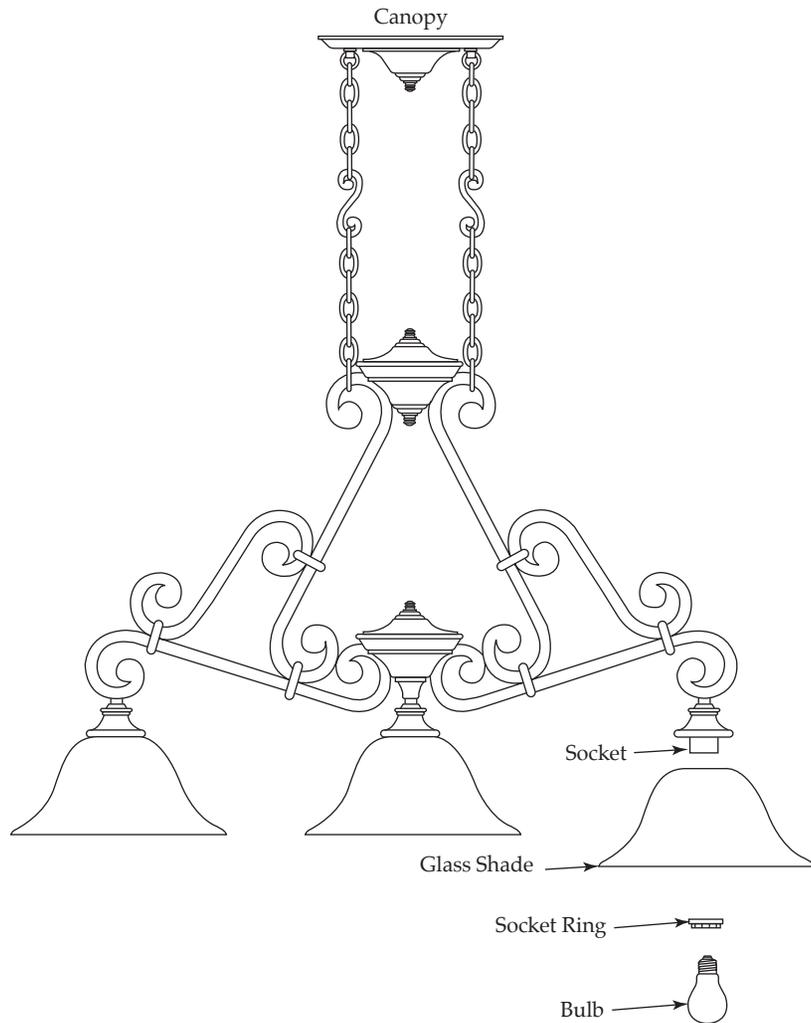**12***Prepare 9107PR1 and 9112PR1*

- a. Slide the glass over the socket until flush with pan.
- b. Secure glass bowl by screwing socket ring on to socket, tightly.
- c. Screw the bulb into the socket (Bulb not included).

