




READ AND SAVE THESE INSTRUCTIONS

30° SLOPE CEILING ADAPTER

370033




This carton contains the following parts. Please make sure you have everything.

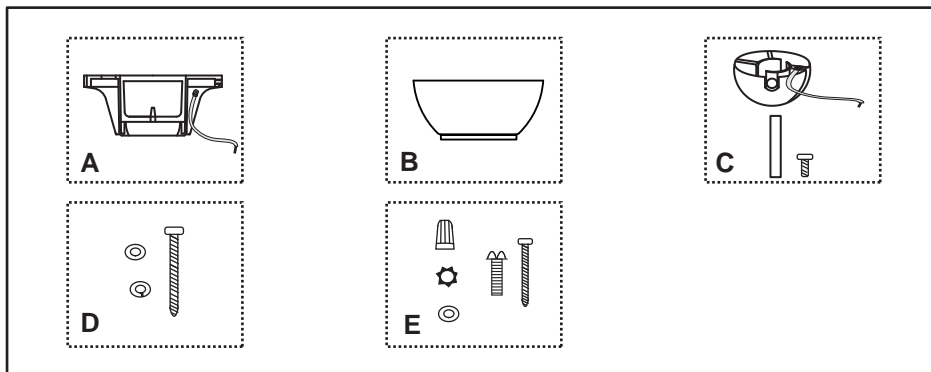

- A. Hanger bracket (located inside canopy)..... (1 PCs.)
- B. Canopy and decorative canopy bottom cover..... (1 PCs.)
- C. Hanger ball W/cross pin and set screw..... (1 PCs.)
- D. #10 X 1.5" Wood screws..... (1 PCs.)
- Spring washer..... (2 PCs.)
- Lock washers..... (2 PCs.)
- E. #8-32W X 3/4" Mounting screws..... (2 PCs.)
- 4mm Star washers..... (2 PCs.)
- #8-32W X 1.5" Wood screws..... (2 PCs.)
- Washers..... (2 PCs.)
- Wire nuts..... (3 PCs.)

TOOLS AND MATERIALS REQUIRED

- Philips screw driver
- Blade screw driver
- 11 mm wrench
- Step ladder
- Wire cutters

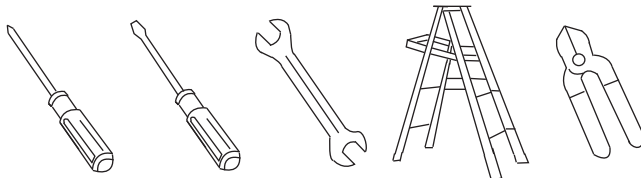

MOUNTING OPTIONS

Make sure the outlet box you've selected for mounting your ceiling fan is UL listed and rated for ceiling fan use.

NOTE: Make sure the electrical power is turned off before starting. Disconnect at the main circuit box.

It's very important that the outlet box is securely installed and will not move or your ceiling fan will wobble after installation.

If you need to install a new outlet box, secure it directly to the building structure using appropriate fasteners and building materials.

The outlet box and its support must be able to fully support the moving weight of the fan (at least 50 lbs.). Do not use plastic outlet boxes.

Figures 1, 2, 3 and 4 at the right are examples of different outlet boxes and mounting methods.

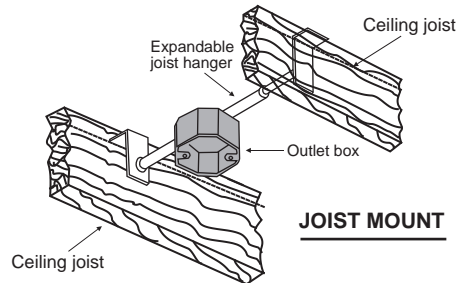


Fig. 1

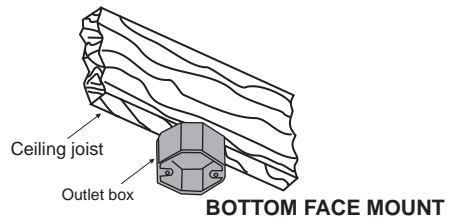


Fig. 2

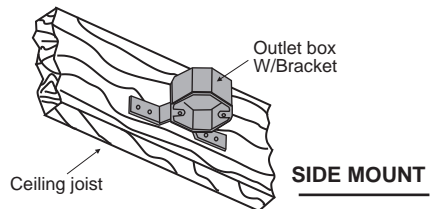


Fig. 3

ANGLED CEILING MAXIMUM 30° ANGLE

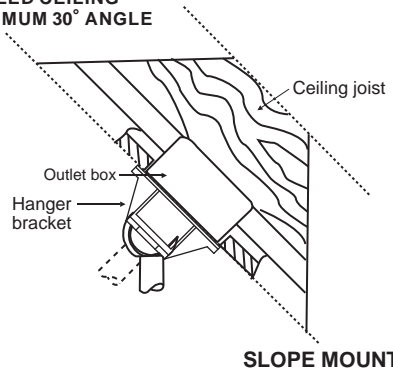


Fig. 4

PRE-INSTALLATION

Step 1. Remove the decorative canopy bottom cover from the canopy by turning the cover counter clockwise. (Fig. 5)

Step 2. Remove the hanger bracket from the canopy by removing (and save) one of the two screws. Loosen the remaining screw by a half turn. (Fig. 5)

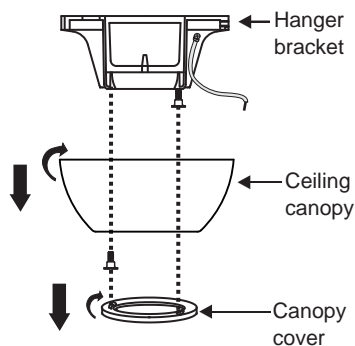


Fig. 5

A. INSTALLING THE HANGER BRACKET TO A OUTLET BOX (MOUNTED DIRECTLY TO A CEILING JOIST)

1. Remove two knock-outs from the outlet box to expose the joist. (Fig. 6)
2. Use the two #10 X 1.5" wood screws and washers to secure the hanger bracket directly to the building joist via the knockout holes from the outlet box. (Fig. 7)
3. Use the hanger bracket as a guide to mark the hole position in the joist.
4. Predrill the holes using a 5/32" drill bit

B. INSTALLING THE HANGER BRACKET DIRECTLY TO AN OUTLET BOX

Use the two #8-32W X 3/4" screws and washers to secure the mounting plate directly to the outlet box. (Fig. 8)

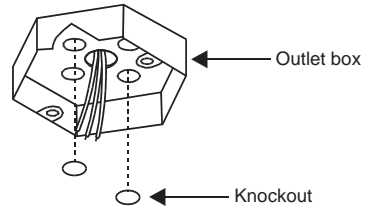


Fig. 6

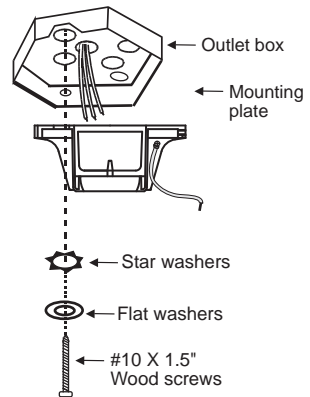


Fig. 7

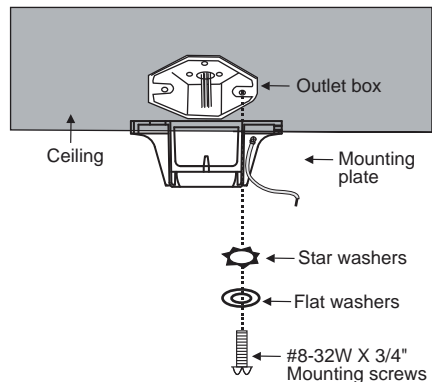


Fig. 8

ASSEMBLY

Step 1. Remove the hanger ball from the downrod assembly by loosening the set screw, removing the cross pin and sliding the ball off the rod. (Fig.9)

Step 2. Loosen the two set screws and remove the hitch pin and retaining clip from the coupling on top of the motor assembly. (Fig. 9)

FINISHING THE INSTALLATION

1. Now lift the motor assembly into position with the hanger ball in the position (shown in Fig. 10).

2. Now, rotate the "entire fan and slope adaptor assembly" (left or right) by rotating the hanger bracket until the downrod and the ceiling fan assembly are hanging straight down and the entire assembly "swings" freely in the exact direction of the ceiling slope. (Fig. 10)

3. Make all necessary electrical connections by referring to your ceiling fan installation manual.

4. Slide the canopy up to the ceiling and place the mounting screws through the key holes in the face of the canopy. Rotate canopy clockwise. (Fig. 10)

Next, while holding the canopy with one hand, slide the mounting screw cover onto the heads of the mounting screws and rotate clockwise until tight.

If necessary, adjust the canopy screws until the canopy and mounting screw cover are snug.

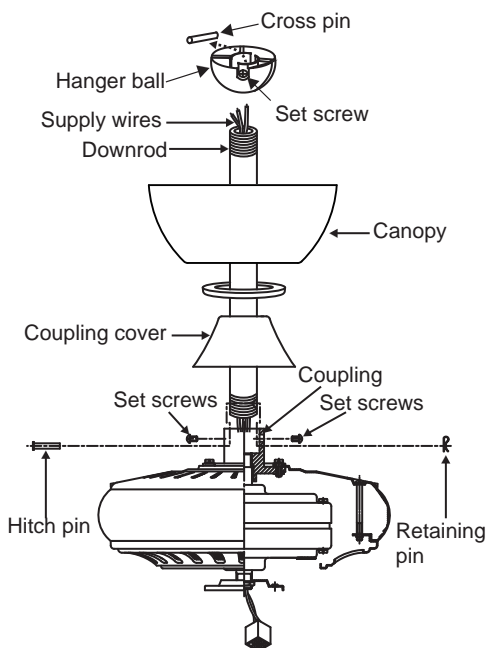


Fig. 9

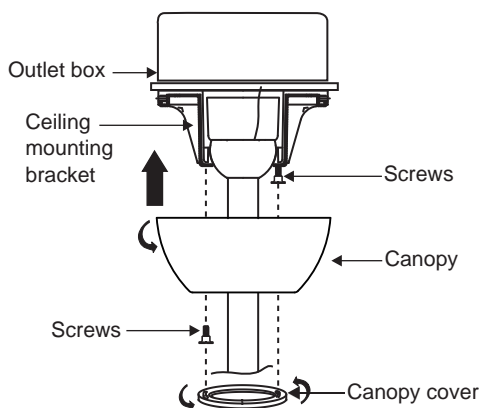


Fig. 10