ASSEMBLING & INSTALLATION INSTRUCTIONS PRODUCT#8633-64

For Outdoor Wall Mount Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

Installation (see fig.1)

- 1. Disconnect power at main electrical panel before installation.
- Mount the back plate to the wall with the plastic anchors ,the wood screw
 (H) and the two box screw (I). The side of the back plate marked "GND"
 must face out.
- 3. Pull fixture wires through hole in center of back plate.
- 4. Follow wiring instructions carefully (see fig.2)
- 5. Mount fixture by aligning mounting holes in fixture back plate with mounting screws and threading ball nuts (A) onto mounting screws.
- 6. Install the light bulbs in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
- 7. Attach the frame (E) through the hole of the fixture body (D) and the plastic washer (C), and then lock it securely with the ball nut (B).
- 8. Thread pipe (F) into center hole of the frame (E) and tighten it with finial (G).
- 9. With silicone caulking compound, caulk completely around where back of cover meets with the wall surface to prevent water from seeping into outlet box.

Wiring (see fig.2)

- 1.Connect the electrical wires as follows.

 Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet box has a ground wire (green or bare copper) connect fixture's ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the mounting plate.
- 2. Tuck the wire connections neatly into the wall junction box.





