

READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Unpack lamp parts onto carpeted surface or blanket. Be sure to place parts in a line that closely resembles assembled lamp. All wires are connected when unpacking. Be careful handling wires during assembly.

- 1. Grasp Cord that exits at the bottom of Base and pull carefully until excess Cord in between parts is removed.
- **2.** Thread Socket Assembly into Lamp Base and turn to tighten.
- **3**. Place Harp to fit into Yoke by squeezing the bottom of Harp.
- **4.** Install a Type A, 150 Watt Max. 3-Way Medium base bulb (not included) into socket as noted on relamping label at socket area.
- **5.** Unscrew Finial from Harp and set aside. Place Lamp Shade over screw thread of Harp and tighten Finial back in place.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

©MURRAY FEISS IMPORT LLC.

A Generation Brands Company®