


ASSEMBLY INSTRUCTIONS FOR F2072/3 (E) REV 4/19/06

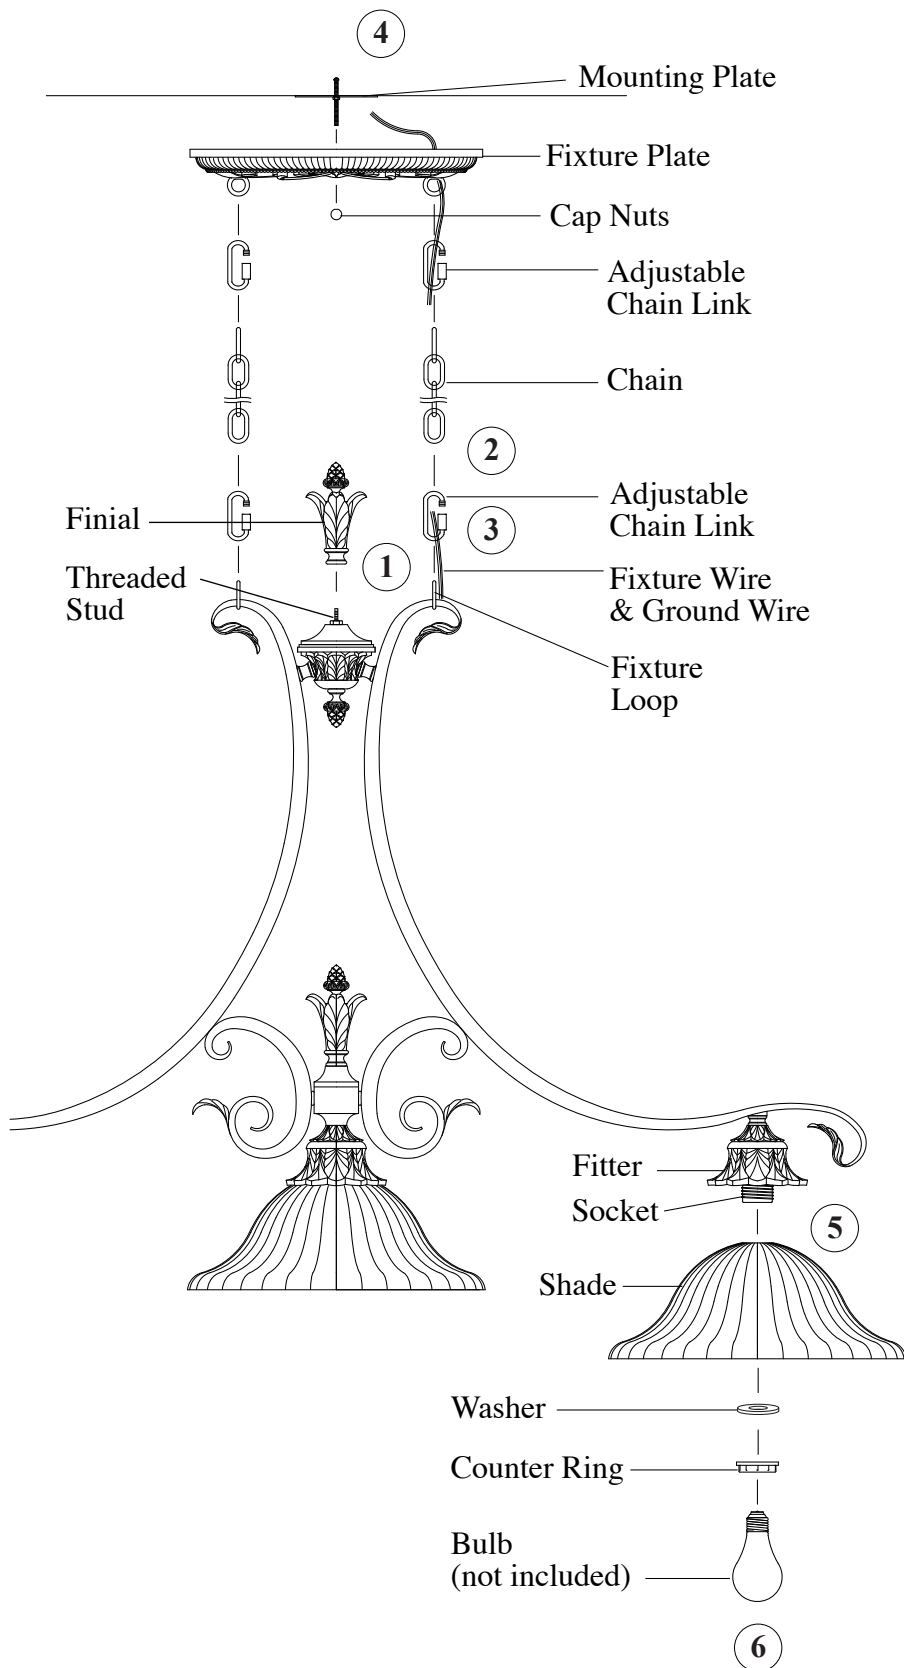

IMPORTANT
TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs are not included.

1. Install finial by screwing onto threaded stud located at top of fixture.
2. **Attach Chains:**
 - A. Open adjustable chain links by turning small round tube at one side.
 - B. Hook chain onto open adjustable chain link. Then attach adjustable chain link onto loop located at fixture plate. Close adjustable chain link by turning back small round tube.
 - C. Repeat other side.
 - D. At this point determine the desired length of chains to hang. Remove any unwanted chain links. Additional chains can be purchased through your local Murray Feiss retailer.
 - E. Hook another open adjustable chain link at bottom of each chain. Then attach adjustable chain links onto loop located at top of fixture arm curls. Close adjustable chain links by turning back small round tube.
3. Take ground wire (without plastic insulation) and weave through above chain links. Then thread through hole in fixture plate loop. Repeat with fixture wires (with plastic insulation).
4. Follow enclosed **"Multiple Standard Installation Instructions"** for electrical and fixture installation onto ceiling outlet box.
5. Install shades onto fitters by fastening with the washer and counter ring onto threaded sockets.
6. Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.