

## READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

- 1. Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts. Be sure to place parts in a line that closely resembles assembled lamp. All wires are connected when unpacking. Be careful handling wires during assembly.
- **2.** Grasp Cord that exits at bottom of Base and pull gently (do not pull Cord from Cord Hole) until any excess Cord in between parts is removed.
- **3.** Thread Bottom Font into Base and turn to tighten.
- **4.** Thread Bottom Column into Bottom Font and turn to tighten.
- **5.** Thread Top Column into Bottom Column and turn to tighten.
- **6.** Thread Socket Assembly into Top Column and turn to tighten. Then pull excess Cord through Cord Hole and set lamp upright on Base.
- **7.** Place Harp fit into Yoke by squeezing bottom of Harp.
- **8.** Install a Type A, 150 Watt Max. 3-Way Medium Base Bulb (not included) into Socket as noted on relamping label at Socket area.
- **9.** Unscrew Finial from Harp and set aside. Place Lampshade over screw thread of Harp and tighten Finial back in place.

## **IMPORTANT SAFETY INSTRUCTIONS:**

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

OFEISS INDUSTRIES

M IJ R R A Y F F I S S