



Assembly Instructions For **FM316, FM317** (E) 10/08

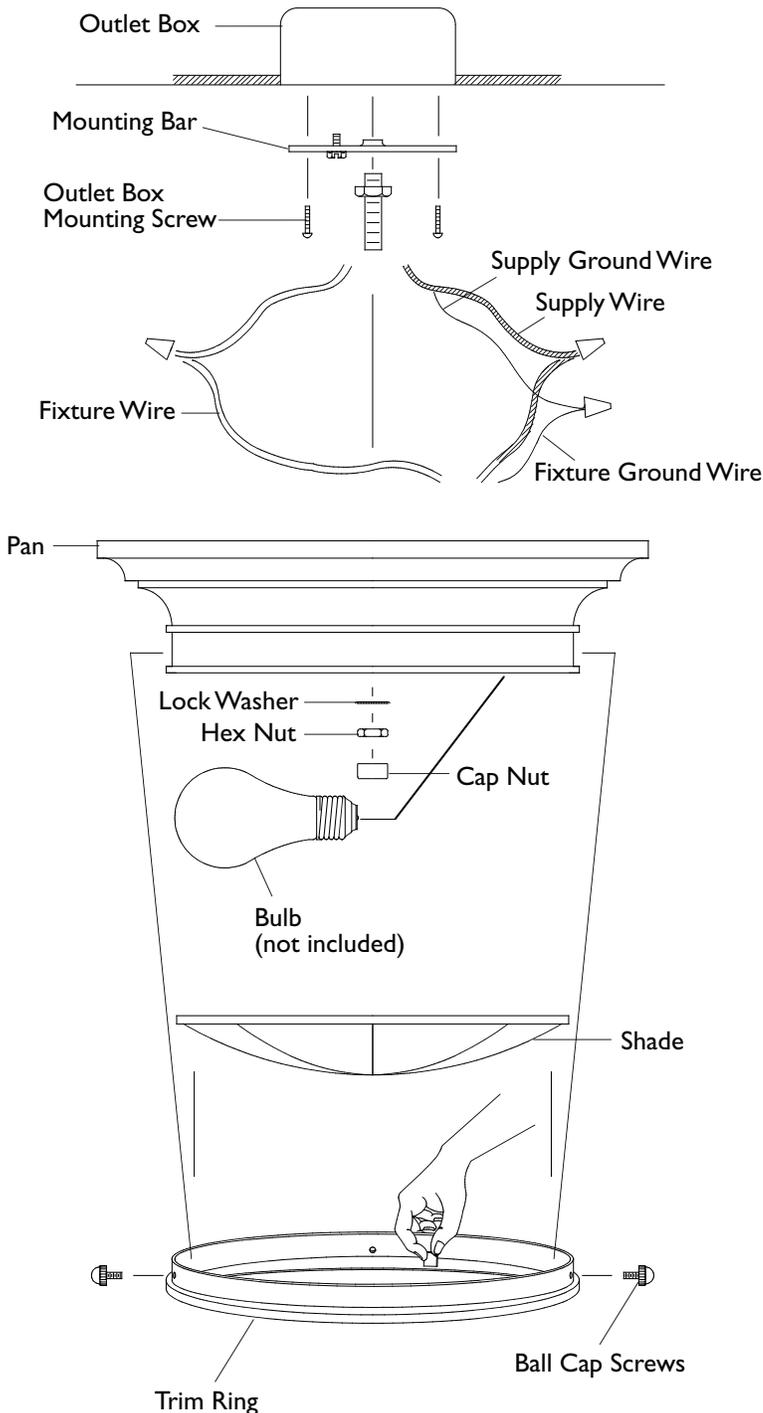

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. If you are replacing an existing fixture, disconnect and remove the old fixture. Expose the supply wiring from the outlet box.
2. Screw the short threaded pipe 3 complete turns into the flat side of mounting strap and lock in place with hex nut.
3. Fasten the mounting strap to the outlet box using the two screws supplied with the outlet box.
4. Spread the electrical wires so that the black wires are on one side of the outlet box and the white wires are on the other side.
5. **Grounding Connection:**
This fixture is provided with a ground wire. Connect fixture ground wire to ground wire from outlet box with wire connector (not provided). Never connect ground wire to black or white power supply wires.
6. **Electrical connections:**
Connect the white wire(s) from the fixture to the white wire of the outlet box. Connect the black wire(s) from the fixture to the black wire of the outlet box.
NOTE: Black outlet box wire may be red, round & smooth and/or have copper conductor. White outlet box wire may be square & ridged and/ or have a silver conductor.
7. Slip pan through short threaded pipe making certain to tuck all wires inside of pan. Lock pan onto ceiling by fastening with lock washer and hex nut. Then install cap nut onto same threaded pipe.
8. Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.
9. A. Slip shade inside of trim ring.
B. Secure shade into trim ring by bending tabs.
C. Align holes in trim ring with holes in ceiling pan. Secure with three ball cap screws.

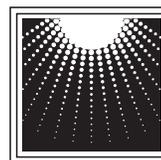

**MURRAY
FEISS**
Generation Brands™