

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before beginning assembly. Bulb is not included.

- 1. Slip the upper glass shade and then harp through the socket. Lock them together by fastening with counter ring.
- 2. Slip the crown through harp and then fasten onto the fixture plate by fastening with a lock washer and short machine screw.
- 3. Install a hex nut onto one end of threaded stud. Leave about 1/2" (13 mm) of thread exposed. Insert same end of the threaded stud through hole located at bottom section of harp. Lock them together by fastening another hex nut from above.
- **4.** Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
- 5. Gently sit the lower glass shade inside of main frame. Then carefully slide them through the already installed threaded stud until top rim of the main frame checks securely inside of crown. Lock them into position by fastening with a flat washer and hex nut. Do not over tighten. NOTE: Make certain the crown is sitting properly in between the upper glass shade and main frame.

Then slip the font and secure by fastening with finial.

6. Follow enclosed "**Outdoor Fixture Installation Instructions**" for electrical and fixture installation onto house outlet box.

©MURRAY FEISS IMPORT LLC.

A Quality Home Brands Company®