Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-CKPT1484F For Style CKPT1484F

Tools Required: None

Bulb Recommended: (1) Medium Base 100W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Package Contents Е **Part** Description Quantity Finial 1 pc. Α В Rubber Washer 1 pc. C 1 pc. Shade D Harp 1 pc. Socket Assembly E 1 pc. F С F Mounting Ball 1 pc. G Base 1 pc. G D

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

September 2012

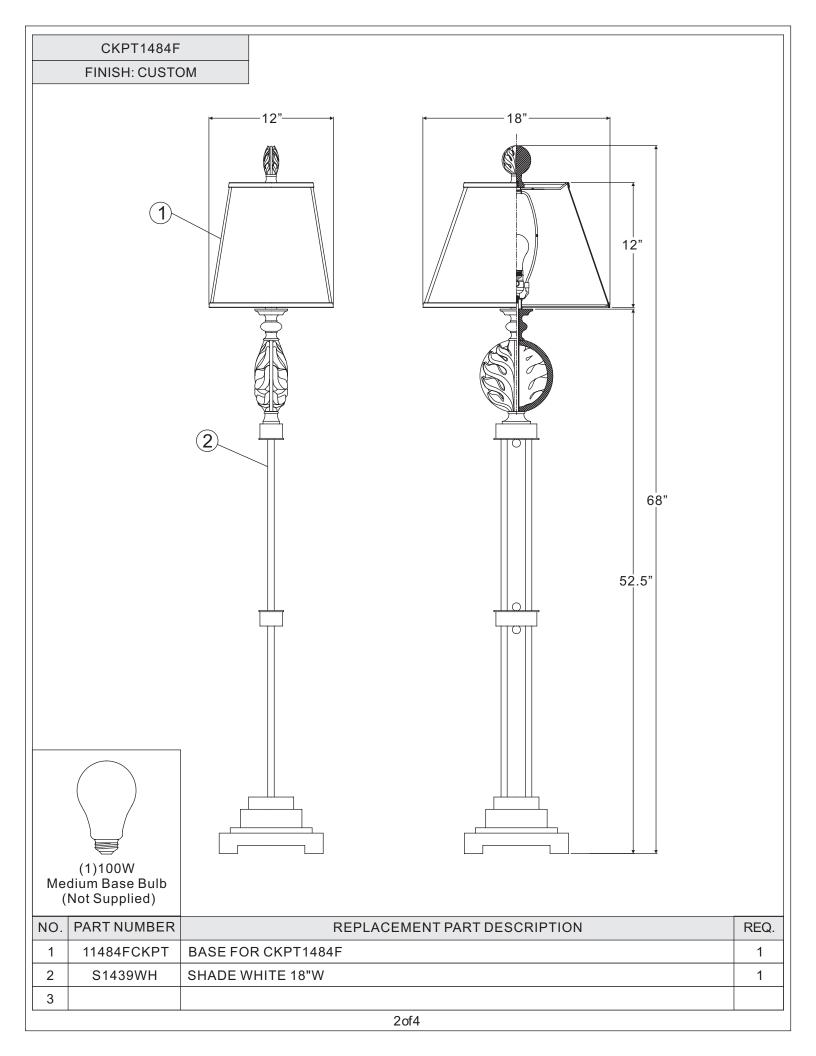


Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-CKPT1484F For Style CKPT1484F


STEP 1 - Install Socket Assembly to Base

A. Place Hole on the bottom of Socket Assembly (E) over the Nipple on the top of Base (G), secure by thread Mounting Ball (F) on to Nipple. Hand tighten until snug.

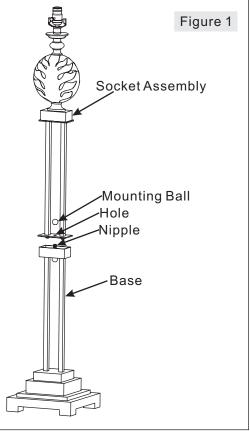

STEP 2 - Install Harp

A. Locate the Harp (D) by pressing the ends of the Harp (D) into the Harp Clips on the top of Base (G).

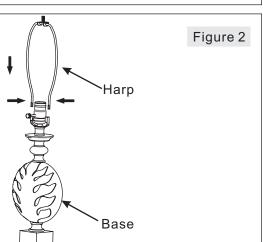

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


September 2012

Q U O I Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-CKPT1484F For Style CKPT1484F

STEP 3 - Assemble Shade


A. Place Shade (C) and Rubber Washer (B)over the top end of the Harp (D). Secure by thread the Finial (A) onto the Harp (D). Hand tighten until snug.

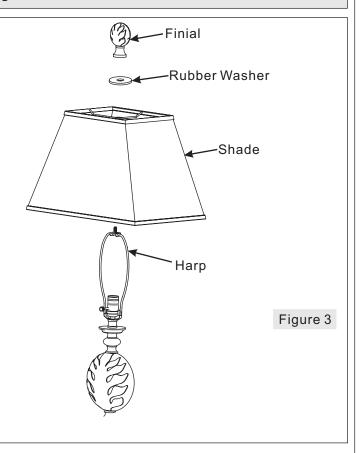

STEP 4 - Install Bulb

- A. This fixture uses standard bulbs with medium screw bases. Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

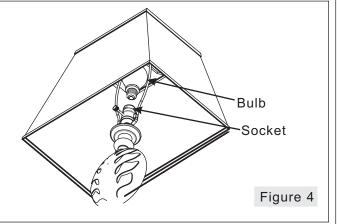

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

September 2012