



Tools Required

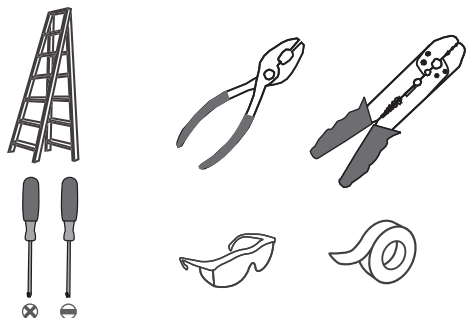

Light Source

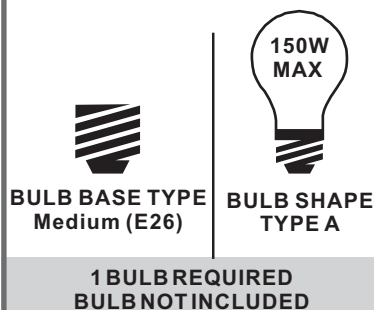

Fixture Height Adjustable 21" to 58.75"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

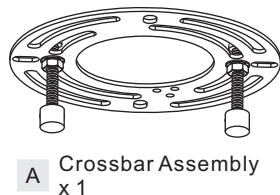


A Crossbar Assembly
x 1



B Outlet Box Screw
x 2



C Wire Connector
x 3

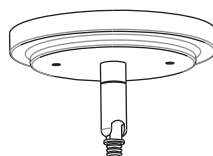


D Ceiling Canopy
x 1




E 6"L Rod
x 2



 
F 12"L Rod
x 1

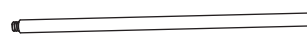

G 12"L Rod with Nipple
x 1

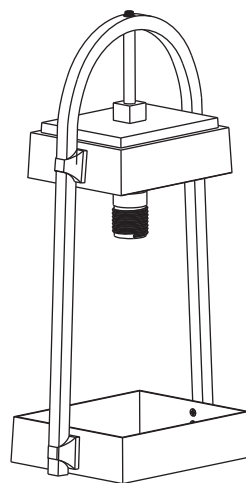

H Fixture Body
x 1

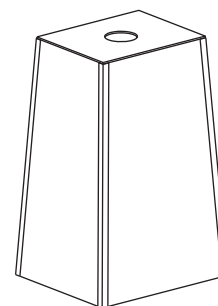


I Shade
x 1



J Socket Collar
x 1


Table of Contents

Crossbar Assembly

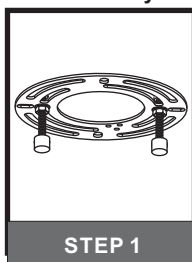


STEP 1

Ceiling Canopy Assembly, Spacer Tube & Downrod

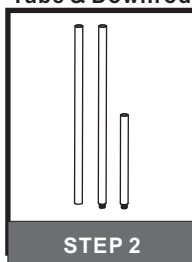


STEP 2

Wiring

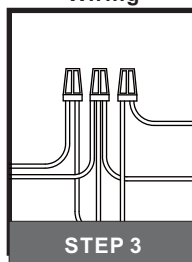


STEP 3

Ceiling Canopy

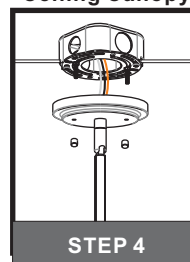




STEP 4

Shade & Bulb



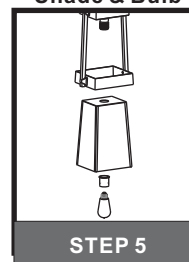


STEP 5


STEP 1

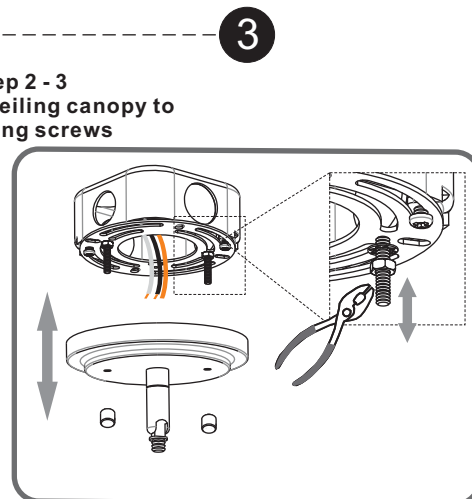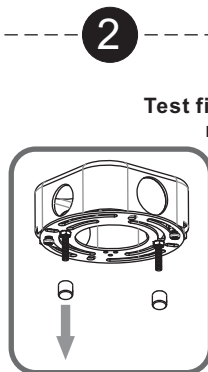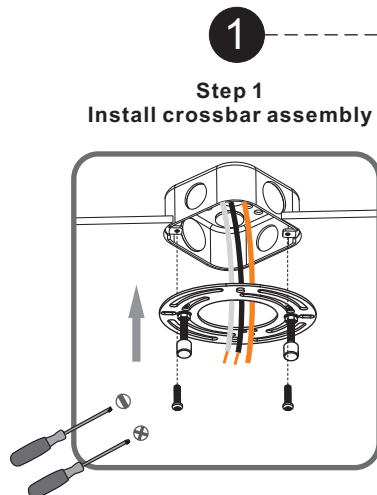


STEP 2

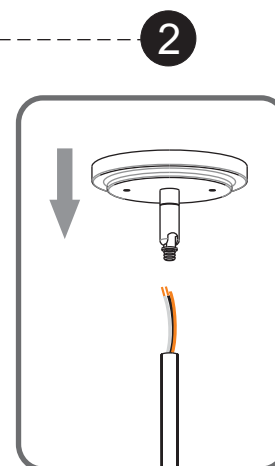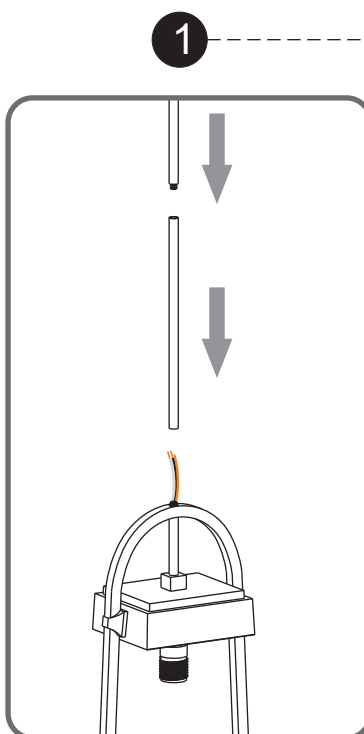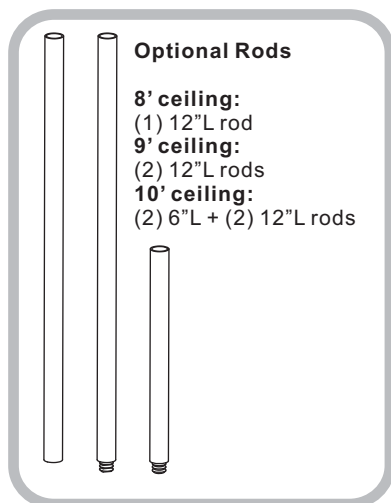

STEP 3

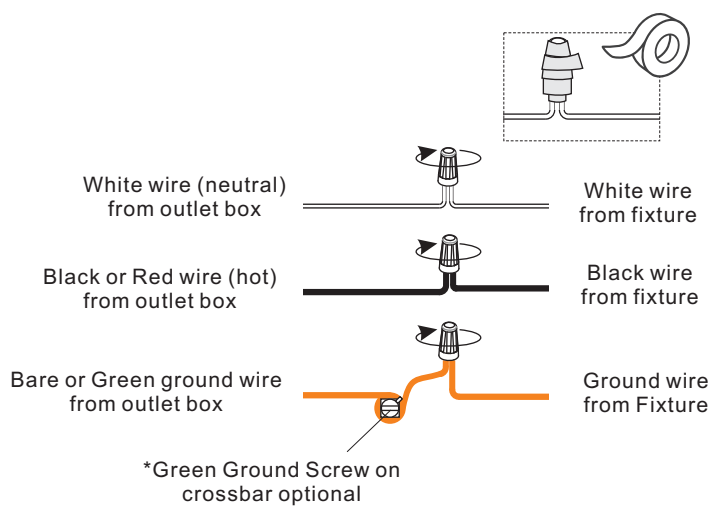

STEP 4

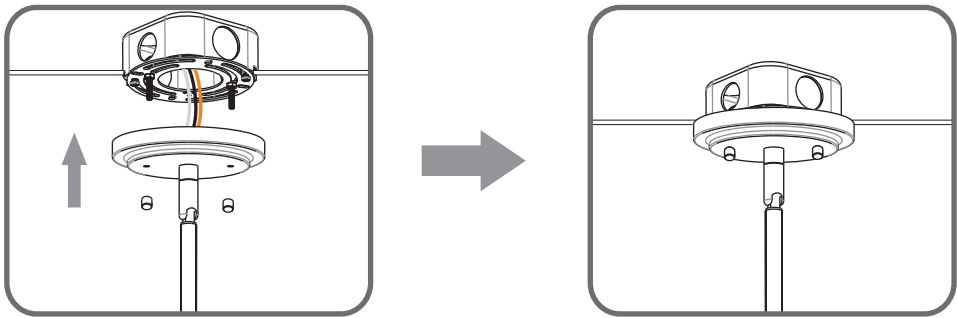

STEP 5

