

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (5) G9 Base Frosted G9 Xenon Bulbs 60W Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

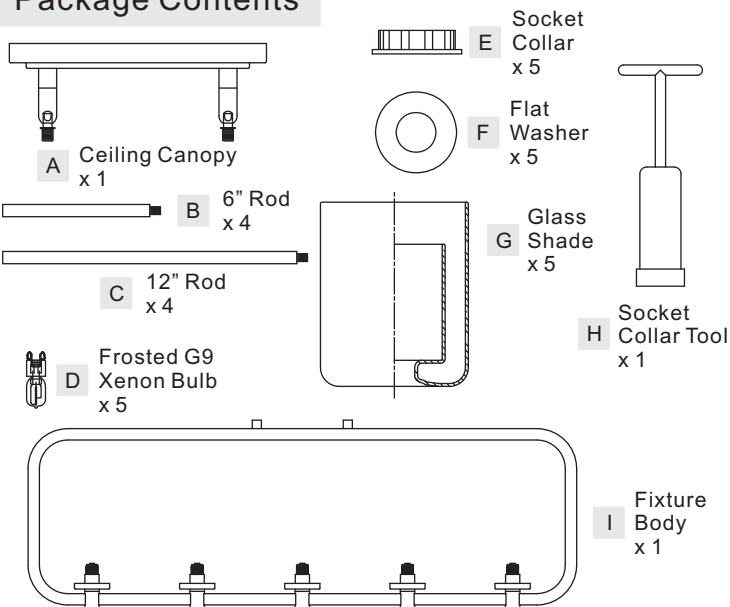

Hardware Contents

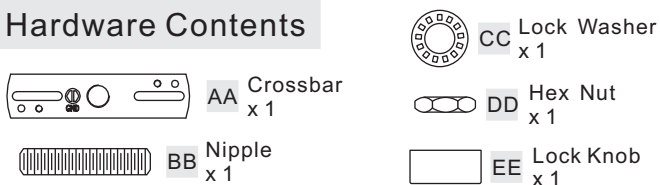

STEP 1 – Install the Crossbar to the junction box

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included), tighten until snug.

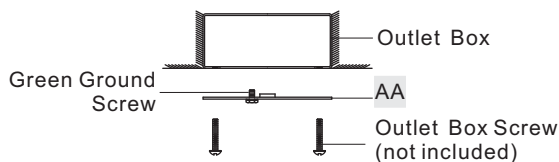


Figure 1

STEP 2 – Install Nipple to Crossbar

A. Thread the Hex Nut (DD) onto one end of the Nipple (BB). Place the Lock Washer (CC) over the Hex Nut end of the Nipple (BB) and then thread the Nipple (BB) into the center lock hole of the Crossbar (AA). Using pliers, thread the Hex Nut (DD) against the Crossbar (AA) and hand tighten until snug.

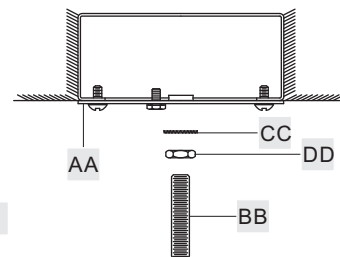


Figure 2

STEP 3 – Test to Fit the Ceiling Canopy to the Nipple

A. Fit the Ceiling Canopy (A) over the Nipple (BB) on the Crossbar (AA) and secure with the Lock Knob (EE). The Ceiling Canopy (A) should be snug against the ceiling and the Lock Knob (EE). If not, adjust the length of the Nipple (BB) on the Crossbar (AA) by unscrewing the Hex Nut (DD) and the Lock Washer (CC) and then screwing the Nipple (BB) in or out of the Crossbar (AA) until the correct length is achieved. Once the ceiling canopy of Fixture Body (A) is secure, remove the Lock Knob (EE) and Fixture Body (A) and proceed to step 4.

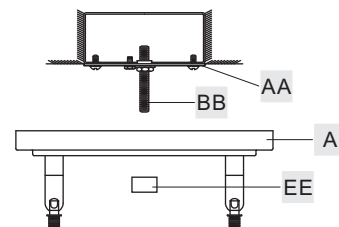


Figure 3

STEP 4 - Install Ceiling Canopy, Rods and Fixture Body together

A. Separate hex nuts, lock washers, lanyard, reinforcing plate and swivels from Ceiling Canopy (A).
B. Determine the Rods (B/C) to be assembled to the Fixture Body (I) according to your hanging height.
C. Pass the supply wires and ground wire through the chosen rods (B/C), one swivel, ceiling canopy, reinforcing plate, lanyard, one

(Step 4 Continued)

- lock washer and one hex nut. Thread the Fixture Body (I), the chosen Rods (B/C) and swivels together. Hand tighten until snug.
- D. Place the ceiling canopy, reinforcing plate, lanyard and lock washers back onto swivels. Secure by threading hex nuts back onto swivels. Hand tighten until snug.

Suggested rods for Ceiling height :
 8' ceiling : use (1) 6" rod and (1) 12" rod
 9' ceiling : use (1) 6" rods and (2) 12" rods
 10' ceiling : use (2) 6" rods and (2) 12" rods

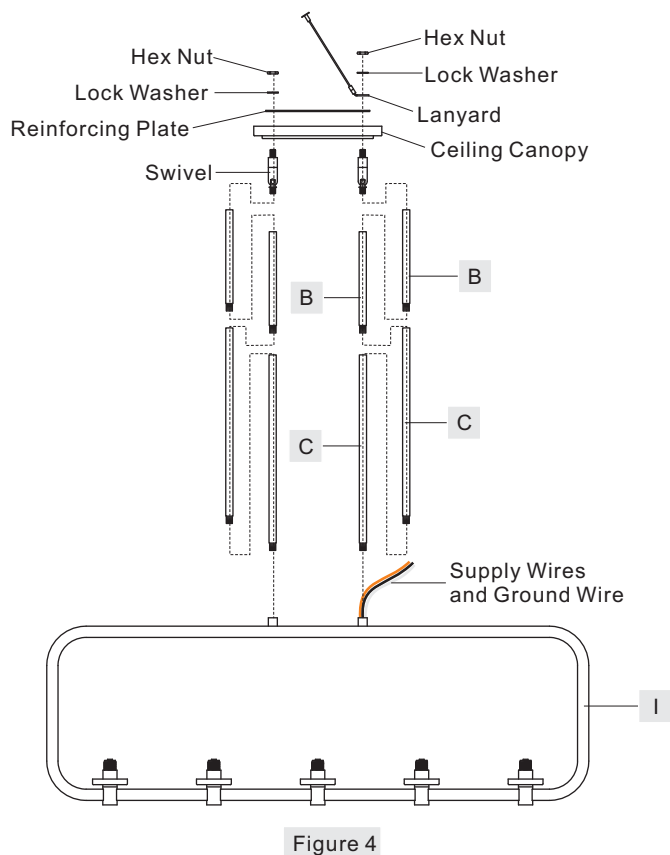


Figure 4

STEP 5 - Attach the Lanyard

- A. The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
- B. Turn the Button Stop so it may be inserted into a Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

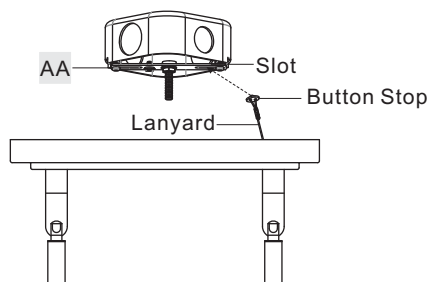


Figure 5

STEP 6 - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

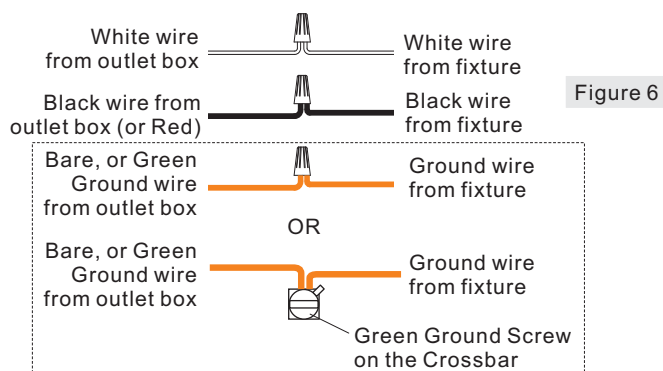


Figure 6

STEP 7 - Install the Fixture

- A. Position the Ceiling Canopy (A) and Fixture Body (I) onto the Nipple (BB). Place the Ceiling Canopy (A) and Fixture Body (I) over the Nipple (BB). Secure the fixture by using the Lock Knob (EE) and hand tighten until snug.

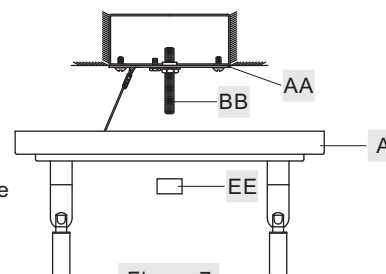


Figure 7

STEP 8 - Install Glass Shades

- A. Place the Glass Shade (G) and the Flat Washer (F) over the socket as shown. By using the Socket Collar Tool (H), thread the Socket Collar (E) onto the socket to secure the Glass Shade (G). Hand tighten until snug.

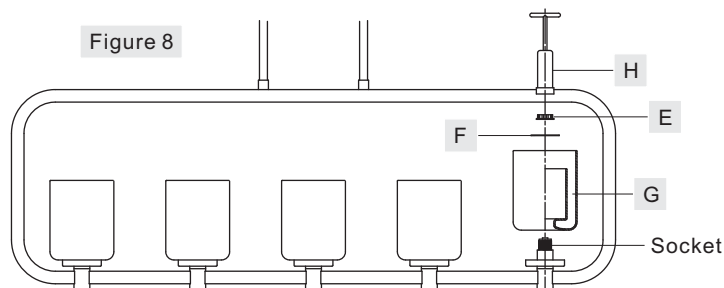


Figure 8

STEP 9 - Install Bulbs

- A. Insert bulbs (D) onto sockets and push snugly into place.

IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.

Your fixture is now assembled and ready to use. Enjoy!

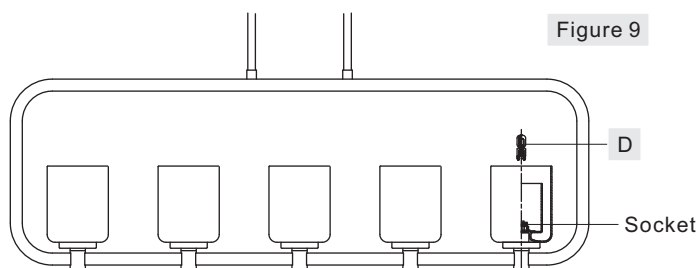


Figure 9

Thank you for purchasing a Quoizel product.
 Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
 or visit us on-line at www.quoizel.com


CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

KLT538C

FINISH: POLISHED CHROME

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

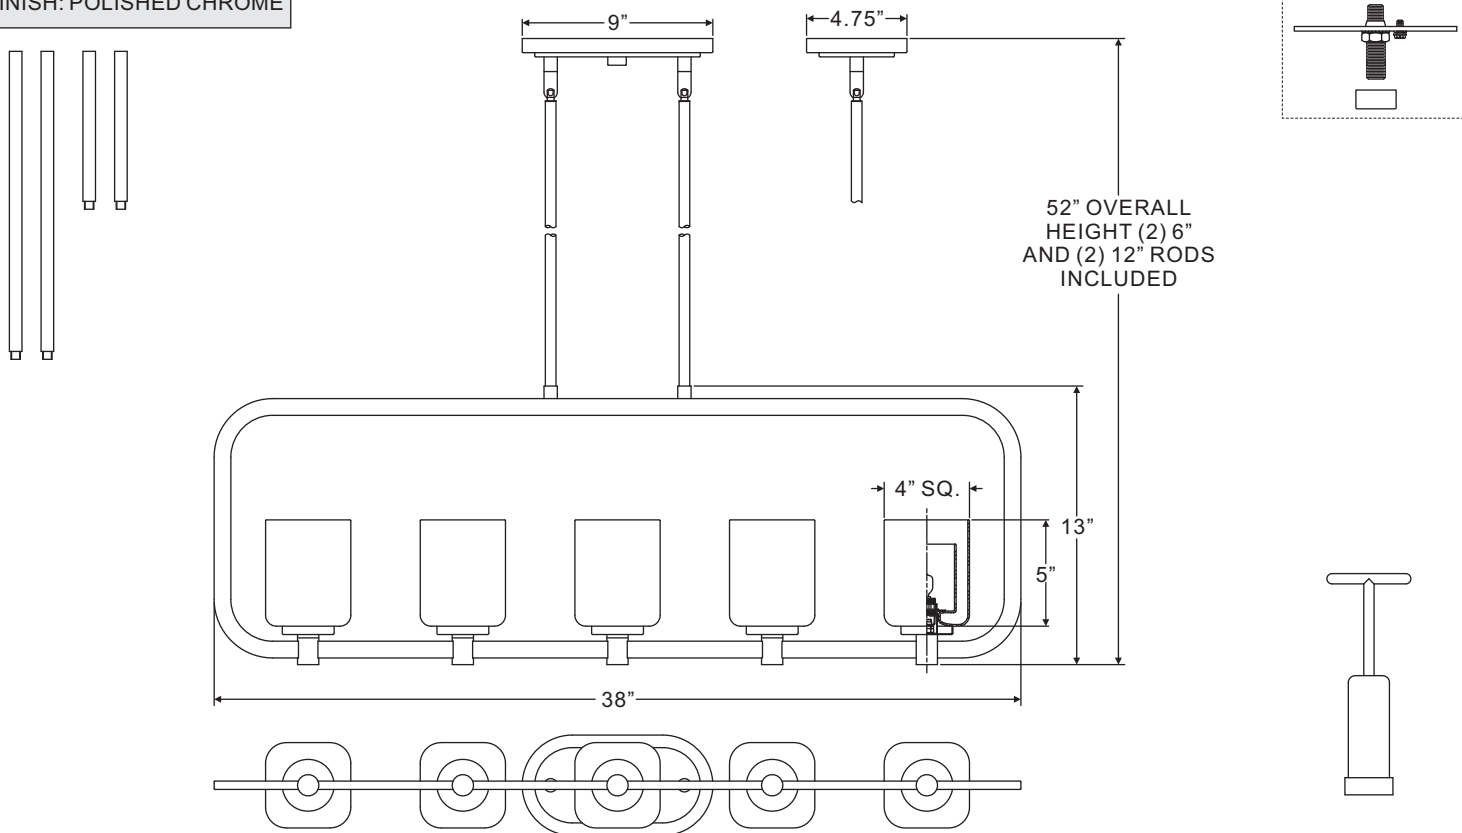

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com