

# Assembly Instruction Sheet #IS-SLT5006IF For Style SLT5006IF

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

 $\textbf{LightSource:} \ (6) \ B10 \ Candelabra \ Base \ 60 \ W \ Maximum.$ 

Estimated Assembly Time: 30-45 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

# **△** Warnings and Cautions

Hardware Contents

Crossbar

Lock Washer

x 2

Hex Nut

Nipple

x 1

x 2

© 2015 Quoizel Inc.

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

Canopy

Chain Loop

Ring

x 1

Quick Link

П

GG X 1


Canopy Lock

Fixture Chain

Ceiling Canopy

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

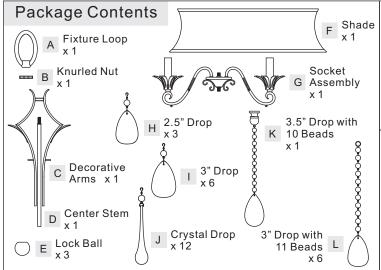

- A. Thread the Center Stem (D) onto the Socket Assembly (G) and hand tighten until snug.
- B. Place the Decorative Arms (C) over the top end of the Center Stem (D). Insert the ends of Decorative Arms into the Holes on the Junction Box. Secure it with the Knurled Nut (B). Hand tighten until snug. Thread the Fixture Loop (A) onto the Center Stem (D) and hand tighten until snug.
- C. Place the Shade (F) over the Decorative Arms (C). Pass the Bolts on the Scrolls of the Shade (F) through the Tabs on the Decorative Arms (C) and secure with Lock Balls (E). Hand tighten until snug.

## STEP 2 - Install Crossbar

 A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.



# STEP 3 - Install Canopy Chain Loop and Nipple

\* Pliers is required for this step.

Canopy Chain Loop (EE) and

A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at least 0.25" from the end. Pass one Lock Washer (BB) over the end of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the


hand tighten until snug.


B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). Place another Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the

Crossbar (AA).

C. Remove the Canopy Lock
Ring (FF) from the Canopy
Chain Loop (EE). Place the
Ceiling Canopy (II) over the
Canopy Chain Loop (EE)
against the ceiling to
determine the correct position
of the Nipple (DD). Thread the
Canopy Lock Ring onto the
Canopy Chain Loop (EE).

Adjust the Nipple (DD) to

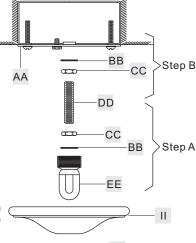

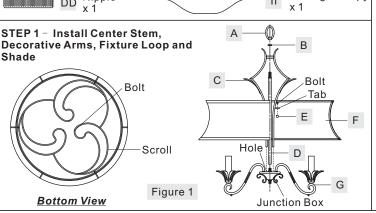

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

April2015

Figure 3

allow the Ceiling Canopy (II) to rest against the ceiling when held in place by the Canopy Lock Ring (FF).

D. Remove the Canopy Lock Ring (FF) and the Ceiling Canopy (II). Tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

## STEP 4 - Install Fixture Chain and Ceiling Canopy

A. Adjust the Fixture Chain (GG) to your desired length by removing the links if needed.

\* Pliers is required for this step.

B. With the Fixture Chain (GG) not attached to the Fixture Loop and the Canopy Chain Loop (EE), pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.

C. Attach one end of the Fixture Chain (GG) to the Fixture Loop with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up and attach the other end of the Fixture Chain (GG) onto the Canopy

Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely. Close the chain loop at the Ceiling Canopy Loop (EE).

D. Feed the Supply Wires and
Ground Wire through the Canopy
Chain Loop (EE) and Nipple (DD)
into the Outlet Box. Cut the wires
leaving Approximately 8" of wire
extending from the Outlet Box.

E. Refer to Step 5 for wire connections.

F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight.

Suggested chain length for Ceiling height:

9' ceiling: use 7 links of chain and

2 quick links


10' ceiling : use 16 links of chain and 2 quick links

Figure 4

# Supply Wires and Ground Wire GG HH A A


# STEP 5 - Wire Connections

 A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.




### STEP 6 - Install Bulb

A. Attach 2.5" Drops (H) to leaves on the Decorative Arms (C).

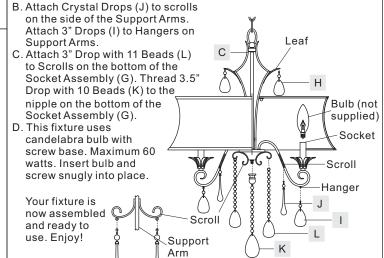

## SLT5006IF

## FINISH: ITALIAN FRESCO

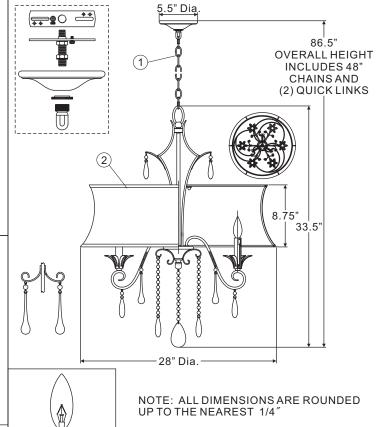

(6) 60W Candelabra Base Bulbs (Not Supplied)

 NO.
 PART NUMBER REPLACEMENT PART
 REQ.

 1
 M2375CHIF
 CHAIN
 1

 2
 S1647OZ
 SHADE
 1

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

Figure 6