

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www. quoizel. com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (3) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Nipple	1 pc.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Ceiling Canopy	1 pc.
F	Canopy Chain Loop	1 pc.
G	Canopy Lock Ring	1 pc.
H	6" Rod	2 pcs.
I	12" Rod	2 pcs.
J	Socket Assembly	1 pc.
K	Small Shade	3 pcs.
L	Cap	3 pcs.
M	Socket Ring	3 pcs.
N	Shade Large	3 pcs.
O	Fixture Chain	1 pc.
P	Fixture Loop	1 pc.
Q	Lock Screw	3 pcs.
R	Ring	1 pc.


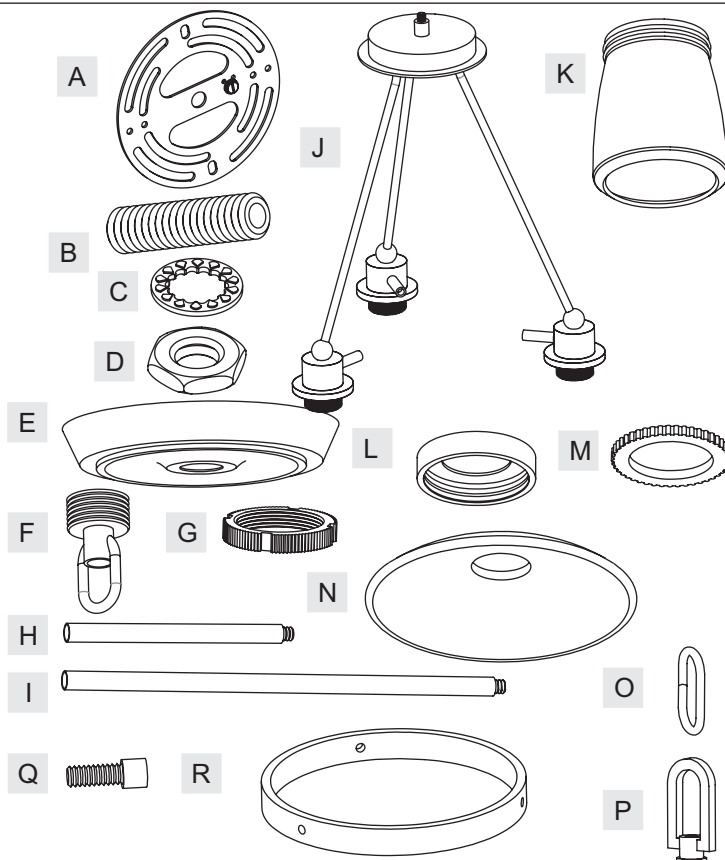


Thank you for purchasing a Quoizel product.



Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

UPTV5103BN

FINISH: BRUSHED NICKEL

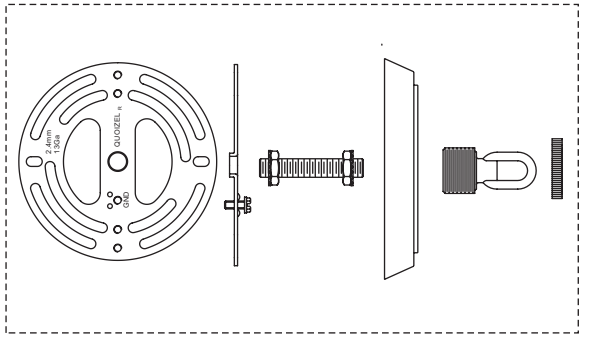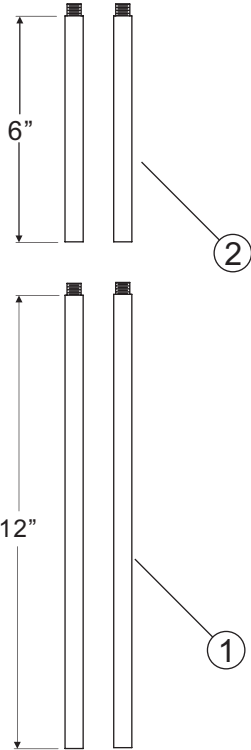

NOTE: TWO LIGHTS SHOWN FOR ILLUSTRATION PURPOSES ONLY.

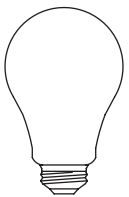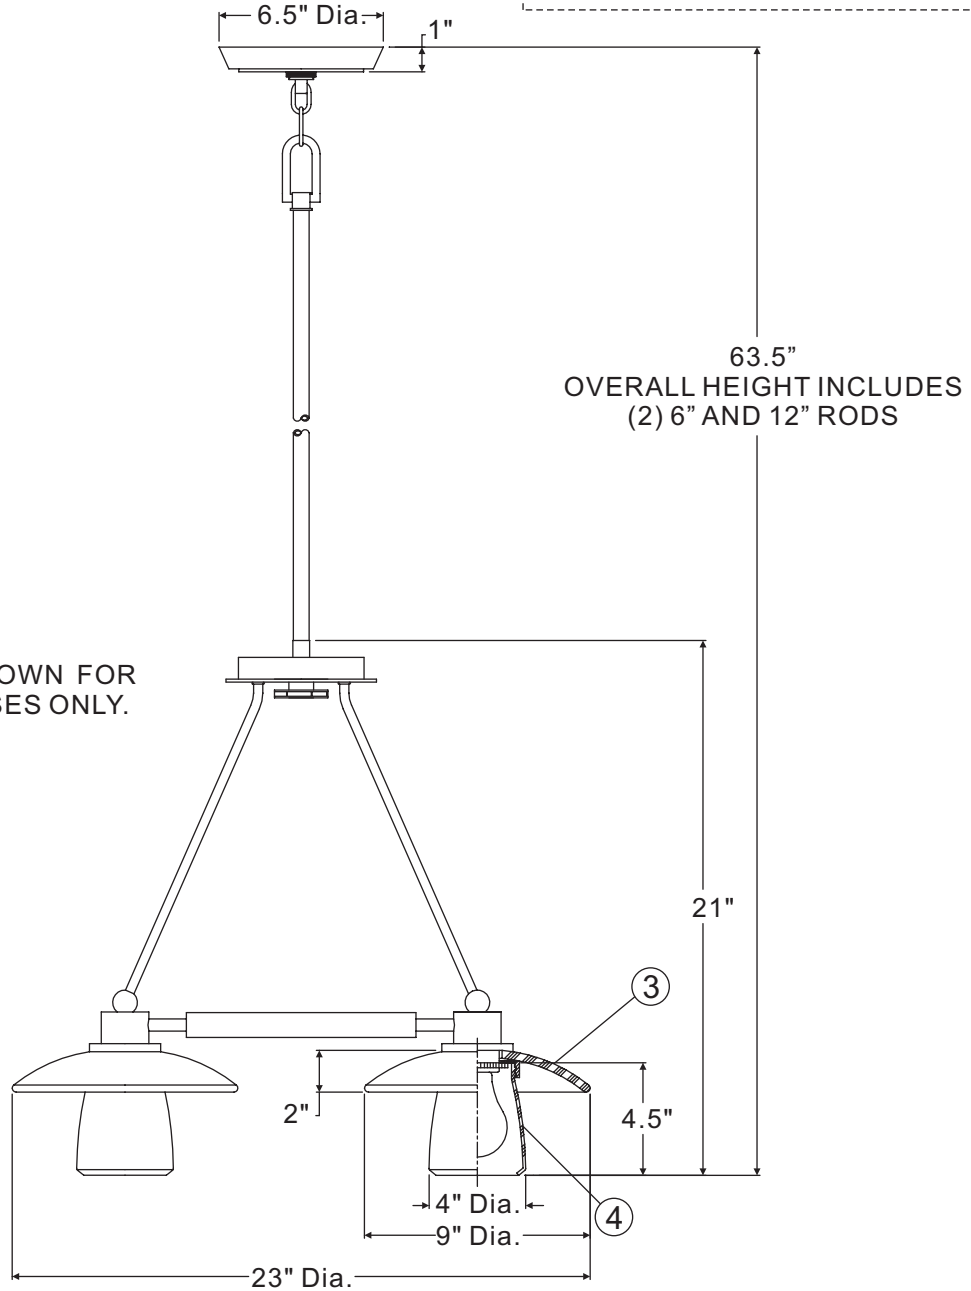

(3) 100W A19
Medium Base Bulb
(Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	9008EXBN01	ROD EXT BRUSHED NICKEL 12"L X 0.63"D	2
2	9007EXBN01	ROD EXT BRUSHED NICKEL 6"L X 0.63"D	2
3	G3212SH	SHADE 8MM CLEAR THICK	3
4	G3211SH	SHADE OPAL ETCHED GLASS 4"D	3

Assembly Instruction Sheet #IS-UPTV5103BN

For Style UPTV5103BN

STEP 1 – Adjust Shade Holder

- A. Unfold support arms on Shade Holder to proper locations.


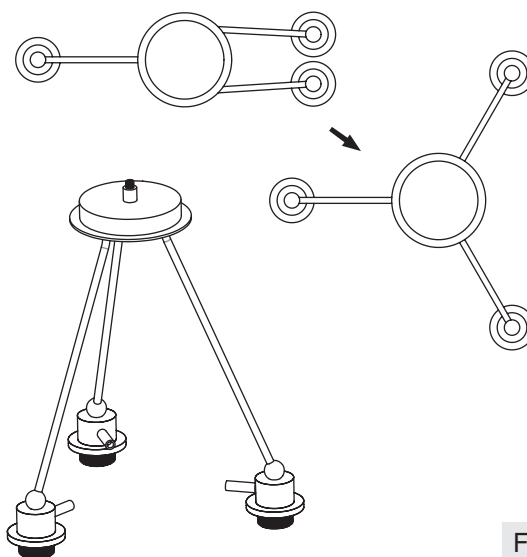


Figure 1

STEP 2 – Assemble Ring to Socket Assembly

- A. Pass the Rod on the Socket Assembly (J) into the Hole on the Ring (R). Thread the Lock Screw (Q) into the Rod to secure the Ring(R). Hand tighten until snug.

Figure 2

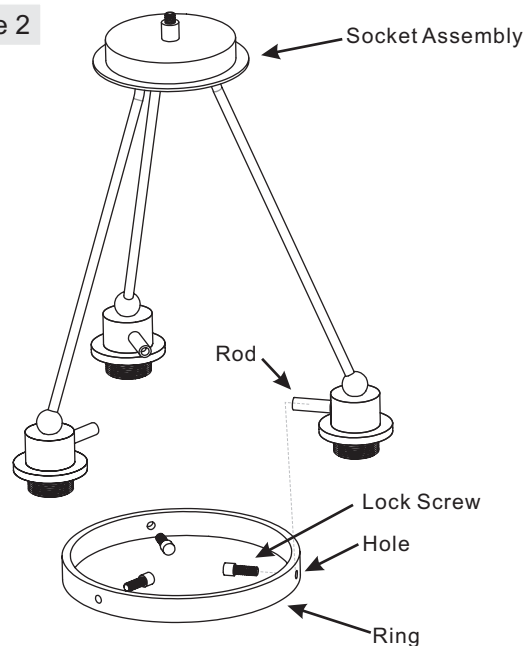

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

STEP 3 – Assemble Rods

- Determine the Rods (H/I) to be assembled to the Socket Assembly (J) according to your hanging height.
- Pass Supply Wires and Ground Wire through the chosen Rods (H/I) and then thread the chosen Rods (H/I) and the Socket Assembly (J) together. Hand tighten until snug.

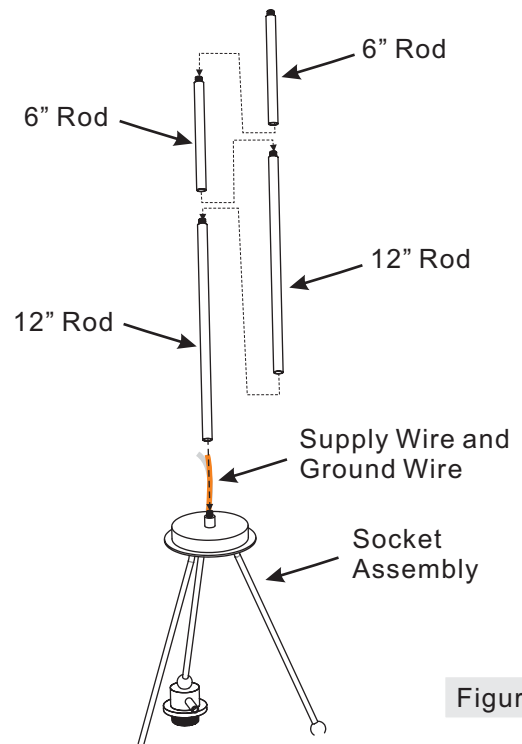


Figure 3

STEP 4 – Assemble Fixture Loop to Upper Rod

- Pass Supply Wires and Ground Wire through the Fixture Loop (P) then thread the Fixture Loop (P) and the Upper Rod together. Hand tighten until snug.

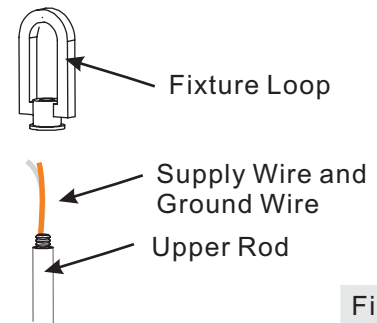


Figure 4

STEP 5 – Attach Crossbar to Outlet Box

- Secure the Corssbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

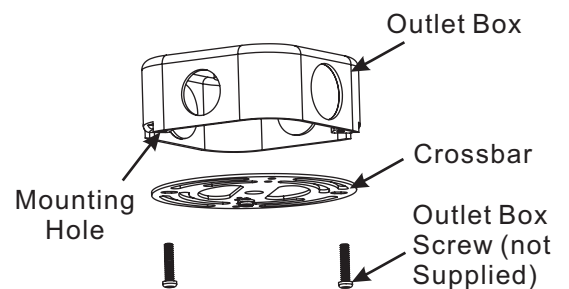


Figure 5

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

STEP 6 – Attach Nipple to Crossbar

- Thread one Hex Nut (D) onto the top end of the Nipple (B).
- Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.

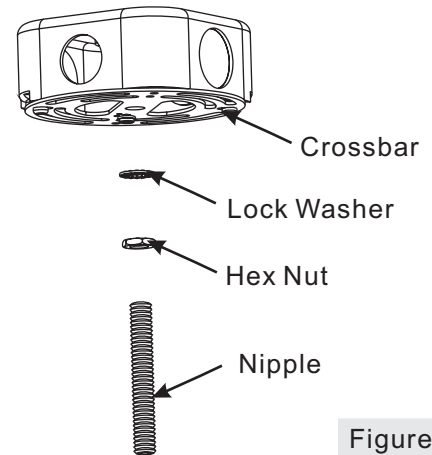


Figure 6

STEP 7 – Attach Canopy Chain Loop to Nipple

- Thread another Hex Nut (D) onto the end of the Nipple (B).
- Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).
- Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop and hand tighten until snug.

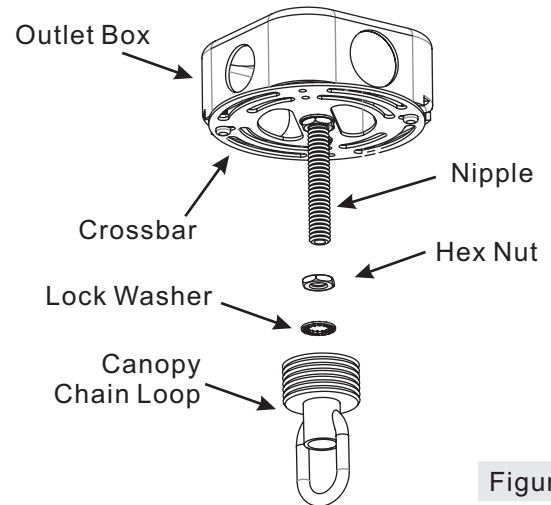


Figure 7

STEP 8 – Assemble Ceiling Canopy

- Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop and tighten until snug to secure the Ceiling Canopy (E).

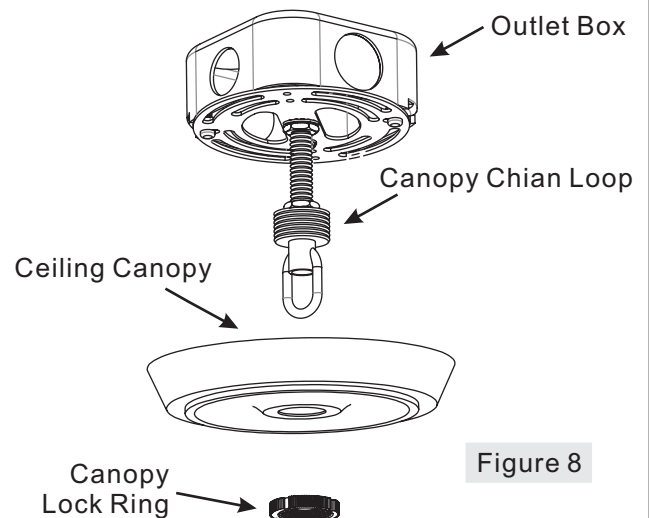


Figure 8

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

STEP 9 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- B. Attach one end of the Fixture Chain (O) onto the Canopy Chain Loop (F) and then attach the other end of the Fixture Chain (O) onto the Fixture Loop on the top of the fixture.

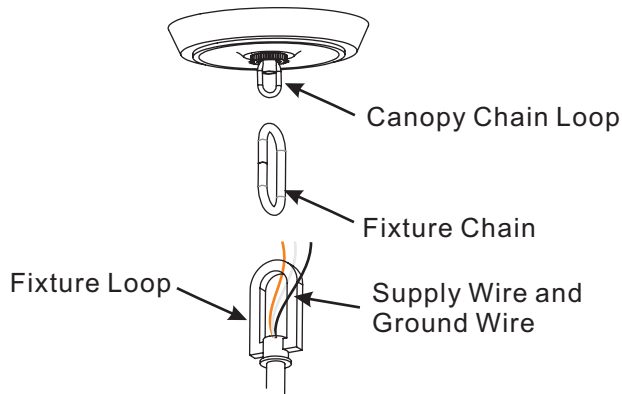


Figure 9

STEP 10 – Pass Supply Wires through Fixture Chain

- A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (O) alternating links. Push the wires up through the Canopy Chain Loop (F) into the outlet box.

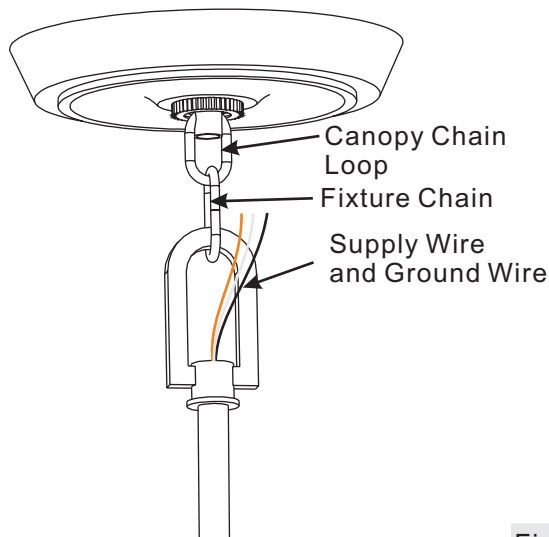


Figure 10

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

STEP 11 – Make Wire Connections

- Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain.
- Push all slack fixture wire through Canopy Chain Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- Twist connectors until wires are tightly joined together.
- Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- Re-attach the Ceiling Canopy (E) as shown in Step 8.

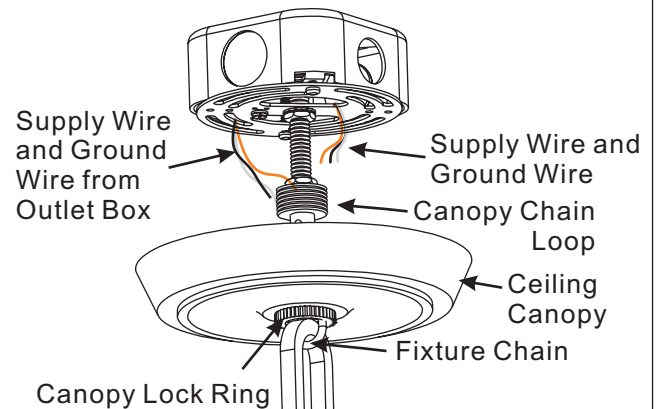


Figure 11

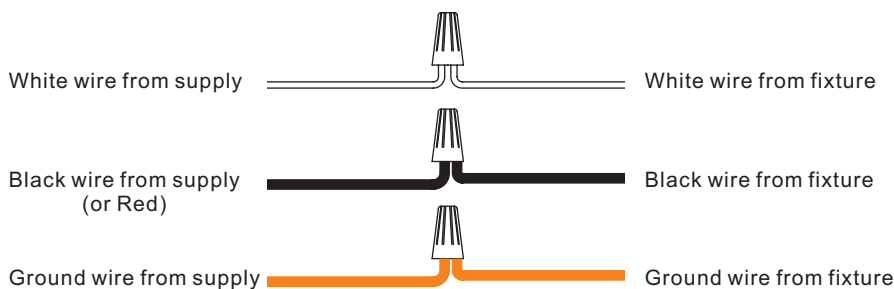


Figure 12

STEP 12 – Attach Shade Large to Socket

- Place the Shade Large (N) and Cap (L) over the Socket as shown. thread the Socket Ring (M) onto the Socket to secure the Shade (N). Hand tighten until snug.

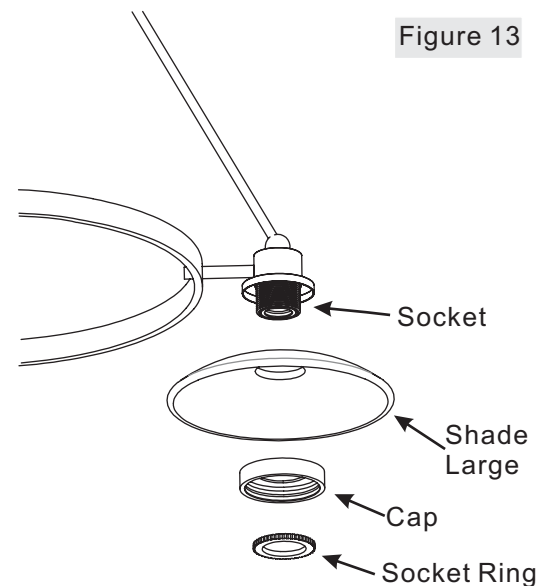


Figure 13


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-UPTV5103BN For Style UPTV5103BN

STEP 13 – Install Bulb


- A. This fixture uses standard bulb with a standard screw base.
Maximum 100 watts.
- B. Insert bulb and screw properly into place.

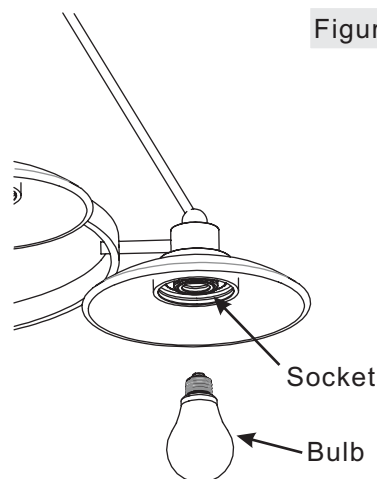

STEP 14 – Attach Small Shade to Cap

- A. Thread the Small Shade (K) onto the Cap (L) and hand tighten until snug.

Your lamp chandelier fixture is now assembled and ready to use. Enjoy!

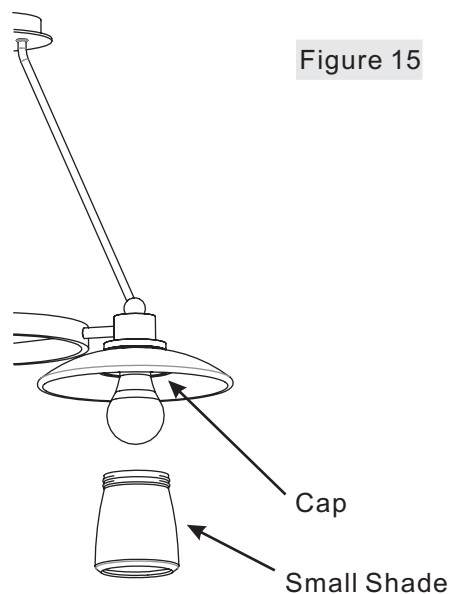

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com