

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www. quoizel. com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Medium Base 100W Maximum

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

 
 
 
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

UPWS2822BN

FINISH: BRUSHED NICKEL

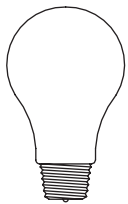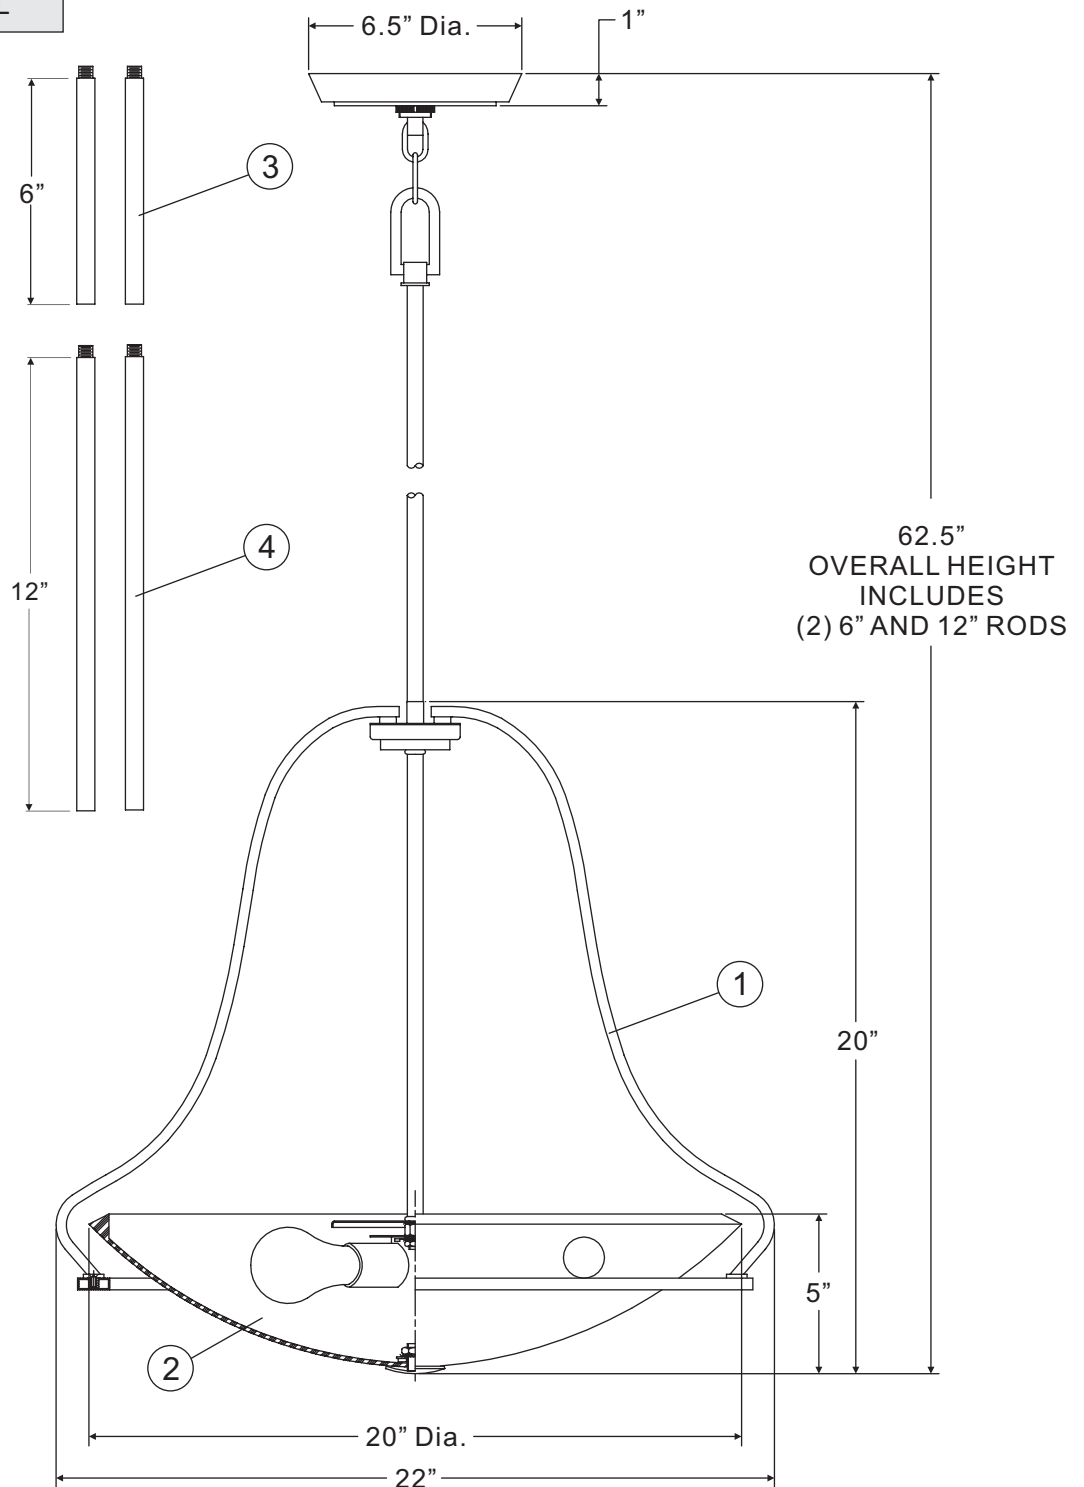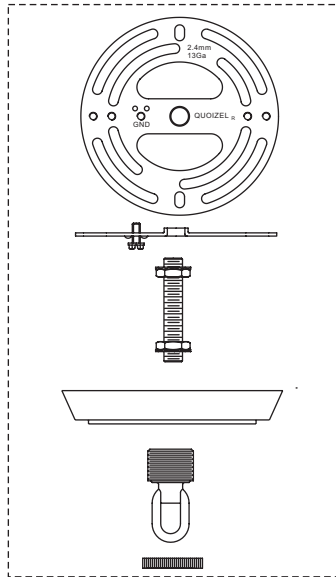

(4) 100W medium
base bulbs
(not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"


NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	12822BNUPWS	BASE BRUSHED NICKLE UPWS2822BN	1
2	G2951SH	SHADE ETCHED WITH PAINTED WHITE INSIDE	1
3	9006EXBN	ROD EXTENSION BRUSHED NICKLE 6"L X 0.5"D	2
4	9012EXBN	ROD EXTENSION BRUSHED NICKLE 12"L X 0.5"D	2

Assembly Instruction Sheet #IS-UPWS2822BN

For Style UPWS2822BN

Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Nipple	1 pc.
C	Lock Washer	3 pcs.
D	Hex Nut	5 pcs.
E	Ceiling Canopy	1 pc.
F	Fixture Chain	1 pc.
G	Fixture Loop	1 pc.
H	Canopy Chain Loop	1 pc.
I	Canopy Lock Ring	1 pc.
J	6" Rod	2 pcs.
K	12" Rod	2 pcs.
L	Socket Assembly	1 pc.
M	Lock Screw	4 pcs.
N	Shade	1 pc.
O	Ring	1 pc.
P	Flat Washer	1 pc.
Q	Rubber Washer	2 pcs.
R	Finial	1 pc.

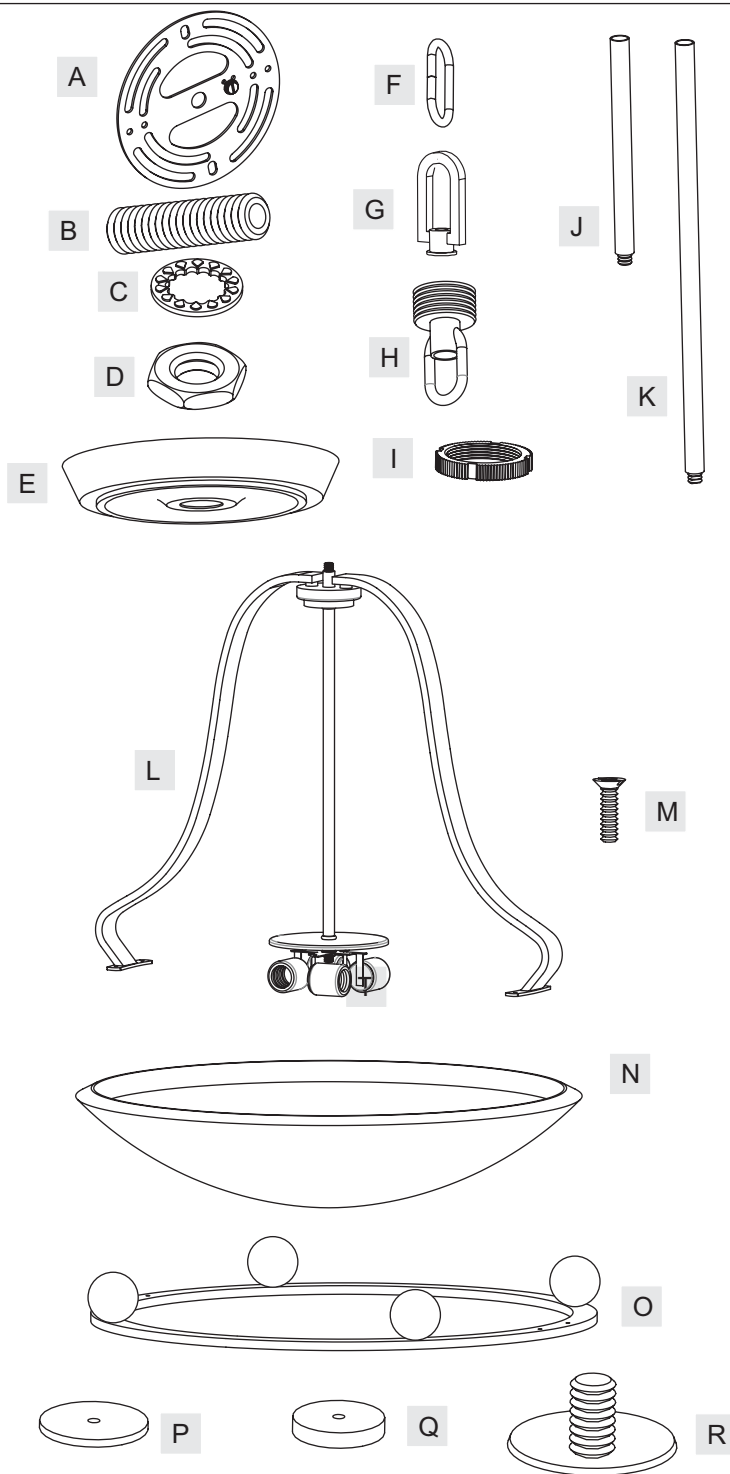 


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN


STEP 1 – Assemble Rods

 - Rotate the Side Arms on the Socket Assembly (L) until they are lined up.
- Determine the Rods (J/K) to be assembled to the Socket Assembly (L) according to your hanging height.
- Pass Supply Wires and Ground Wire through the chosen Rods (J/K) and then thread the chosen Rods (J/K) onto the Socket Assembly (L). Hand tighten until snug.

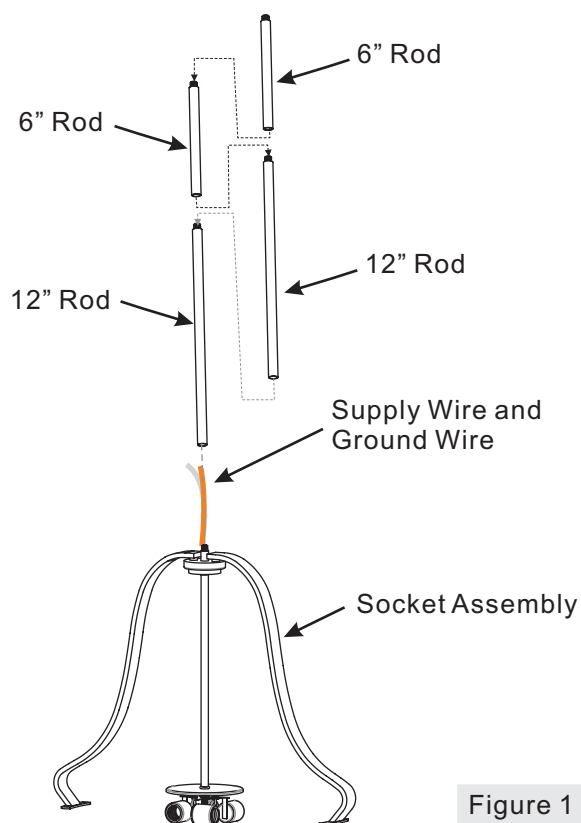


STEP 2 – Assemble Fixture Loop to Upper Rod

 - Pass Supply Wires and Ground Wire through the Fixture Loop (G) then thread the Fixture Loop (G) and the Upper Rod together. Hand tighten until snug.

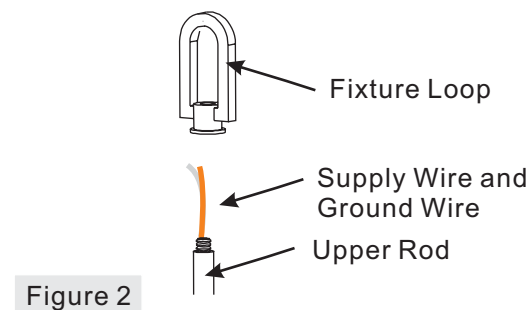

STEP 3 – Attach Crossbar to Outlet Box

 - Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

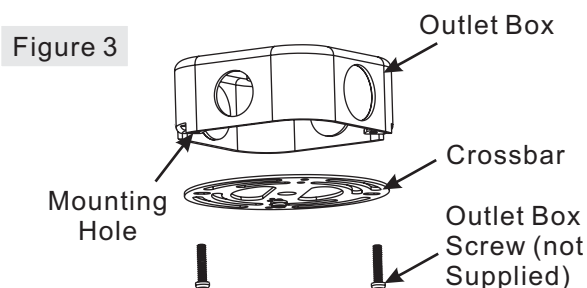

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN

STEP 4 – Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.

 Figure 4

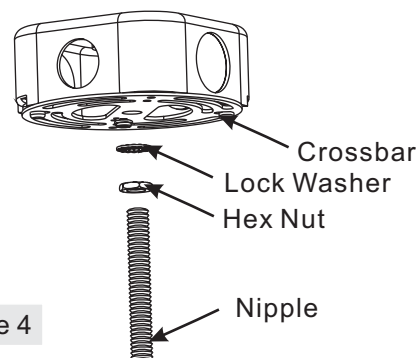

STEP 5 – Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).
- B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (H) onto the end of the Nipple (B).
- C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (H) and hand tighten until snug.

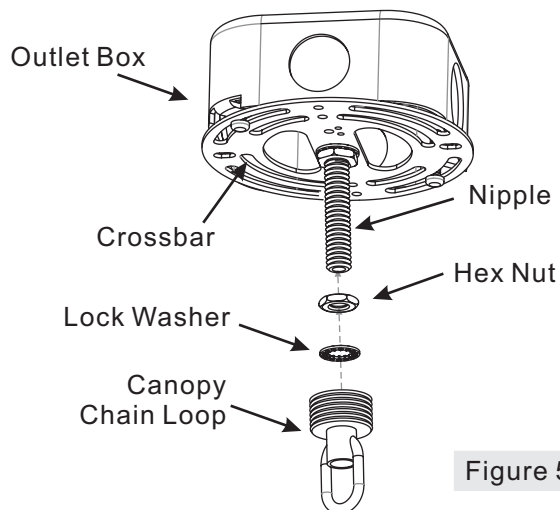 


Figure 5

STEP 6 – Assemble Ceiling Canopy

- A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (I) onto the Canopy Chain Loop (H) and tighten until snug to secure the Ceiling Canopy (E).

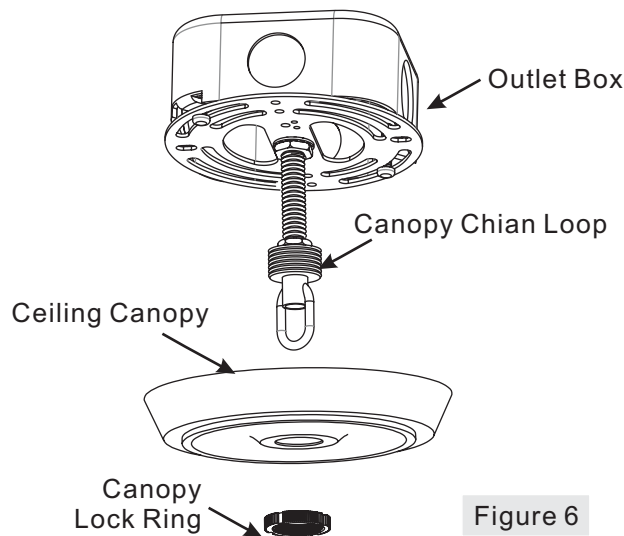 


Figure 6

 
Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN


STEP 7 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. Attach one end of the Fixture Chain (F) onto the Canopy Chain Loop (H) and then attach the other end of the Fixture Chain (F) onto the Fixture Loop (G) on the top of the fixture.

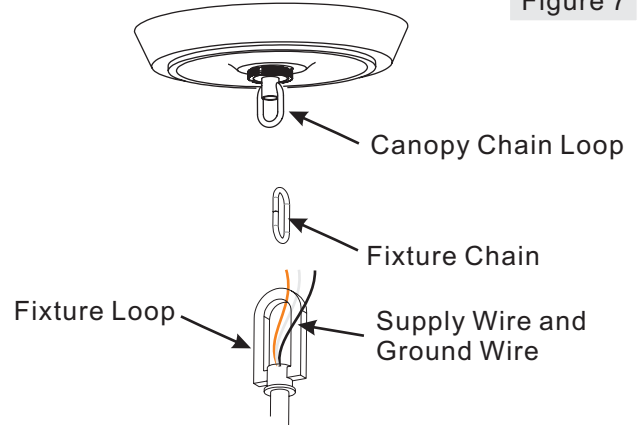

STEP 8 – Pass Supply Wires through Fixture Chain

 - A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (F). Push the wires up through the Canopy Chain Loop (H) into the outlet box.

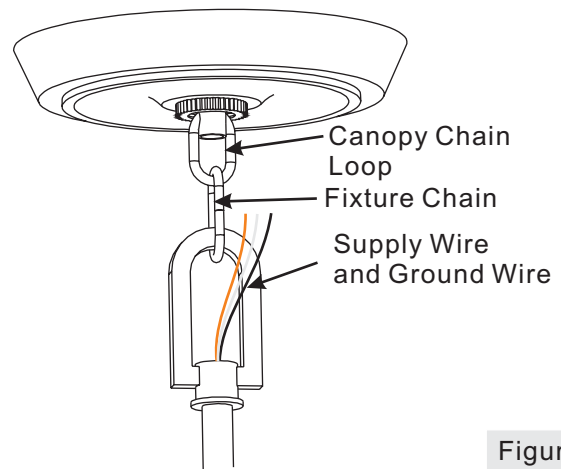

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN

STEP 9 – Make Wire Connections

- Un-thread the Canopy Lock Ring (I) and slide Canopy Lock Ring (I) and Ceiling Canopy (E) down the Fixture Chain.
- Push all slack fixture wire through Canopy Chain Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- Twist connectors until wires are tightly joined together.
- Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- Re-attach the Ceiling Canopy (E) as shown in Step 6.

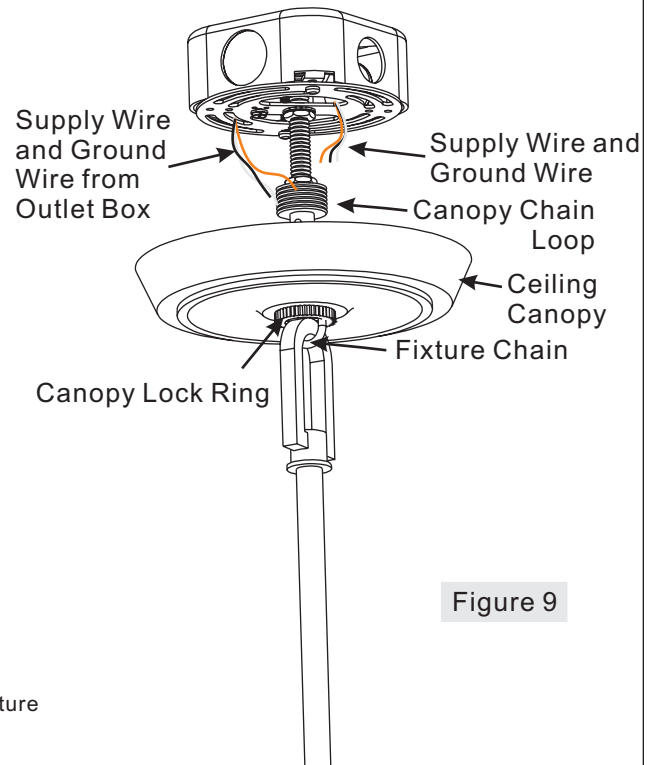 


Figure 9

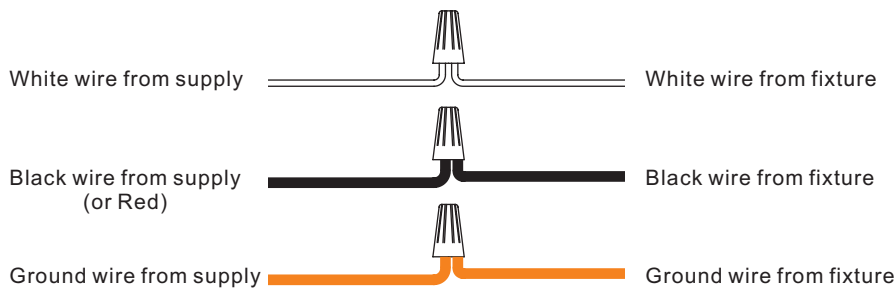 


Figure 10

STEP 10 – Attach Finial to Shade

- Pass one Rubber Washer (Q) over the nipple on the Finial (R). Then place the Finial (R) through the center hole on the Shade (N).
- Pass another Rubber Washers (Q), Flat Washer (P) and Lock Washer (C) over the nipple on the Finial (R). Secure them together by threading Hex Nut (D) onto the Finial (R). Hand tighten until snug.

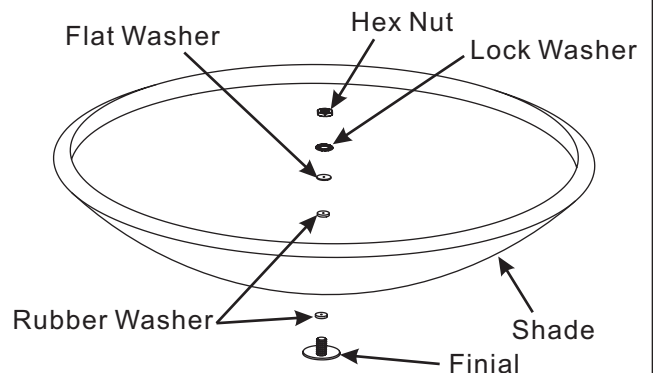 


Figure 11

 
Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-UPWS2822BN For Style UPWS2822BN

STEP 11 – Assemble Shade

- Place the Shade (N) onto the Ring (O) as shown.
- Lift the Ring with Shade upward. Align Mounting Holes on the Ring (O) and the holes on the Tabs.
- Thread Lock Screws (M) into Mounting Holes on the Ring (O) and hand tighten until snug to secure Socket Assembly (L) and the Ring (O) together.

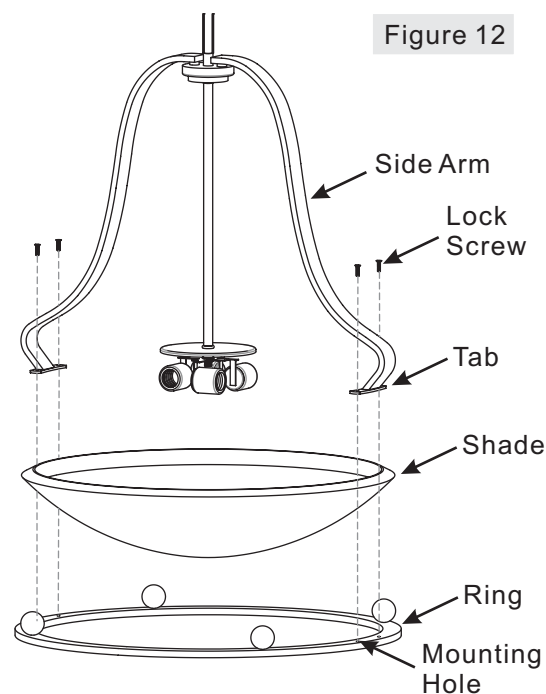

STEP 12 – Install Bulb

- This fixture uses standard bulb with a medium screw base. Maximum 100 watts.
- Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

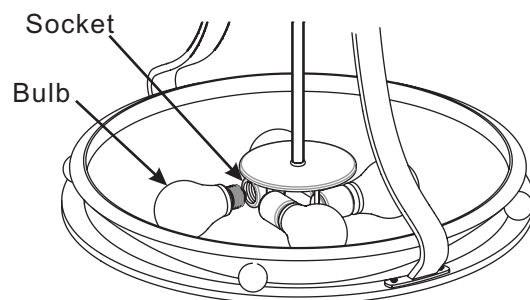 


Figure 13

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com