


ASSEMBLY INSTRUCTIONS FOR YOUR CRICKET ACCENT LAMP

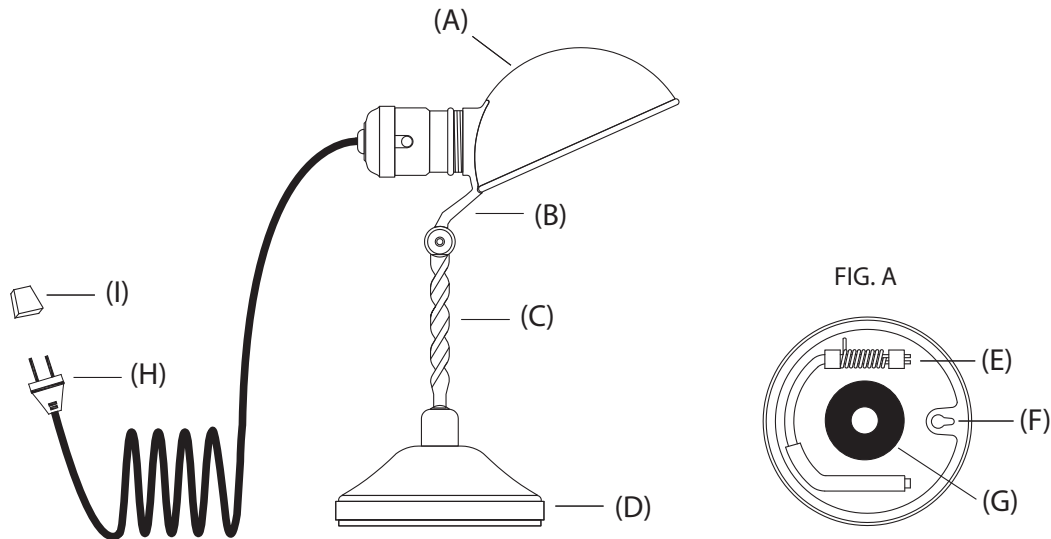

ASSEMBLY INSTRUCTIONS:

FREE STANDING POSITION:

1. Unpack all parts, and remove packing materials.
2. Place base (D) on a level surface.
3. To adjust lamp extension, carefully move column (C) and neck (B) until lamp reaches desired position.
4. Insert one (1) 40W MAX Type B, Standard Base bulb into socket.
5. Remove protective plastic cap (I) from polarized plug (H).
6. Insert polarized plug (H) into wall outlet.

CLIP-ON POSITION:

1. Unpack all parts, and remove packing materials.
2. Remove loader (G) from base (D) by turning loader (G) in counter-clock wise direction.
3. Pull spring clamp (E) into open position. Place base (D) on shelf or other surface, and carefully allow spring clip (E) to move into closed position.
4. Follow steps 3 - 6 from FREE STANDING POSITION instructions, above.

HANGING POSITION:

1. Unpack all parts, and remove packing materials.
2. Remove loader (G) from base (D) by turning loader (G) in counter-clock wise direction.
3. Choose desired location for lamp to hang. NOTE: make sure plug will reach outlet from desired location.
Insert screw (not included) into wall or other surface. Carefully slide tab (F) over screw head to secure lamp to wall or other surface.
4. Follow steps 3 - 6 from FREE STANDING POSITION instructions, above.

Caution: To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.