

# ASSEMBLY INSTRUCTIONS FOR YOUR ALVIN FLOOR LAMP WITH AJUSTABLE TABLE

## ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect to electricity until lamp is fully assembled.  
Unpack and place all parts on a soft surface.

1. Loosen adjustment key (H), insert pole (F) into the center hole of glass tray (G), and tighten with adjustment key (H).
2. Thread top nipple of base (J) into bottom threaded opening of pole (F).
3. Insert harp (C) into harp saddle (D) by squeezing both sides of the harp.
4. Remove finial (A) from harp (C). Place lamp shade (B) onto the bolt attached to top of harp (C). Screw finial (A) onto bolt to secure shade to the harp.
5. Install light bulb Type A, maximum 150 Watts, into socket.
6. Remove protective plastic (L) from electrical plug (K).
7. Plug lamp into wall outlet.

## ADJUSTMENT INSTRUCTIONS

1. Loosen adjustment keys (E) or (H).
2. Adjust lamp or glass tray (G) to desired height.
3. Tighten the adjustment key.

## CAUTION:

TO PREVENT THE LAMP FROM TIPPING OVER, PLEASE DO NOT PUT ANYTHING EXCEEDING 2.2 lbs. (1 kg) ON OR NEAR THE EDGE OF THE GLASS TRAY.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

DO NOT ALTER THE PLUG.

