 
 
ASSEMBLY INSTRUCTIONS FOR YOUR


ALVIN WALL SWINGER

CORD COVER ASSEMBLY INSTRUCTIONS





- 3. Attach fixture (C) to the mounting plate (A). Tighten fixture (C) by the base screws (D).
- 4. Attach cord cover (E,F) to bottom of light base (C) by turning (E,F) in counter-clockwise direction.
- 5. Put harp (J) into harp saddle (H) by squeezing both sides of the harp.
- 6. Remove the finial (L) from the shade harp (J) and attach the lamp shade (K). Secure lamp shade (K) to the shade harp by tightening the finial (L).
- 7. Insert light bulb Type A, maximum 100 watt into the socket.
- 8. Plug lamp cord into wall outlet.

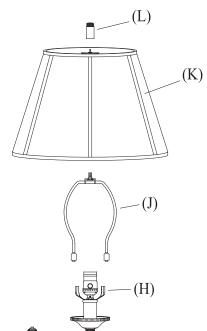

(C)

(O)

 (\acute{D})

(E)

(F)

DIRECT WIRE ASSEMBLY INSTRUCTIONS

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 2. Remove the mounting plate (A) from the base of the lighting fixture (C) by removing the base screws (D).
- 3. Cut the polarized plug from the end of electric cord and remove the cord cover (if attached).
- 4. From the back side of the lamp, pull the electric cord up through the exit hole at the bottom of the backplate.
- 5. Take the screw plug (O) and screw into the hole vacated by the cord.
- 6. Cut the cord to the desired length for making "J" box connection.
- 7. Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate.
- 8. Affix the mounting plate (A) to the wall outlet box with the mounting plate screws (B) provided.
- 9. Connect the copper wire from fixture to ground.
- 10. Connect rough side of wire from fixture to white wire.
- 11. Connect smooth side of wire from fixture to black wire.
- 12. Attach fixture (C) to the mounting plate (A). Tighten fixture (C) by the base screws (D).
- 13. Follow steps 5 7 in *cord cover assembly instructions* above for completion of assembly .