Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR AXIS DOUBLE SHADED PENDANT

OUTLET BOX

-(E)

-(F)

 
(G)

(G)

-(G)

-(H)

IMPORTANT SAFETY INSTRUCTIONS:



* We strongly recommend installation by a licensed electrician.

* Turn off power at switch before replacing bulbs.

ASSEMBLY INSTRUCTIONS:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
- 2. Remove all parts from carton. Do not throw away any parts.
- 3. Remove mounting plate (A) from canopy (C) by removing canopy screws (D). Set canopy screws (D) aside.
- 4. Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
- 5. Measure desired drop for fixture to hang and add/remove extension tubes (E) and (G) as needed. NOTE: At least one extension tube (E) and one extension tube (G) must be used with this fixture. TO ADD/REMOVE EXTENSIONS: Guide wiring through extension tubes before threading tubes together. Thread top extension tube (G) into housing (F). Thread bottom extension tube (G) onto housing (H). Thread canopy (C) onto top extension tube (E). NOTE: Make sure electrical cord is pulled tight when threading extensions together to prevent damage to the wiring.
- 6. Lift canopy (D) to ceiling outlet box and make electrical connections described in steps 7 - 9. A licensed electrician is recommended.
- 7. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (O) and tightly wrap connection with electrical tape.
- 8. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires with wire nut (O) and tightly wrap connection with electrical tape.
- 9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires with wire nut (O) and tightly wrap connection with electrical tape.
- 10. Carefully push wire connections back into ceiling outlet box.
- 11. Place canopy (C) over mounting plate (A). Thread canopy screws (D) into holes in canopy and mounting plate to secure fixture to ceiling.
- 12. Lift shade (L) over bottom section of fixture. Slide split washer (located in the center of the shade frame) between shade washer (I) and shade washer (J). To secure the shade to fixture, turn shade washer (I) clockwise until it rests firmly against the split washer.
- 15. Slide diffuser (M) over threaded tube (K). Hold in place and thread finial (N) back onto tube (K) to secure diffuser to fixture.
- 17. Reconnect main electrical supply from the fuse box/ circuit breaker
- -(L) 13. Install two Type A 100W MAX bulbs into the sockets. 14. Remove finial (N) from threaded tube (K). 16. Repeat steps 12 - 15 to attach the other shade. -(M)□-(N) and test the fixture. ** To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.***