

ASSEMBLY AND INSTALLATION INSTRUCTIONS


H0105

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.


**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

Parts:

Parts Number (4911MM)

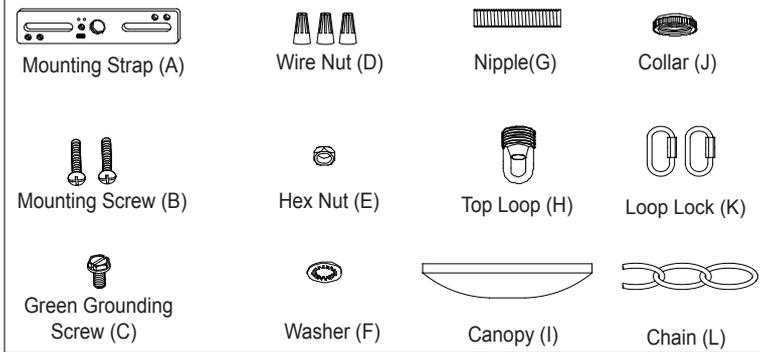

Parts Number (9543EW)

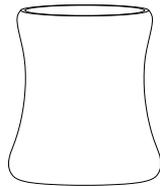


Glass Shade (N) (X5)

1. Attach nipple to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Secure the loop to the stem of the main fixture.
4. Adjust the arms of the fixture according to the drawing of the package.

Important:

- a. The arms should be positioned with equal distances between them.
- b. The arms should be fixed securely.


5. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain. Then connect one end of the chain with the loop by using the loop lock.
6. Secure the top loop to nipple.
7. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple and mounting strap.
8. Connect the other end of the chain with the top loop by using the loop lock.
9. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections by using the wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.

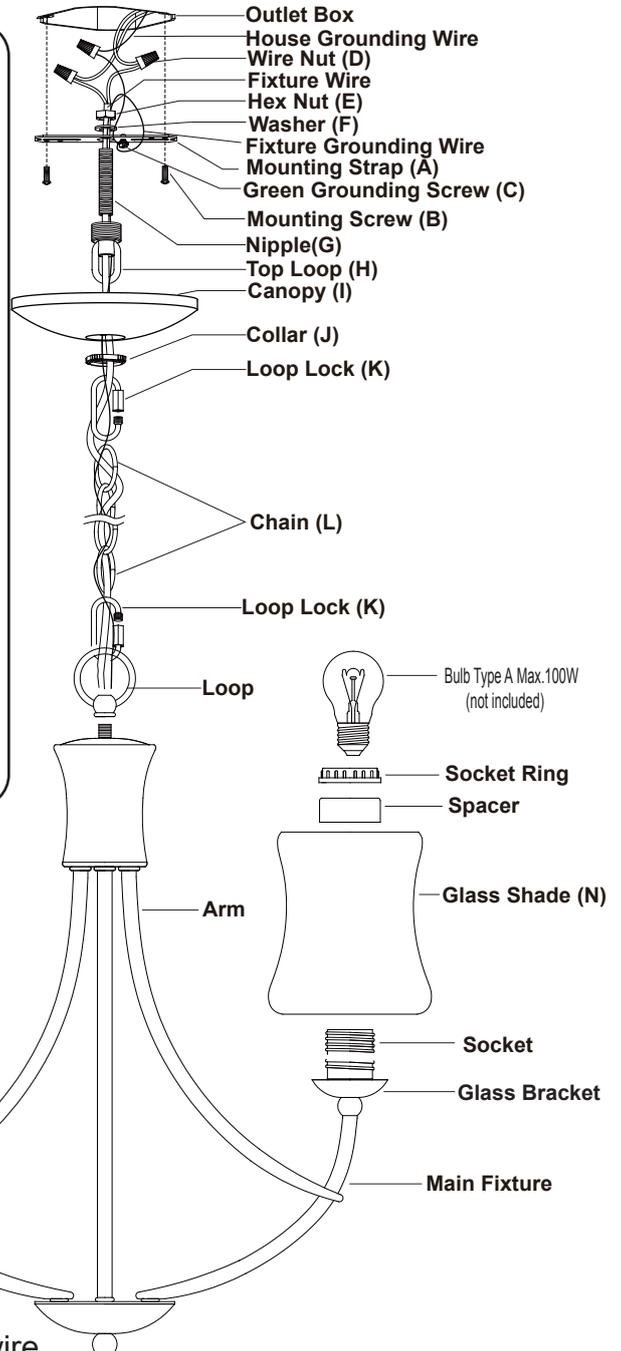

---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.

Carefully put the wires back into the outlet box.

10. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
11. Attach the glass shades onto the glass brackets, secure them with spacers and socket rings.
12. Install bulbs(not included). See relamping label at socket area or packaging for maximum allowed wattage.
13. Turn on the power at the main fuse or circuit breaker box.

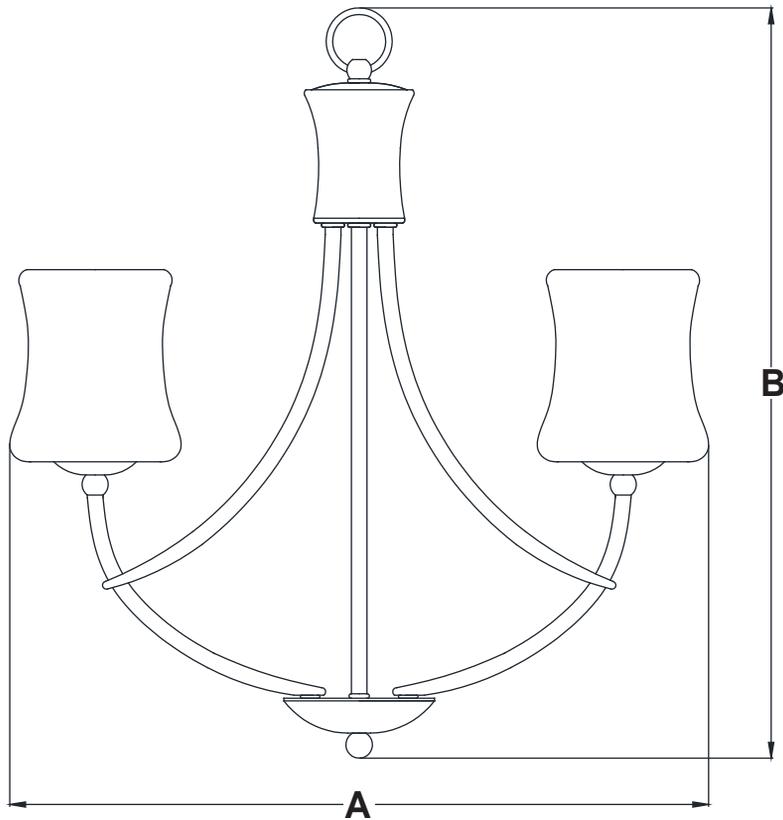

A: 27"

B: 28-1/2"