


ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0327 / T0328

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

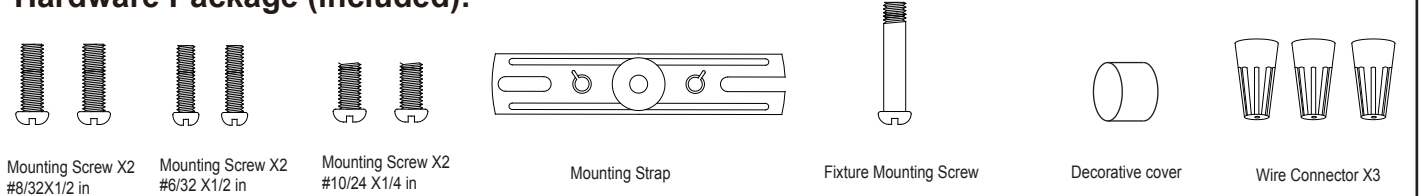

Important to Know:

1. If you are not familiar with state and local electrical codes, it is recommended that you consult with a qualified electrician.
2. This fixture requires a 120 VAC, 60 Hz power source.
3. For general safety and to avoid any possible damage to the photocell, be sure the power is switched "off" before adjustment.

Maximum Wattage: 36 W

Working Temperature Range: - 4°F ~ 113°F


Features:

1. Energy saving LED fixture.
2. Photocell keeps the light OFF during daylight hours.

Note: Fixture can be wall mounted or eave mounted.



Light fixture and sensor should be mounted as shown above when installed (depending upon type of installation).

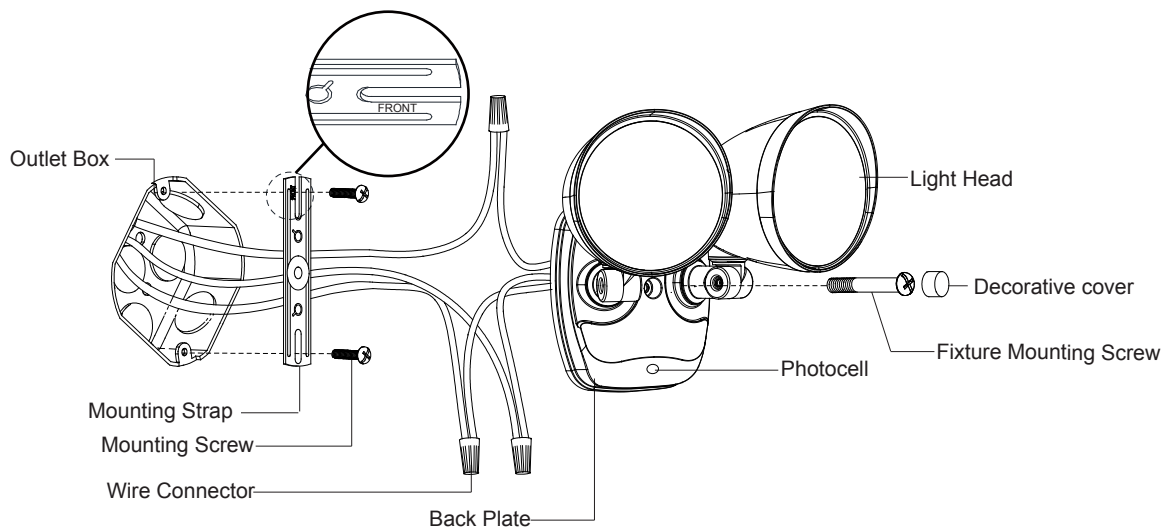

IMPORTANT:

The fixture features a photocell sensor which enables the light to turn on at dusk and off at dawn automatically.

Installation Steps

Turn off the power at fuse or circuit box.

1. Install the mounting strap to the outlet box with the stamped word "FRONT" facing away from the outlet box, using two mounting screws that best fit the outlet box. Back plate should sit flush against wall surface when secured. (Choose one matching pair of suitable mounting screws from the 3 pairs provided)
2. Pull out the source wires from the outlet box. Make wire connections using wire connectors as follows:
 - Connect the black wire from the fixture to the "hot" wire from the power source. (usually black)
 - Connect the white wire from the fixture to the neutral wire from the power source. (usually white)
 - Connect the grounding wire from the fixture to the grounding wire from the power source. (usually green / yellow insulation)

Carefully tuck the wires back into the outlet box.

3. Attach the back plate of the light to the mounting strap, secure it with the fixture mounting screw.
4. Push the decorative cover firmly into the fixture mounting screw hole on the light.
5. With silicone caulking compound, caulk completely around where the back plate meets the wall surface.

CAUTION: Be sure to caulk completely where the back plate meets the wall surface to prevent water from seeping into the outlet box.

6. Gently grasp the light heads and move them up or down, left or right to adjust the light coverage area. Keep the light heads 30° below horizontal to avoid water damage and electrical shock.

Turn on the power at fuse or circuit box.


Note: When power is first applied, the light will turn on immediately. Wait for 30 seconds to allow the sensor to warm up.

Troubleshooting

---The light does not come on at all:

1. Make sure the wall switch and circuit breaker are on.
2. Make sure the wiring is correct.

The following parts are available for re-order if damaged or missing.

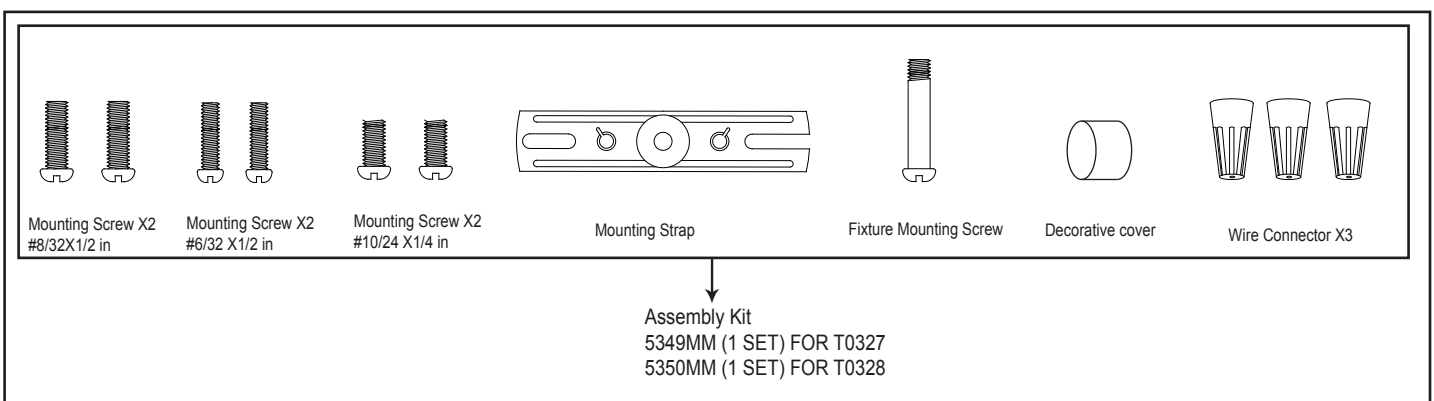

5-YEAR LIMITED WARRANTY:

All products are warranted to be free of defects in material and workmanship for five (5) years from date of purchase. This warranty is limited to the correction of any such defect, or the replacement of any such defective item(s), provided that: (a) we are properly notified and consent to return of the item(s) in question; (b) the item (s) is / are returned with proof of purchase date; and (c) it is found upon inspection by us that the item (s) is / are defective as noted above. This warranty does not cover labor costs, consequential damages, nor does it apply to any item(s) that have been improperly installed, overloaded, altered, or otherwise abused by the customer, its agent(s) or employee(s). Finishes are specially excluded from the terms of this warranty since they are subject to environmental maintenance deemed beyond our control. Other than the described obligation, we assume no further liability with respect to the sale or use of our products. We make no warranty, express or implied, and disclaim any warranty of merchantability or fitness for a particular purpose.

