


ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0472

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included):

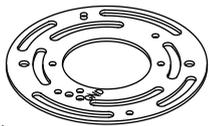


Mounting plate (A)



Mounting Screw (B)



 Wire Connector (C)



Headless screw (D)



Green Ground Screw (E)



Lock Nut (F)



Bolt Nut (G)


Installation Steps

Turn off the power at fuse or circuit box

1. Thread two headless screws (D) through the mounting plate (A), and then secure them with four lock nuts (F) (two on each side of the mounting plate (A).) Adjust the length of the headless screws (D) if necessary.


Note: Make sure the headless screws are lined up horizontally to make the fixture level.

2. Attach the mounting plate (A) to the outlet box by using two mounting screws (B).
3. Pull out the source wires from the outlet box, make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).Carefully put the wires back into the outlet box.
4. Attach the ceiling plate to the mounting plate (A) by inserting headless screws (D) into the center holes of the ceiling plate and screw two bolt nuts (G) to secure the ceiling plate.

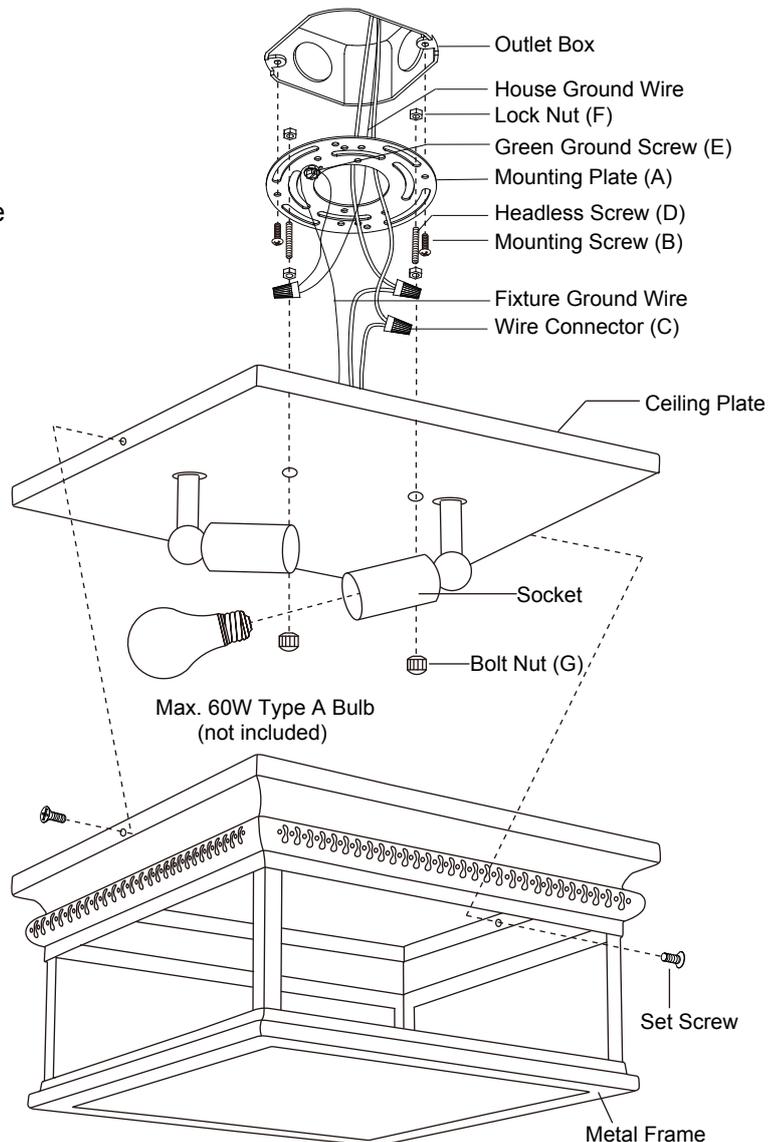

5. Install two bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.

6. Place the bottom glass into the metal frame, then secure it with eight clips which on the bottom of the metal frame. Place the side glass panels into the metal frame, then press the clips which on the top and bottom of the metal frame to secure the side glass panels. (See Fig. 1)

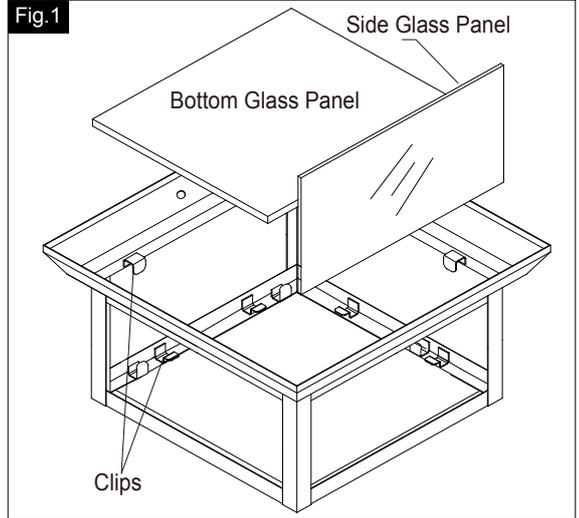

Note: The patterned side of glass faces out .

7. Attach the metal frame to the ceiling plate, then secure it with two set screws.

Turn on the power at fuse or circuit box

The following parts are available for reorder if damaged or missing.


Spare Parts List:

Mounting plate (A) Mounting Screw (B) Wire Connector (C) Headless screw (D)

Green Ground Screw (E) Lock Nut (F) Bolt Nut (G)

Mounting Hardware 6060MM (1SET)

Side Glass Panel 10078W Bottom Glass Panel 10077W

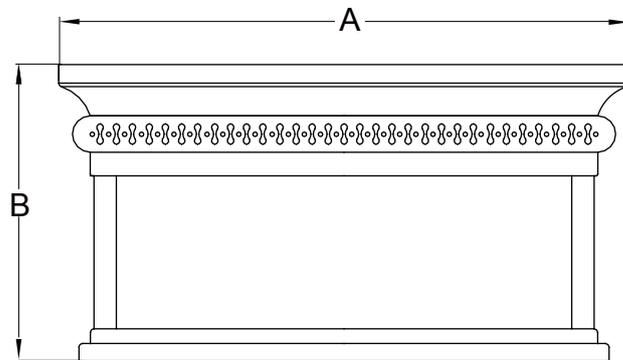

A: 12"

B: 6-1/2"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
 1-800-482-9235