


## ASSEMBLY & INSTALLATION GUIDE

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

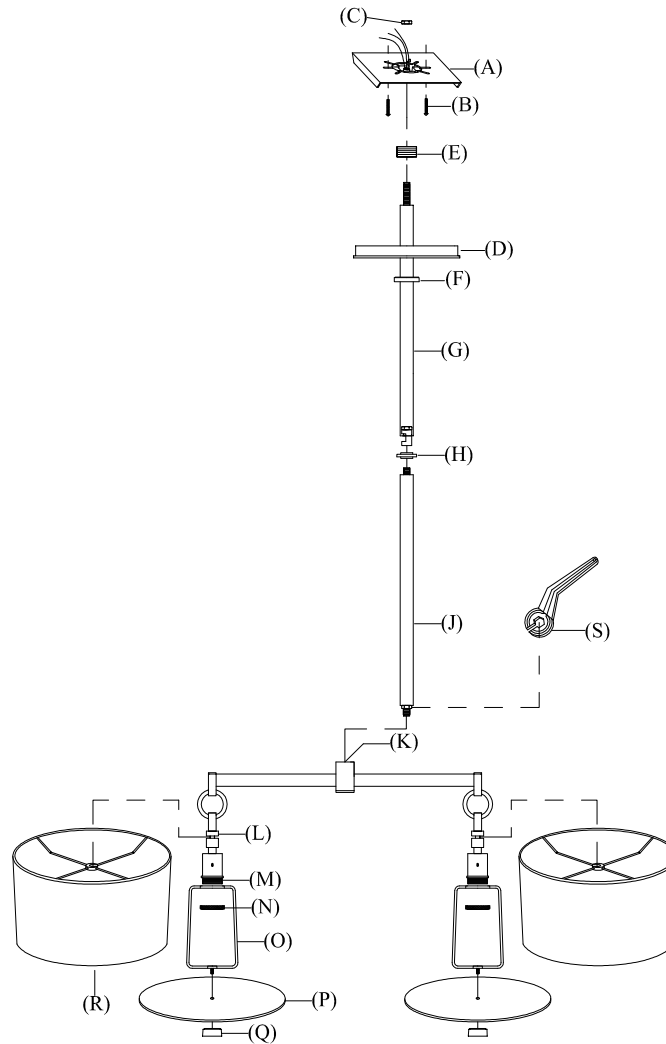

1. Thread the inner rod of (J) into top opening of (L). Tighten with wrench (K) provided.
2. Place part (H) on top of (J), screw hex connector on bottom of (G) onto the inner rod pass through (H).
3. Slide canopy ring (F) and canopy (D) on the connection pole (G).
4. Thread inner rod of (G) into mounting loop (E), and center hole of mounting plate (A), screw hex nut (C) onto the exposed section of the inner rod until tight.
5. Affix mounting plate (A) onto ceiling outlet box and secure with mounting screws (B).
6. Attach the ground wire (silver or brass in color) from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
7. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
8. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical type. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
9. Slide canopy (D) to the affixed mounting plate (A), and secure the canopy ring (F).
10. Slide shade spider (locate inside of shades (R)) on threaded section in between the rings (L) and secure by turning rings (L) in clockwise direction.
11. Remove socket rings (N) from sockets (M).
12. Attach harps (O) to top of sockets (M), and secure socket rings (N) on it.
13. Attach diffusers (P) to top of harps (O), and secure the finials (Q) on it.
14. Insert light bulbs into sockets.
15. Restore power and test fixture. Enjoy your ceiling fixture.