
CHD2359

ASSEMBLY & INSTALLATION GUIDE

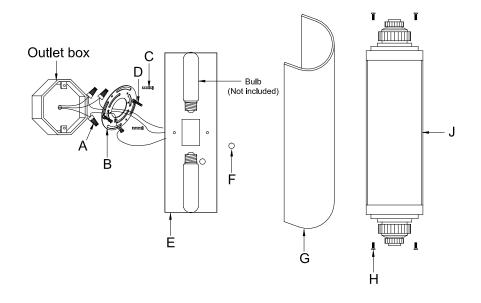

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Carefully remove the back plate (E) from the metal frame(J) by side screws(H).
- 2. Secure the mounting plate(B) to the outlet box in your wall using the two mounting screws(C).
- 3. Connect the Ground (bare) fixture wire with the ground (usually bare) wire from your ceiling box using wire nut(A).

 If your house does not have ground wire, then attach this wire to the green grounding screw inside of outlet box.
- 4. IT IS IMPERATIVE THAT THE Outlet BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 5. Connect the Neutral (ribbed edge, no markings, or white) fixture wire with the Neutral (usually white) wire from your ceiling box using wire nut(A).
- 6. Connect the Hot (smooth edge, markings, or black) fixture wire with the Hot (usually black) wire from your outlet box using wire nut(A).
- 7. IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES. OR SAFETY WILL BE COMPROMISED.
- 8. Carefully tuck the wires inside the outlet box. Make sure no wires can be pulled out.
- 9. Secure the back plate (E) to the mounting plate(B) using the two ball nuts(F).
- 10. Insert light bulbs (not included) into sockets.
- 11. Inset the glass shade (G) to the metal frame(J) and secure the glass by bending the tabs.
- 12. Secure the fixture (J) into back plate(E) by side screws(H).
- 13. Installation is complete, turn on power at fuse or circuit breaker.