

I Light Table Lamp

10202_

1.0

FEISS®

EST. 1955

Table Lamp


GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

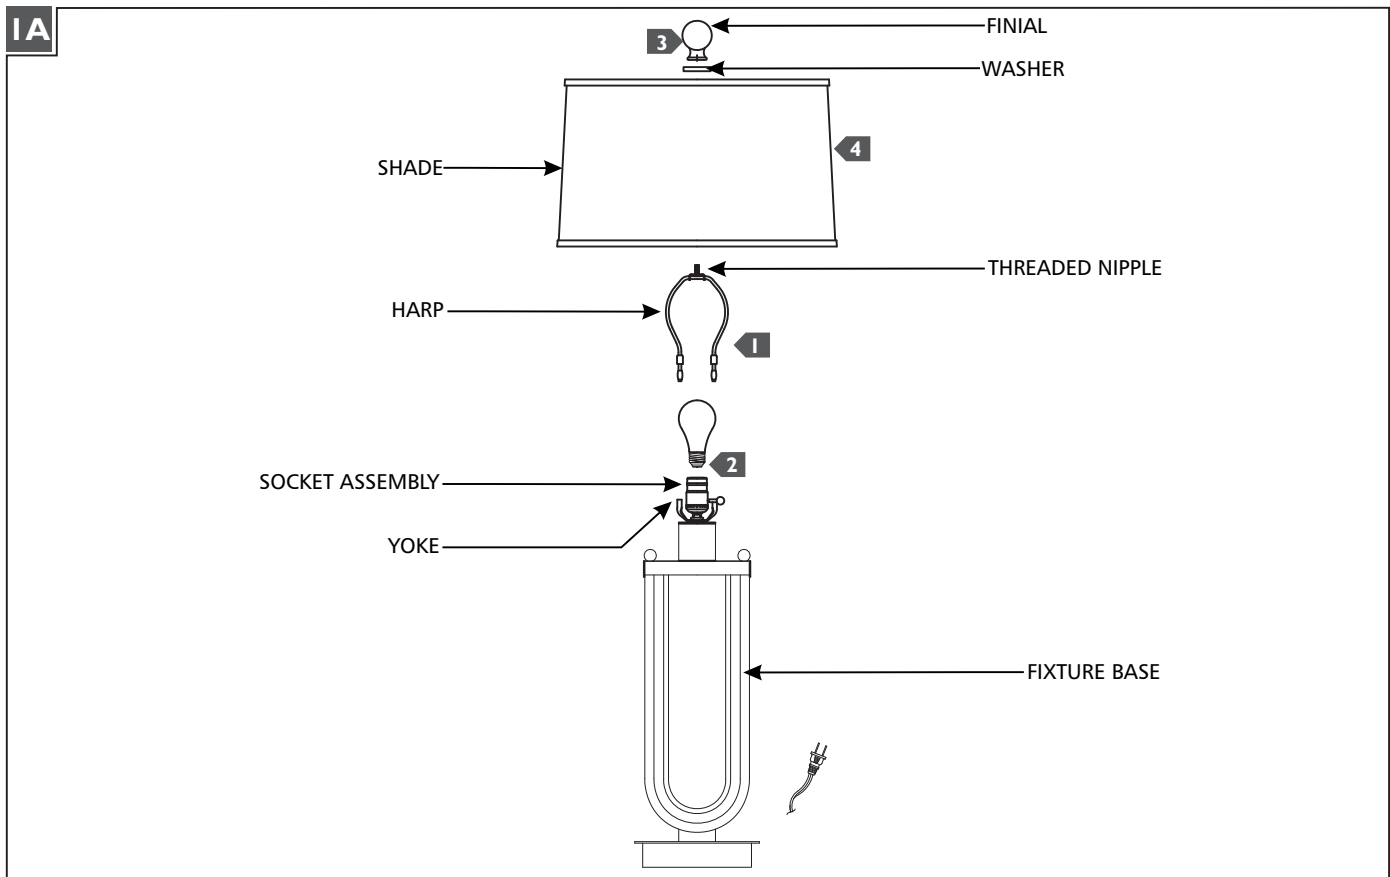


- 1** Install the harp by inserting it in the yoke.
- 2** Install lamp by screwing it into the socket. Refer to the label on the lamp socket for Max Wattage information.
- 3** Unscrew the finial from the harp and remove the washer.
- 4** Install the shade by placing the shade over the threaded nipple, re-installing the washer, and re-tightening the finial to secure the shade.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Cette baladeuse possède une fiche polarisée (une lame est plus large que l'autre) par mesure de sécurité pour réduire le risque de choc électrique. Cette fiche s'adaptera dans une prise polarisée que dans un sens. Si la fiche n'entre pas complètement dans la prise, inversez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'utilisez jamais de rallonge à moins que le bouchon peut être insérée complètement. Ne pas tenter de vaincre cette fonctionnalité de sécurité.

IA

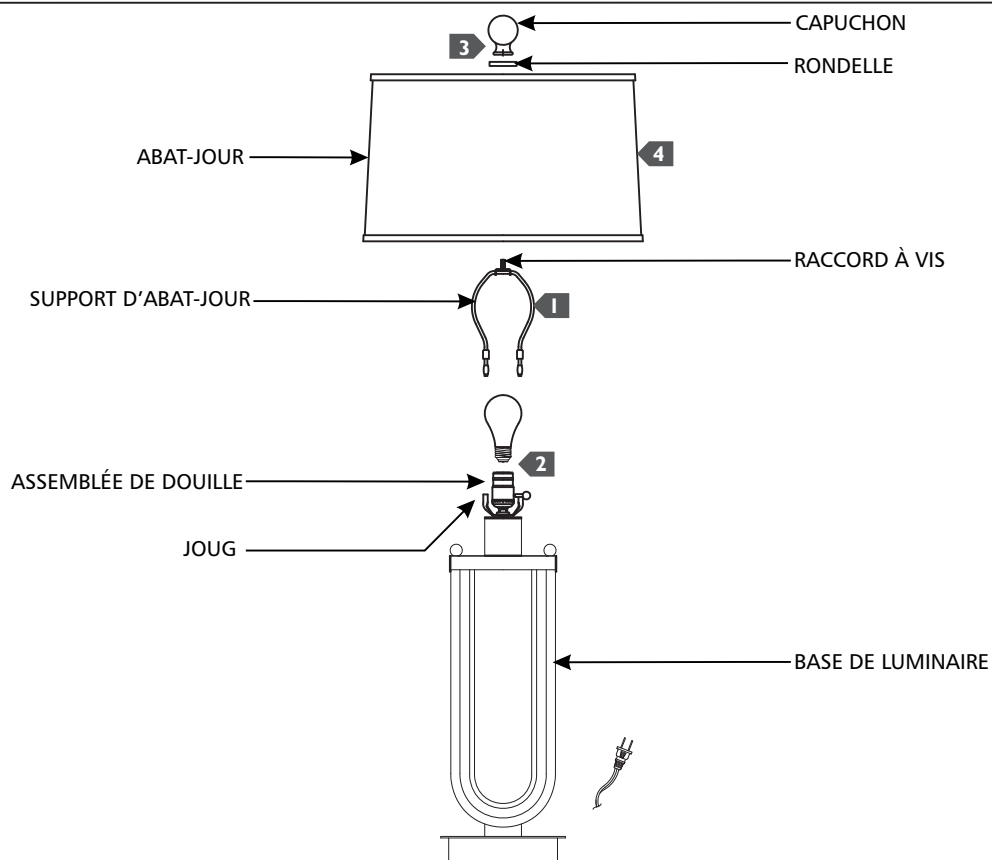


- 1** Installez la harpe en l'insérant dans le joug.
- 2** Installer lampe en le vissant dans la douille. Se référer à l'étiquette sur la douille de lampe pour informations Max Wattage.
- 3** Dévissez l'embout de la harpe et enlevez la rondelle.
- 4** Installez l'ombre en plaçant l'ombre sur le raccord, re-installation de la machine à laver et resserrer le fleuron pour sécuriser l'ombre.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Esta lámpara portátil tiene un enchufe polarizado (una clavija es más ancha que la otra) como medida de seguridad para reducir el riesgo de choque eléctrico. Este enchufe encajará en un tomacorriente polarizado solamente de una manera. Si el enchufe no encaja en el tomacorriente, invierta el enchufe. Si todavía no encaja en contacto con un electricista calificado. Nunca use un cable prolongador a menos que el enchufe se puedan insertar completamente. No trate de derrotar a esta característica de seguridad.

IA

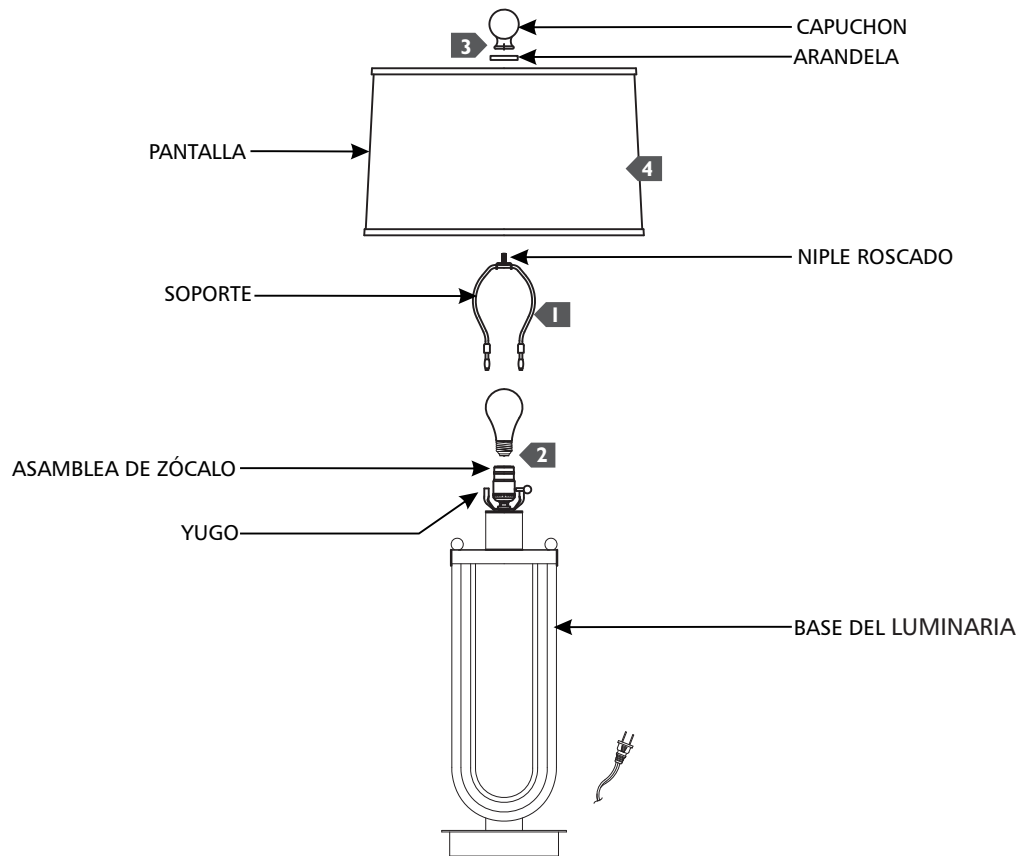

- 1** Instale el soporte en el yugo.
- 2** Instale la lámpara enroscándolo en el zócalo. Consulte la etiqueta en el zócalo de la lámpara para información de Max Wattage.
- 3** Desenroscar el capuchón de el soporte y retire la arandela.
- 4** Instalar la cortina colocando la sombra sobre el niple roscado, volver a instalar a la lavadora, y volver a apretar el remate para asegurar la sombra.

SAVE THESE INSTRUCTIONS!

FEISS[®]

EST. 1955

555 Theodore Fremd Ave Suite B101 Rye, NY 10580

800.969.3347

www.Feiss.com

© 2013 Feiss. All rights reserved. The "Feiss" graphic is a registered trademark of Feiss. Feiss reserves the right to change specifications for product improvements without notification.

A Generation Brands Company