

I Light Table Lamp

10210_ 1.0

FEISS®

EST. 1955

Table Lamp


GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

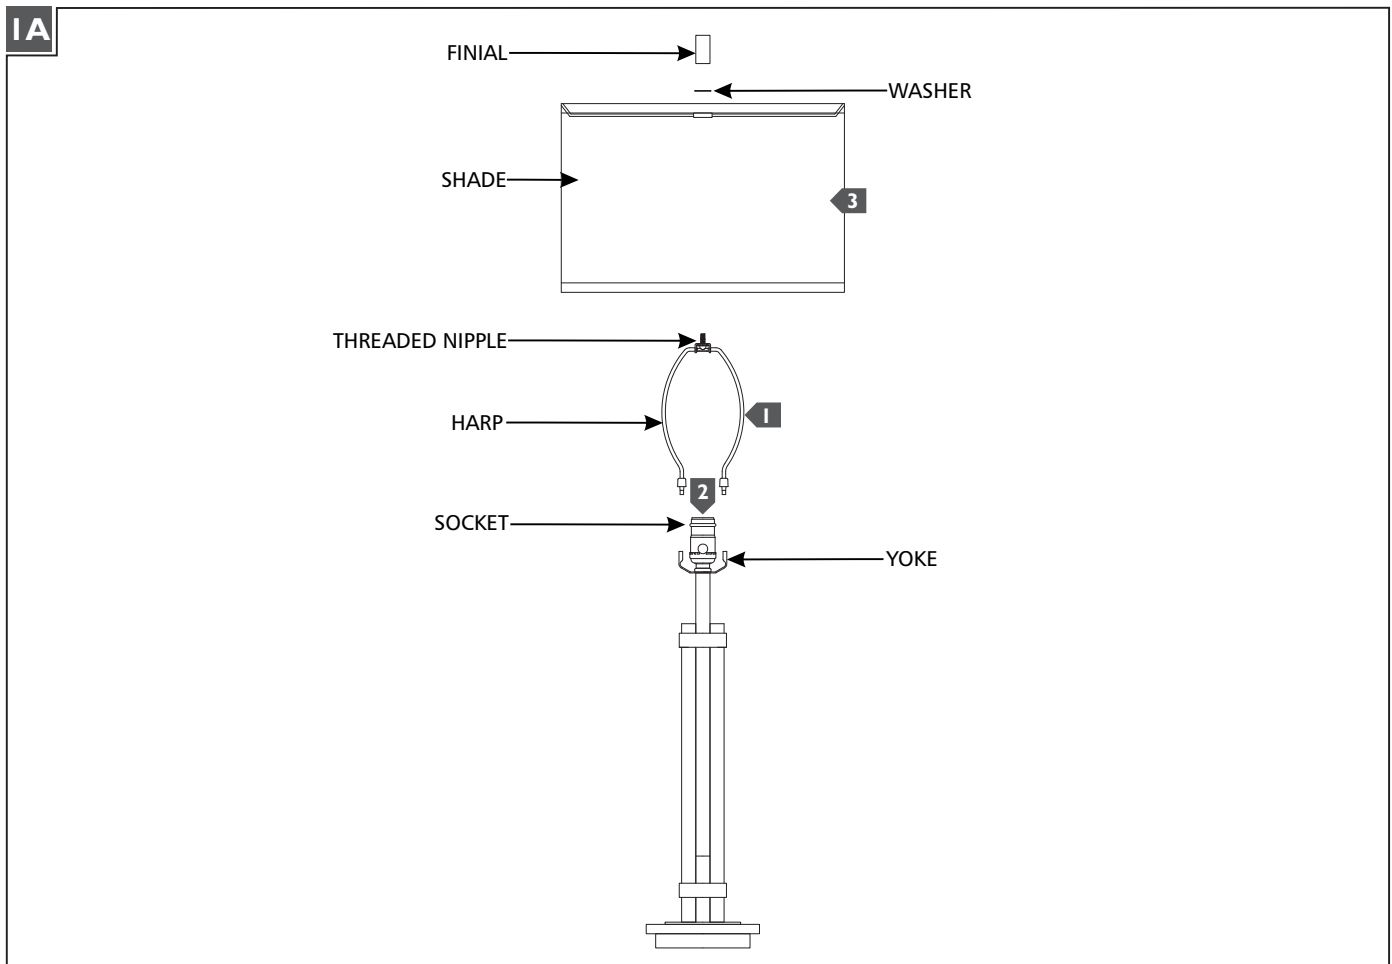


- 1** Place the harp into the yoke.
- 2** Install lamp by screwing it into the socket. Refer to the label on the lamp socket for Max Wattage information.
- 3** Install the shade by unscrewing the finial from the harp, removing the washer, placing the shade over the threaded nipple, placing the washer onto the threaded nipple, and tightening the finial back in place.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Cette baladeuse possède une fiche polarisée (une lame est plus large que l'autre) par mesure de sécurité pour réduire le risque de choc électrique. Cette fiche s'adaptera dans une prise polarisée que dans un sens. Si la fiche n'entre pas complètement dans la prise, inversez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'utilisez jamais de rallonge à moins que le bouchon peut être insérée complètement. Ne pas tenter de vaincre cette fonctionnalité de sécurité.

IA

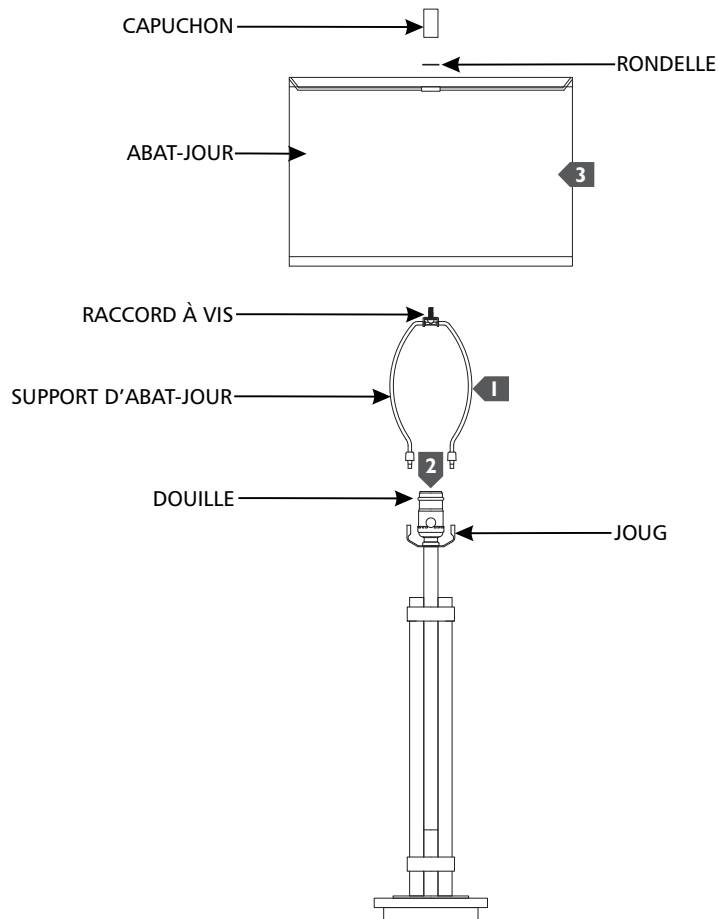


- 1** Placez la harpe dans le joug.
- 2** Installer lampe en le vissant dans la douille. Se référer à l'étiquette sur la douille de lampe pour informations Max Wattage.
- 3** Installez l'ombre en dévissant le fleuron de la harpe, retirer la rondelle, plaçant l'ombre sur le raccord, placer la rondelle sur le mamelon fileté et serrer l'embout en place.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Esta lámpara portátil tiene un enchufe polarizado (una clavija es más ancha que la otra) como medida de seguridad para reducir el riesgo de choque eléctrico. Este enchufe encajará en un tomacorriente polarizado solamente de una manera. Si el enchufe no encaja en el tomacorriente, invierta el enchufe. Si todavía no encaja en contacto con un electricista calificado. Nunca use un cable prolongador a menos que el enchufe se puedan insertar completamente. No trate de derrotar a esta característica de seguridad.

IA

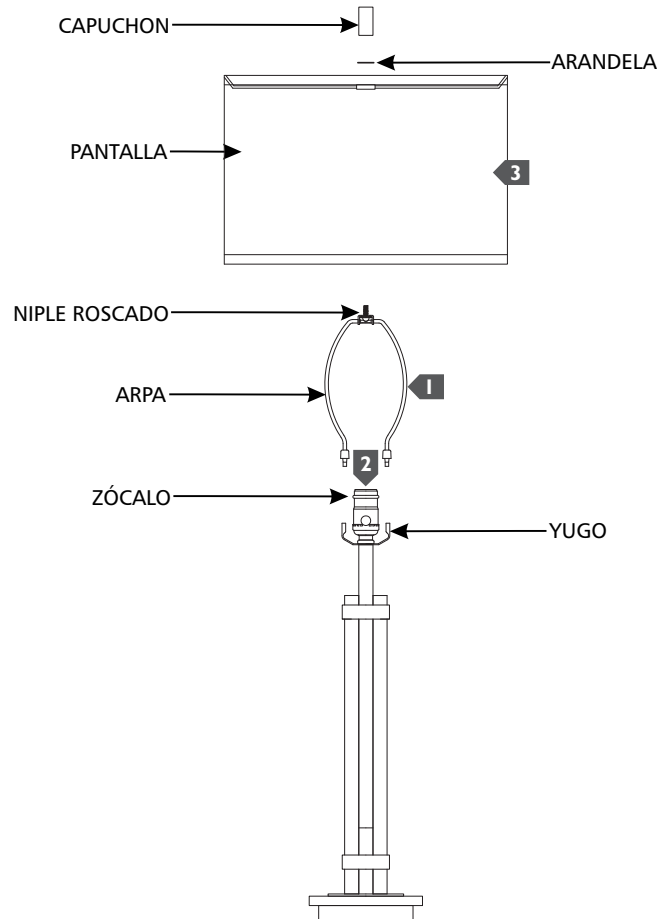

- 1** Coloque el arpa en el yugo.
- 2** Instale la lámpara enroscándolo en el zócalo. Consulte la etiqueta en el zócalo de la lámpara para información de Max Wattage.
- 3** Instale la pantalla desenroscando el remate de la arpa, retirar la arandela, colocando la sombra sobre el niple roscado, colocando la lavadora al niple roscado y apretar el remate en el lugar.

SAVE THESE INSTRUCTIONS!

FEISS[®]

EST. 1955

555 Theodore Fremd Ave Suite B101 Rye, NY 10580

800.969.3347

www.Feiss.com

© 2013 Feiss. All rights reserved. The "Feiss" graphic is a registered trademark of Feiss. Feiss reserves the right to change specifications for product improvements without notification.

A Generation Brands Company