

CRYSTORAMA


95 Cantiague Rock Road, Westbury NY 11590
 ph:516.931.9090 fax:516.931.1254
 info@crystorama.com www.crystorama.com

MODEL#: 1579-CH-MWP


ASSEMBLY AND DRESSING INSTRUCTIONS

IMPORTANT

TURN OFF THE POWER AT THE MAIN
 FUSE OR CIRCUIT BREAKER BOX
 BEFORE STARTING INSTALLATION

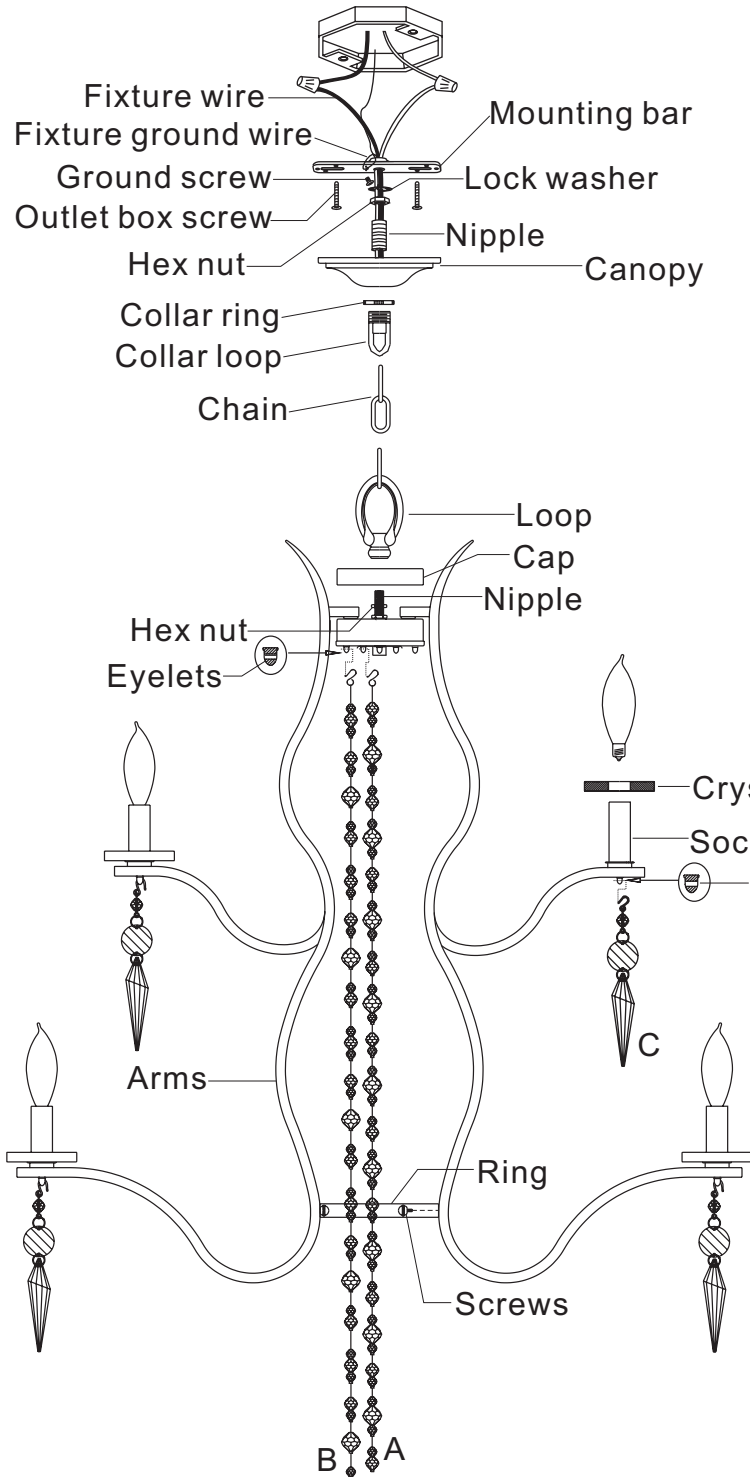

You will need 12-Cand.BULB
 40 watts Recommended
 60 watts Max
 Bulb not included

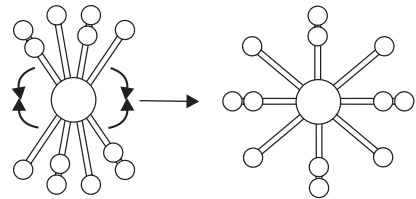

Spread the arms so that the arms are at equal
 distance from each other.

A= (SS10mmx10pcs+GS10mmx18pcs
 +14mmx10pcs+20mmx9pcs)x6pcs

B= (SS10mmx10pcs+GS10x10pcs+
 14mmx14pcs+20mmx5pcs)x6pcs

C= (SS10mm+SS25mm+76mm)x12pcs

(HANG A AND B ALTERNATELY)