

PARTS & ASSEMBLY SHEET

Fixture Name: Torbellino 8106-BA2 CDB

This fixture assembled PO: Date:	
----------------------------------	--

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

Company Name:		Co. Account #:		
to be filled out b	y retailer			
Mounting screws	фф	Wire connencors		
4ea 8/32T*1-1/4"L		3ea Orange		
Deco nut		Finials		
2ea Ф12*10hmm		2ea Ф36*55hmm		
		Quantity		
		Quantity		
Reason why (missing, scratched, broken glass, bent, bad finish) Comments				
	to be filled out be Mounting screws 4ea 8/32T*1-1/4"L Deco nut 2ea Φ12*10hmm	to be filled out by retailer Mounting screws 4ea 8/32T*1-1/4"L Deco nut 2ea Φ12*10hmm	to be filled out by retailer Mounting screws Wire connencors 4ea 8/32T*1-1/4"L 3ea Orange Deco nut Finials 2ea Φ12*10hmm 2ea Φ36*55hmm Quantity Quantity	


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

- 1. Attach the Finials(I) to each end of the bath bar(J) by twisting in a clockwise direction.
- 2. Place the Glass Shade(F)over the Socket (G).
- 3. Holding the Glass Shade(F), place the Socket Washer(I)over the Threaded Socket(G).
- 4. Secure Glass Shade(F) and Socket Washer (I) by threading the Socket Ring(H) onto the Threaded Socket(G) until tight.
- 5. Install the light bulb in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING!)
NOTE: INSTALL THE GLASS ASSEMBLY
AFTER THE FIXTURE IS HUNG.

8106-BA2 CDB

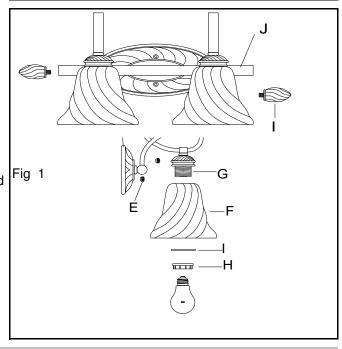

For Customer Service, contact the place of purchase to arrange for replacement parts.



INSTALLATION INSTRUCTIONS

Fixture Name:

Torbellino 8106-BA2 CDB

For Wall Mount Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE(Fig.1)

- 1.Carefully remove the new fixture from the carton and the yellow bag that holes all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from wall, including the old mounting strap.
- 3. The Mounting Strap(A) contains several pairs of threaded holes, find the pair of holes that match the holes spacing in your fixture Back Plate(D) and thread the two Mounting Screws(C) half way into the Mounting Strap(A).
- 4.Place the Mounting Strap(A)over the Junction Box so the Mounting Screws(C) are vertical or horizontal, as required by fixture type.
- 5.Attach the Mounting Strap(A) to the Junction Box using the two mounting screws(B). Tighten the screws(B) securely with screw driver.

CONNECTING THE WIRES (Fig 2)

- 6. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 7. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (B) or connect both wires together using the correct size of wire connectors.

NOTE:Twist the wires together in the same direction you twist the wire connector onto the wires.

8. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION(Fig.3)

9. After tucking these wire connections neatly into the Junction Box and place the fixture Back Plate(D) over the two Mounting Screws(C) and secure the Back Plate(D) against the wall by threading two Deco Nuts(E) over the two Mounting Screws(C) until tight as shown on Fig.1.

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.

