

PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-SF SBZ

This fixture assembled PO:_____ Date: ____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name:		Co. Account #:	
		to be filled out by reta	niler		
Canopy		Mounting Screws		Тор Іоор	
1ea ø5"*H1"		2ea 8#32-IP*1"		1ea 1/8-IP*H60mm	
Chain		Wire connectors		Nipple	
1ea 6ft Ø4.2		3ea P3 Orange		1ea 1/4-IP*H50mm	
Chain connector		Canopy loop with Collar		Mounting strap	
2ea Ø5.8*H61mm		1ea Ø1-1/8"*H42mm	_	1ea W4-1/8"*E1"*H5mm	00
Сар		Nipple		Bottom cap	
1ea Ø1-1/2"*H5mm		1ea 1/8-IP*H110mm		1ea Ø2-1/4"*H16mm	
Finial		Hex Nut		Mounting Screws	(
1ea 1/8-27-IP*H18mm		1ea 1/8-IP*H4mm		2ea 5/32-IP*1-3/4"	
Mounting Strap	99000	Mounting Screws	(Deco Nut	
1ea ø4"*H2mm		2ea 8#32-IP*1"		2ea 5/32-IP*H9mm	
Hex Nut					
2ea 5/32-IP*H3mm					
Part Needed				Quantity	
Part Needed				Quantity	
	(missing, scratch	ed, broken glass, be	ent, bad finish)		

FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

8995-SF SBZ

ASSEMBLING THE FIXTURE as Semi flush

1. The fixture is shipped ready to install as Semi Flush.

Continue with the glass assembly at step 9~12 after installation.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

For Customer Service, contact the place of purchase to arrange for replacement parts.


PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-SF SBZ

ASSEMBLING THE FIXTURE as Chain hung (Fig.1)

- 1. Remove the Circular strap from top of Fixture and replace the long mounting screws with two short screws to hold the Deco nuts (E) in place on the fixture Top cap (M).
- 2. Feed the fixture wires through the Top loop (N) and pull the wires until taut. Then screw the Top Loop (N) to the coupling on the top of fixture (M) until tight.
- 3. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 4. Use one chain connector (L) to attach one end of the chain to the Top loop (N) and close the chain connector.
- 5. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 6. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 7. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 8. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- *You may now hang the fixture
- 9. Thread Nipple (T) to coupler (R) in socket assembly, secure with hex nut.
- 10. Install the light bulbs in accordance with the fixture's specifications.
- 11. Install Glass Shade (S) and place Cap (U) to hold Glass (S), lock until tight with Hex Nut (V).
- 12. Finally install Bottom Cap (W), lock until tight with Finial (X).

DO NOT EXCEED MAXIMUM WATTAGE RATING!

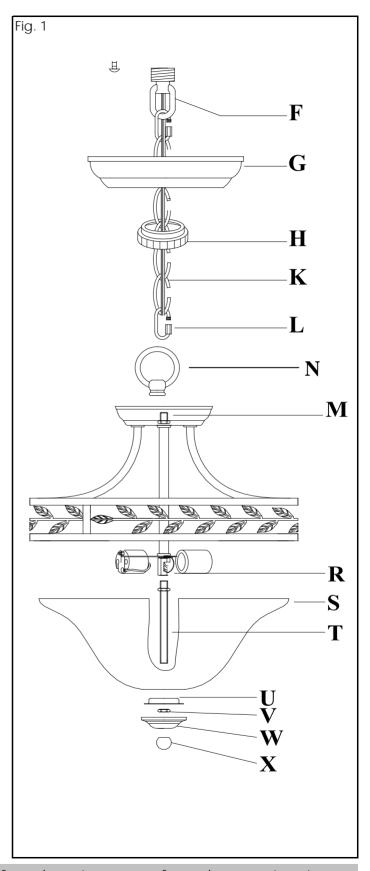

For Customer Service, contact the place of purchase to arrange for replacement parts.



INSTALLATION INSTRUCTIONS

Fixture Name:

Woodbriar 8995-SF SBZ

For

Semi Flush / Convertible Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE as Semi flush (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
- 3. The Circular Strap (A) contains several pairs of threaded holes, find the pair of holes that match the hole spacing in your fixture Back Plate (D) and thread the two Mounting Screws (C) half way into the Mounting Strap (A) facing down, Secure in place with hex nuts. These will have their threaded ends protrude through the two holes in the fixture canopy(D).
- 4. Place the Mounting Strap (A) over the junction
- 5. Attach the Mounting Strap (A) to the Junction Box using the two mounting screws (B). Tighten the screws (B) securely with screw driver.

CONNECTING THE WIRES (Fig 2)

- 6. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 7. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (B) or connect both wires together using the correct
- **NOTE**: Twist the wires together in the same direction you twist the wire connector onto the wires.


 8. Tuck these wire connections neatly into the Junction Box.


FINISHING THE INSALLATION (Fig.3)


size of wire connectors.

- 9. Place the fixture's canopy over the Mounting Strap (A) and over the Mounting Screws (C), adjust the fixture canopy (D) until the Mounting Screws (C) protrude out from the canopy (D) and secure the fixture against the ceiling by threading the decorative nuts(E) until tight.
- 10. Install the light bulbs and glass shade as per the fixture assembly sheet.

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.

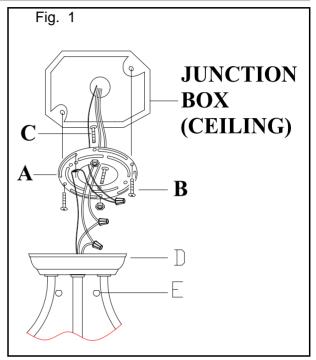

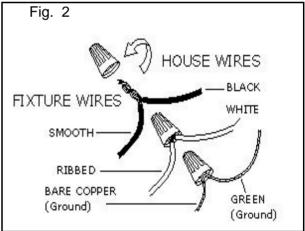

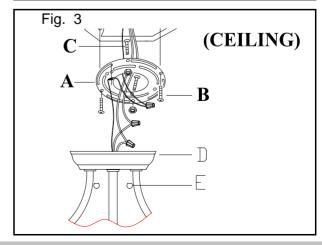

INSTALLATION INSTRUCTIONS

Fixture Name: Woodbriar 8995-SF-SBZ

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple (C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)


- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) onto the Canopy Loop (F)
- 14. Install the light bulbs and glass shade as per the fixture assembly sheet.

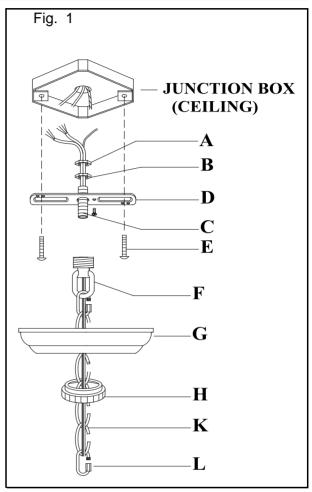

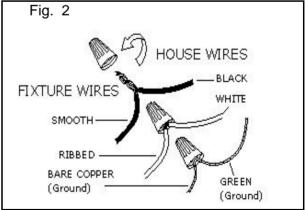

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.