















Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name: _____ Co. Account #: _____ to be filled out by retailer	
Canopy  1ea □ Φ130*H28.5mm □	Hex nut  1ea 1/2"*H3mm	Canopy loop and collar  1ea 1/2"*H46mm	
Chain  1ea 6ft*4.2mm	Wire connector  2ea A3 Orange	Nipple  1ea 1/2"*H55mm	
Chain connector  2ea Φ5*H58.5mm	Mounting screw  2ea 8/32"*H1"	Deco screw  3ea	
Mounting strap w/ ground screw  1ea 1" *4" w/ Φ1/2"center	Spacer Tube and Nipples □  1 ea 1/2"*H40mm	Diffuser  1ea	2 ea 3/8"*H25mm
Finial  1 ea	Hex Wrench  1ea L47mm*H17mm		
Part Needed _____		Quantity _____	
Part Needed _____		Quantity _____	
Reason why (missing, scratched, broken glass, bent, bad finish)			
Comments _____			


FIXTURE ASSEMBLY INSTRUCTIONS

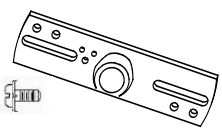Read and review installation instruction sheet before assembling the fixture.

1. Slide the support Rods (C) into the holes of Top cap and screw the Deco screw (B) into the top of the Rod (C) until tight.

2. Feed the fixture wires through the Top loop (A) and pull the wires until taut. Then screw the Top loop (A) to the coupling on the top of fixture until tight.

NOTE: INSTALL THE GLASS DIFFUSER AFTER THE FIXTURE IS HUNG.

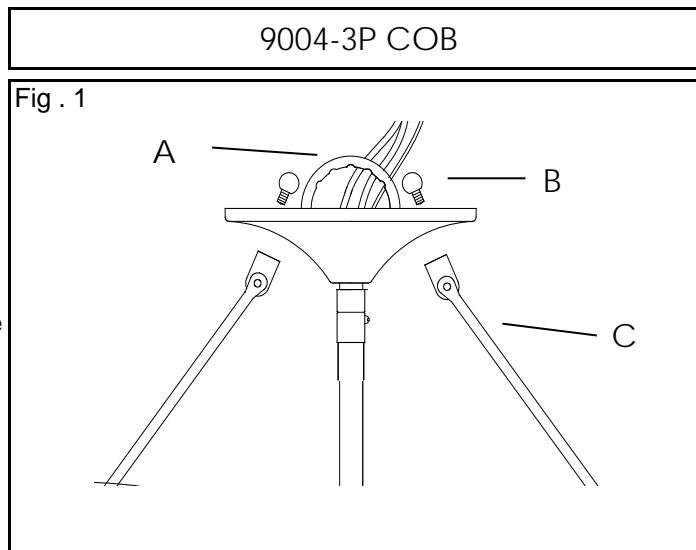

PARTS & ASSEMBLY SHEET continued

Fixture Name: Havana 9004-3P COB

NOTE: there is a set screw at the top of center column. Loosen this screw to help in assembly. Re-tighten after assembly is complete.

3. Place the fabric shade on the top of socket assembly and thread the screws (already attached to the fixture frame) into the assembly. Then place this assembly into the Rattan Cage.

4. Join the support rods (C) to the Rattan Cage metal lip and secure by tightening set screw with the Hex Wrench (D). *see inset

5. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (C2) then remove the excess Chain (C2) and discard it.

6. Use one chain connector (E2) to attach one end of the chain to the Top loop (A) and close the chain connector.

7. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.

8. Slip Canopy loop collar (B2) over the chain, then do the same with the canopy (F2).

9. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A2) and close the chain connector.

10. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.

11. Thread a Nipple (E) into the socket assembly coupler and Spacer tube (F), then thread the other Nipple (E) to other end of the Spacer tube.

12. Install the light bulbs in accordance with the fixture's specifications.

13. Slide the Washer (G), glass Diffuser (H) and Washer (G) over the Nipple (E) and secure tightly with bottom Finial (K),

(DO NOT EXCEED MAXIMUM WATTAGE RATING!)

Fig. 2

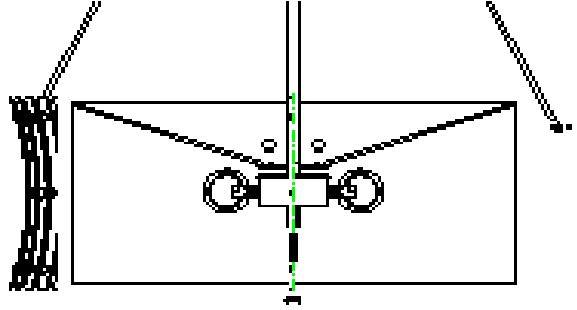


Fig. 3


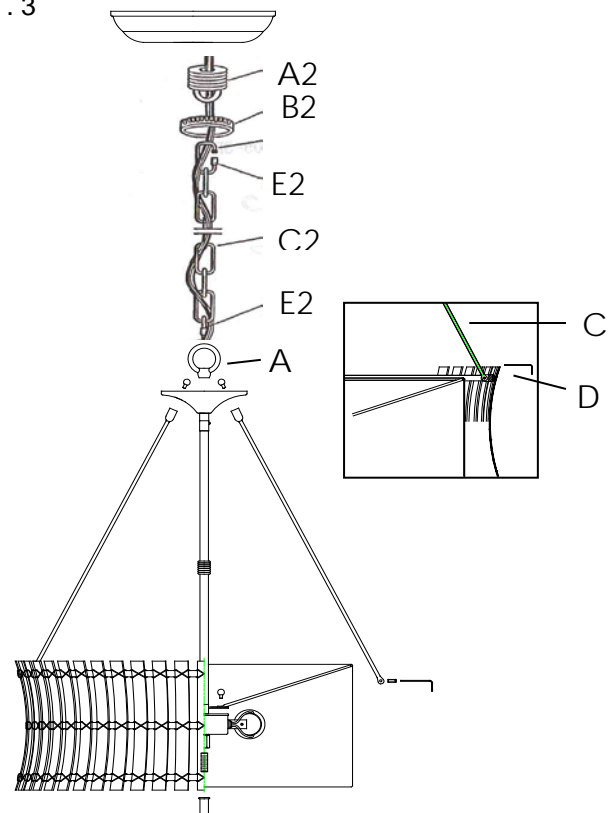


Fig. 4

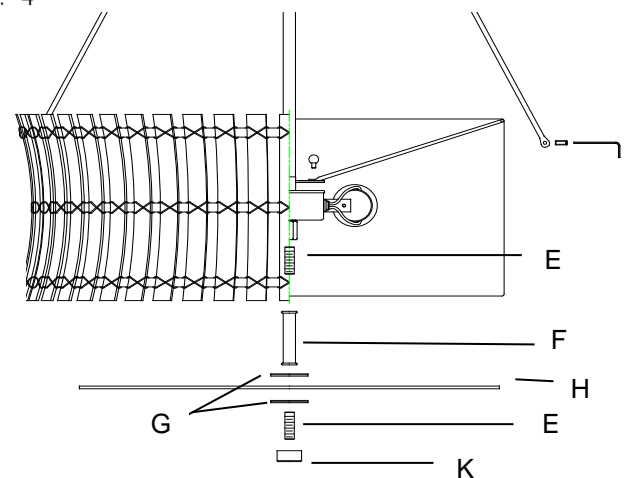

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig 1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
3. Thread 2-1/8" Nipple (H) into Canopy loop (A2) until snug. Thread Hex nut (F) and Washer (E) on next.
4. Thread other end of the Nipple (H) with Canopy loop attached into Mounting strap (D) about 4 complete turns.
5. Tighten the Washer (E) and Hex Nut (F) until tightening to the Mounting strap (D).
6. Take this mounting strap assembly and mount to ceiling junction box with Mounting Screws (G). Tighten screws securely with screw driver.
7. Unscrew the Canopy loop collar (B2) from the Canopy loop. Take the canopy and pass over the Canopy loop (A2). approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy loop collar.
8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)

10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 11. Attach the GROUND wire (GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

13. Raise Canopy (I) to the ceiling and secure in place by tightening the Canopy loop collar (B2) onto the Canopy Loop (A2)
14. Install the light bulbs and glass shade as per the fixture assembly sheet.

Fig. 1


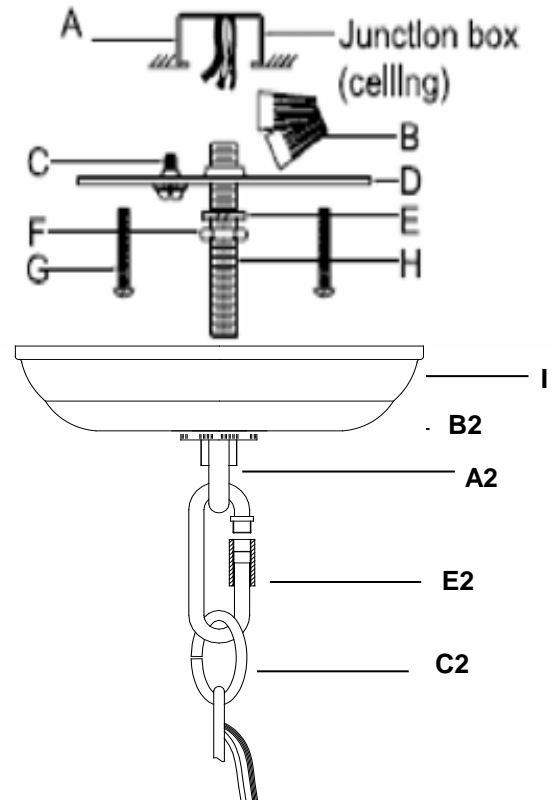


Fig. 2

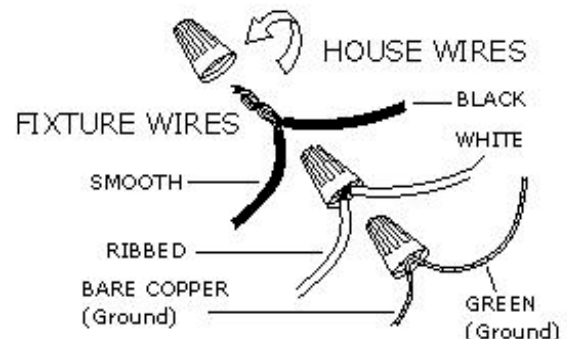

**YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.**