

## PARTS & ASSEMBLY SHEET

Fixture Name: Presilla 9363-M1L GMT

This fixture assembled PO:	Date:
----------------------------	-------

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name:to be filled out by retailer		Co. Account #:	
Mounting Strap		Mounting screw	£	Mounting screw	1
1ea 104*W24*H11mm		2ea 8/32-IP*H1"	62-2-00 6 600 - 00 11 1-0-5	2ea 5/32-IP*H1-1/2"	
Hex nut	(T)	Wire connnector		Finial	
2ea 5/32-IP*H3mm		3 ea A3 Orange	L	2ea 3/8-IP*H9mm	
U Iron Clip (PT-OSRING 9363) 1ea L101*W70*H68mm		Canopy 1ea § 130Dia*H63.5mm		Rod  3ea 12.7mmDia* H12" 1ea 12.7mmDia* H6"	
Part Needed				Quantit	у
Part Needed				Quantity	y
Reason why Comments	(missing, scratche	ed, broken glass, ber	nt, bad finish)	_	


#### FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet, but do not install before assembling the fixture.

- 1. By measuring determine correct number of rods needed for proper hanging height.
- \* This fixture includes 4 rods (6", 12", 12", 12")
- 2. To shorten the fixture; slide the excess rods off the wires. To lengthen add additional rods.
- 3. Pull the fixture's wires through the rods (H,I,J) until taut and thread the rods together. Then thread to the fixture coupler (K) at top of fixture and the swivel joint on Canopy. (G)
- 4. Place the U Iron Clip (N)"OSRING" over the Socket (O).
- 5. Slide the Glass Shade (L) over Socket (O) and secure it by threading the White Spacer Ring(M-1) and Socket Ring (M) onto the Threaded Socket (O) until tight.
- 6. Install the light bulb in accordance with the fixture's specification.

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)
NOTE: INSTALL THE GLASS ASSEMBLY AFTER
THE FIXTURE IS HUNG.

## 9363-M1L GMT

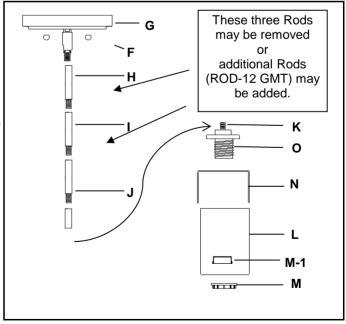

For Customer Service, contact the place of purchase to arrange for replacement parts.



# INSTALLATION INSTRUCTIONS

Fixture Name: Presilla 9363-9, -5, -M1L, -M3 GMT

For Pendant Light Fixture

## WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

#### HANGING THE FIXTURE (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
- 3. The Mounting Strap (B) contains several pairs of threaded holes, find the pair of holes that match the hole spacing in your fixture Canopy (G) and thread the two Mounting Screws (C) into the Mounting Strap (B) facing down, Secure in place with hex nuts. These will have their threaded ends protrude through the two holes in the fixture canopy (G).
- 4. Place the Mounting Strap (B) over the junction
- 5. Attach the Mounting Strap (B) to the Junction Box using the two mounting screws (A). Tighten the screws (B) securely with screw driver.

## **CONNECTING THE WIRES (Fig. 2)**

- 6. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 7. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (B) or connect both wires together using the correct size of wire connectors.

NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

8. Tuck these wire connections neatly into the Junction Box.

## FINISHING THE INSALLATION (Fig. 3)

9. Place the fixture's canopy over the Mounting Strap (B) and over the Mounting Screws (C), adjust the fixture Canopy (G) until the Mounting Screws (C) protrude out from the Canopy (G) and secure the fixture against the ceiling by threading the Decorative nuts(F) until tight.

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

