

- 1) Screw threaded pipe into coupling on top of roof.

2) Set top trim down over threaded pipe and screw loop onto end of threaded pipe.

3) TURN OFF POWER.
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.

a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.

b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.

c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.

4) Take threaded pipe from parts bag and screw in screw collar loop a minimum of 6 mm (1/4”). Lock into place with hexnut.

5) Run another hexnut down threaded pipe almost touching first hexnut. Now screw threaded pipe into mounting strap. Mounting strap must be positioned with extruded thread faced into outlet box. Threaded pipe must protrude out the back of mounting strap. Screw third hexnut onto end of threaded pipe protruding from back of mounting strap.

6) Connect mounting strap to outlet box.

7) Unscrew the threaded ring from screw collar loop. Take canopy and pass over screw collar loop. Approximately one half of the screw collar loop exterior threads should be exposed. Adjust screw collar loop by turning assembly up or down in mounting strap. Remove canopy.

8) After desired position is found, tighten both top and bottom hexnuts up against the bottom and top of the mounting strap.

9) Slip canopy over screw collar loop and thread on threaded ring. Attach chain (with fixture connected) to bottom of screw collar loop. Unscrew threaded ring, let canopy and threaded ring slip down.

10) Weave electrical wire and ground wire through chain links no more than 3 inches apart. Pass wire through threaded ring, canopy, screw collar loop, threaded pipe and into outlet box.

11) Grounding instructions: (See Illus. A or B).

A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.

B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.

If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector (not provided.) after following the above steps. Never connect ground wire to black or white power supply wires.
-
- 12) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.
- | | |
|---|---|
| Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |
- *Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)
-
- 13) Raise canopy to ceiling.

14) Secure canopy in place by tightening threaded ring onto screw collar loop.

15) Insert recommended bulb.

16) Screw end of threaded pipe with bead into bottom of fixture body.



17) Thread coupling onto end of threaded pipe.

18) Screw end of threaded pipe with hexnut into bottom of coupling.

19) Raise glass up to fixture, fitting top of glass inside roof of fixture.

20) Pass bottom trim over end of threaded pipe and screw finial onto end of threaded pipe. (DO NOT over tighten.)
- SEE OTHER SIDE FOR SPANISH TRANSLATIONS.
VEA EL OTRO LADO DE TRADUCCIONES AL ESPAÑOL.
- Date Issued: 11/25/11
- IS-49134-US


- Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres (no incluido) después de seguir los pasos anteriores. Nunca conectar el alambre a tierra a los alambres eléctricos negro o blanco.

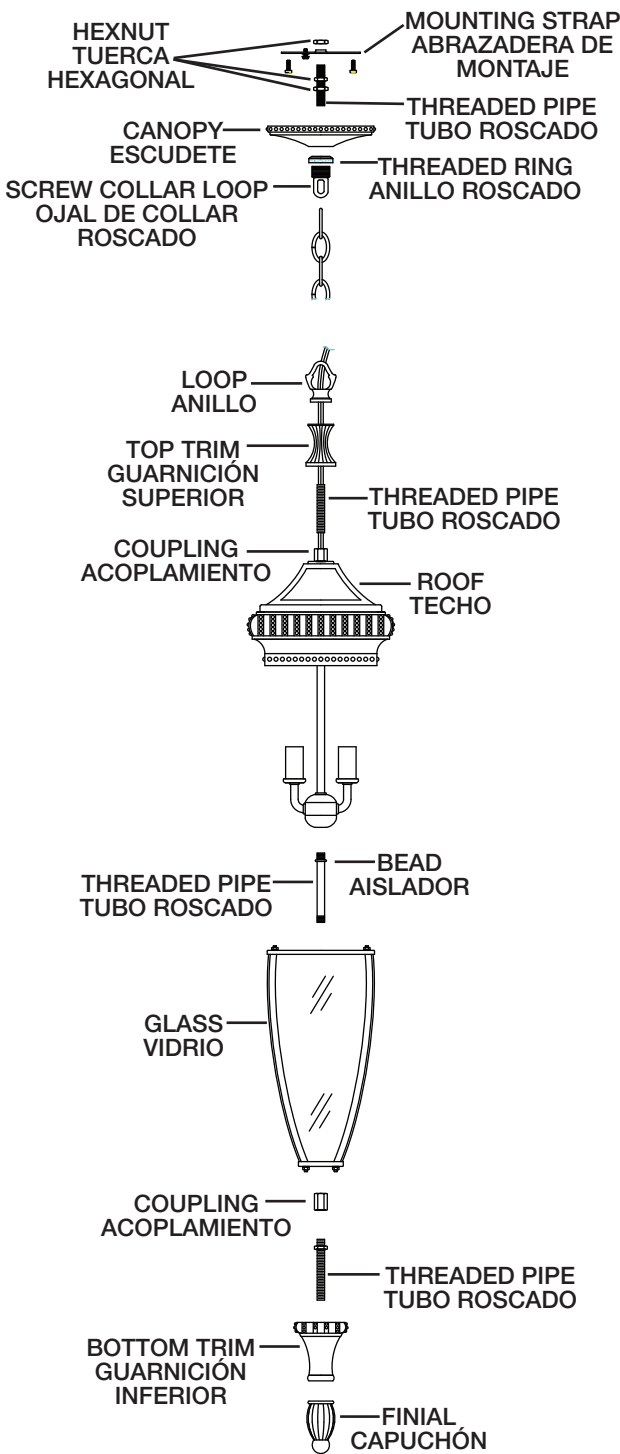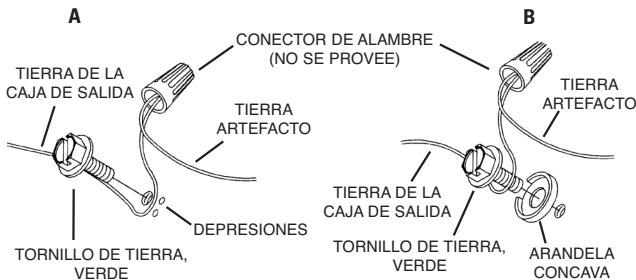

- 12) Haga las conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).



- 13) Levante el escudete hasta el cielorraso.
- 14) Asegure en el escudete en el lugar apretando el anillo roscado en el ojal de collar roscado.
- 15) Inserte las bombillas recomendadas.
- 16) Atornille el extremo del tubo roscado con aislador de cuenta en la parte inferior del cuerpo del artefacto.
- 17) Rosque el acoplamiento en el extremo del tubo roscado.
- 18) Atornille el extremo del tubo roscado con tuerca hexagonal en la parte inferior del acoplamiento.
- 19) Levante el vidrio hasta el artefacto, encajando la parte superior del vidrio adentro del techo del artefacto.
- 20) Pase la guarnición inferior arriba del extremo del tubo roscado y atornille el capuchón en el extremo del tubo roscado.
(NO apriete excesivamente.)