
## Assembly Instructions For

## 10084 (E) 2/11

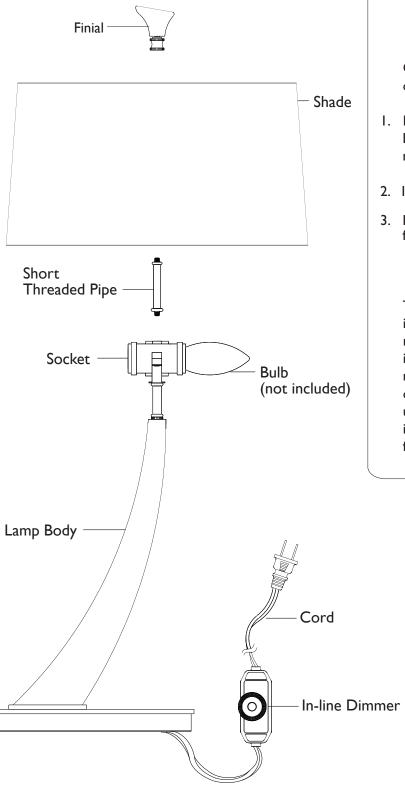

## READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

- Install (2) Type CM, 60 Watt Max. Medium Base Bulbs (not included) into Sockets as noted on relamping label at Socket area.
- 2. Install short threaded pipe onto lamp body.
- 3. Install shade onto short threaded pipe and screw finial onto short threaded pipe to secure shade.

## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

