
Assembly Instructions For

9614 (E) 1/08

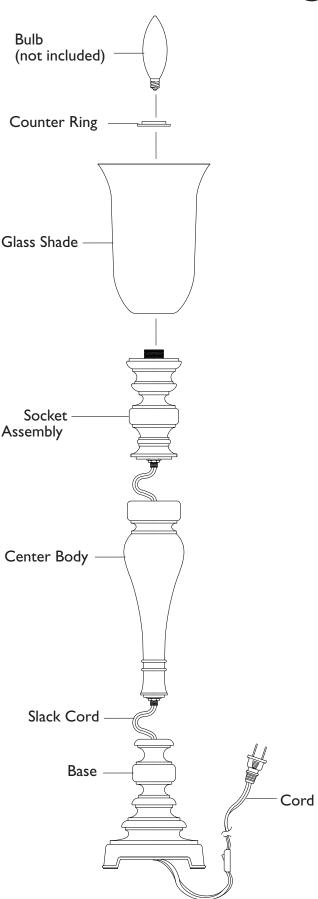

READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

- Grasp Cord that exits from Base and pull carefully until any excess Cord in between parts is removed.
- 2. Thread Center Body into Base and turn to tighten.
- 3. Secure glass shade into place by fastening counter ring onto socket.
- 4. Place Socket Assembly on Center Body. Turn to tighten. Then set lamp upright on Base.
- 5. Install a Type B, 60 Watt Max. Candelabra Base Bulb (not included) into Socket as noted on relamping label at Socket area.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

