
## Assembly Instructions For

## 9868 (E) 8/09

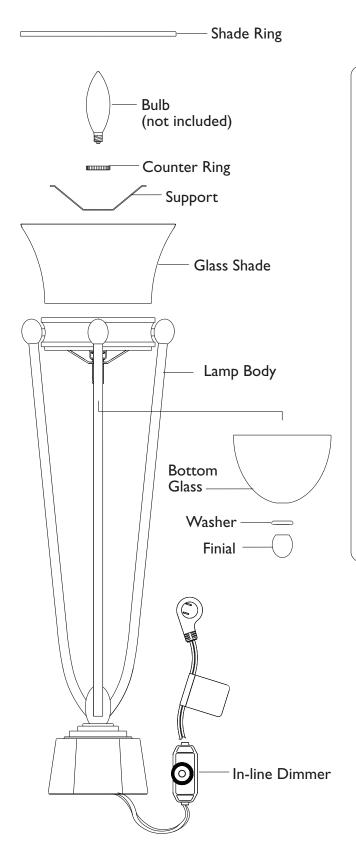

## READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

- Place glass shade onto lamp body. Secure by placing support and counter ring onto threaded socket.
- 2. Install a type b, 60 watt max. Candelabra base bulb (not included) into socket as noted on relamping label at socket area.
- 3. Install shade ring onto top of glass shade.
- 4. Install bottom glass onto bottom threaded pipe and secure with finial and washer.

## **IMPORTANT SAFETY INSTRUCTIONS:**

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

