
Assembly Instructions For

F2346/4 (E) 4/08

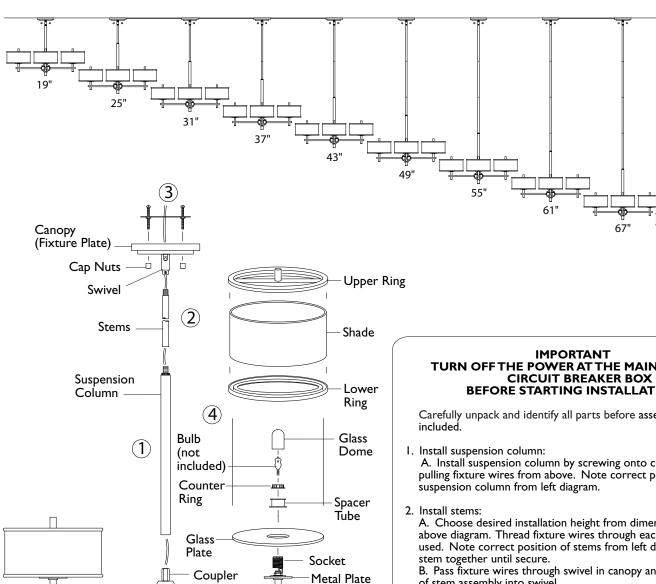



TURN OFF THE POWER AT THE MAIN FUSE OR **BEFORE STARTING INSTALLATION**

73"

Carefully unpack and identify all parts before assembly. Bulb not

A. Install suspension column by screwing onto coupler while pulling fixture wires from above. Note correct position of

- A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all
- B. Pass fixture wires through swivel in canopy and screw top end of stem assembly into swivel.
- 3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- 4. Install shade and bulb:
 - A. Place round glass plate over round metal plate.
 - B. Slip spacer tube and secure with counter ring. Do not over tighten.
 - C. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
 - NOTE: Make certain not to handle lamp with bare hand since this will cause lamp to shatter at high heat. Handle with clean soft cloth.
 - D. Install glass dome by screwing onto socket.
 - E. Place lower ring onto glass plate.
 - F. Place shade onto lower ring.
 - G. Place upper ring onto shade.
 - H Repeat others.