


Assembly Instructions For

F2488/6 (E) 5/09

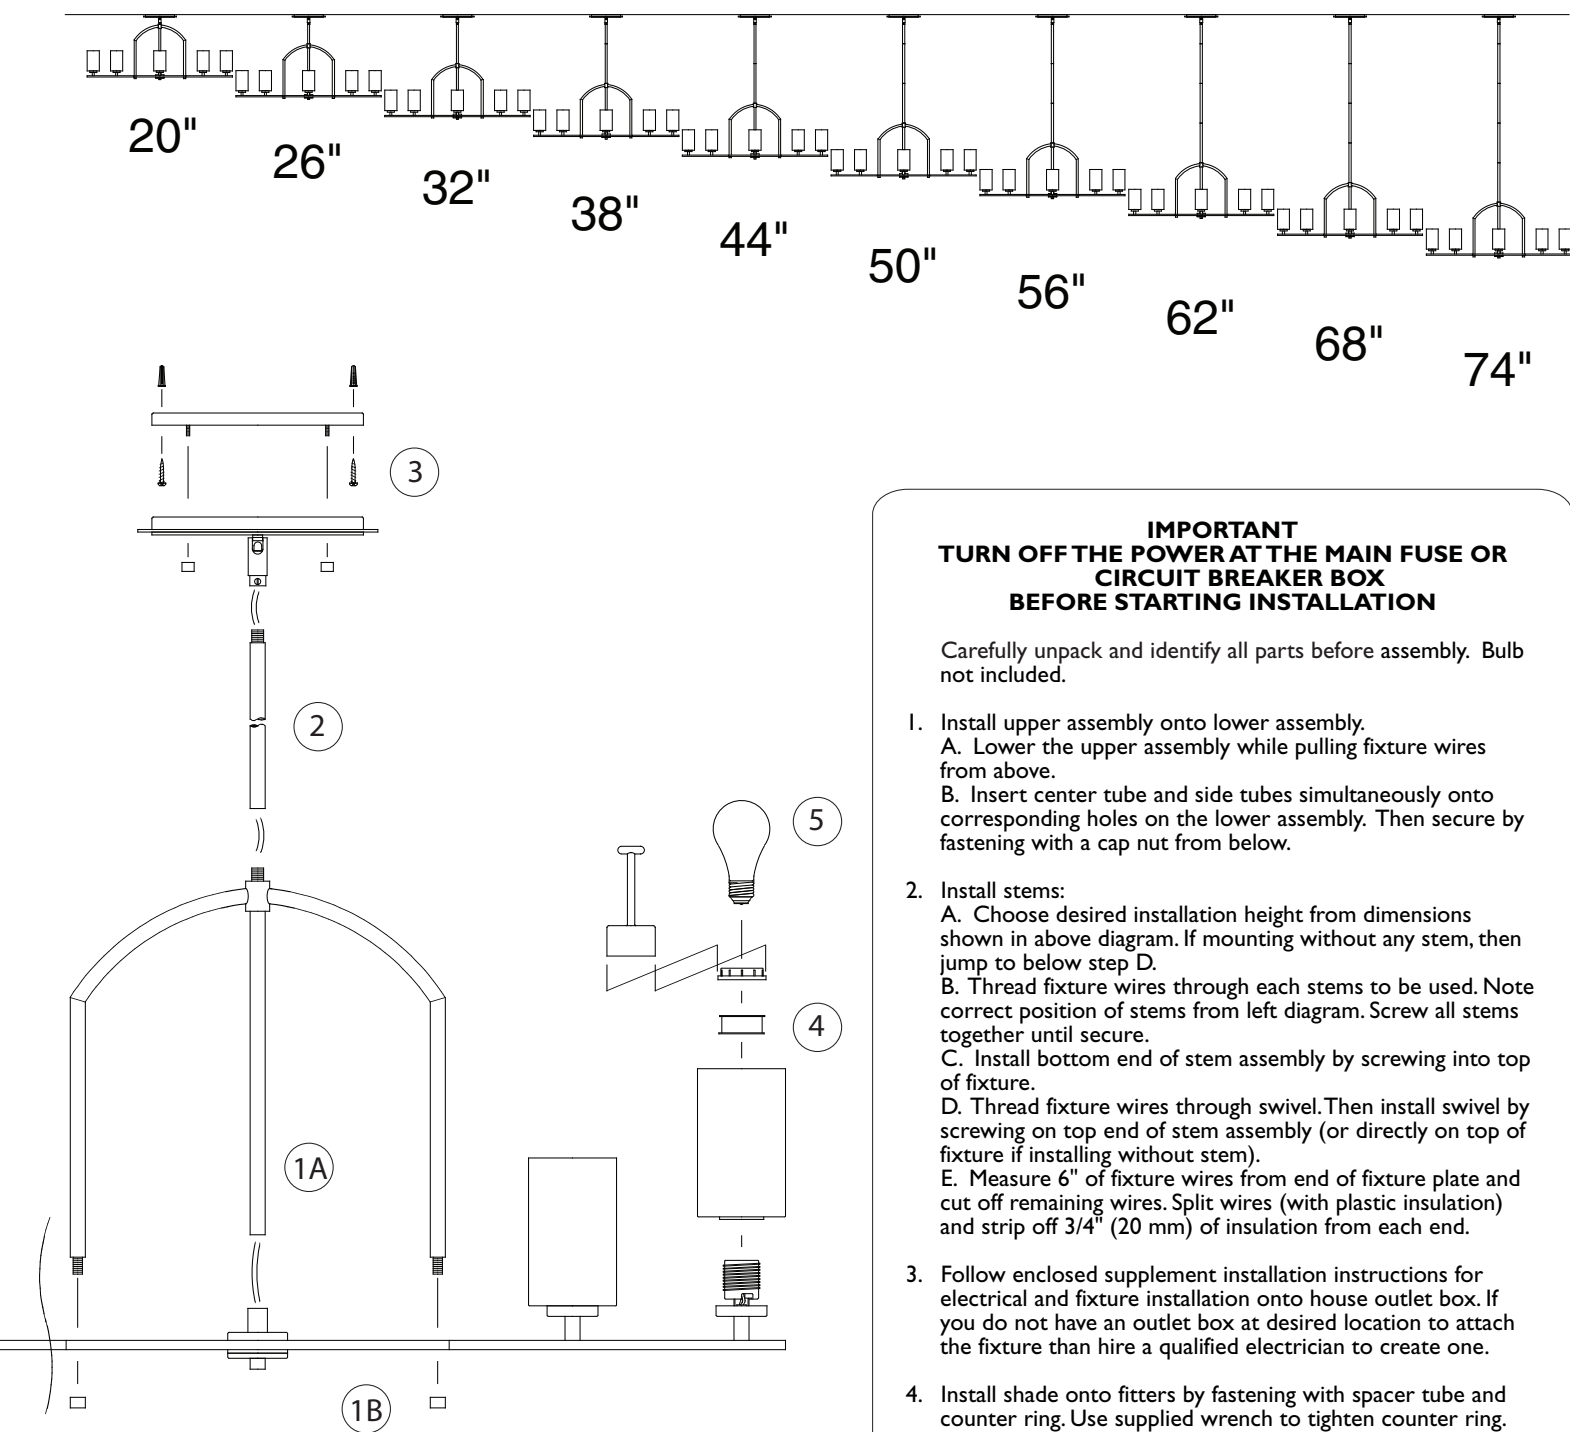


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install upper assembly onto lower assembly.
 - A. Lower the upper assembly while pulling fixture wires from above.
 - B. Insert center tube and side tubes simultaneously onto corresponding holes on the lower assembly. Then secure by fastening with a cap nut from below.
2. Install stems:
 - A. Choose desired installation height from dimensions shown in above diagram. If mounting without any stem, then jump to below step D.
 - B. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stems together until secure.
 - C. Install bottom end of stem assembly by screwing into top of fixture.
 - D. Thread fixture wires through swivel. Then install swivel by screwing on top end of stem assembly (or directly on top of fixture if installing without stem).
 - E. Measure 6" of fixture wires from end of fixture plate and cut off remaining wires. Split wires (with plastic insulation) and strip off 3/4" (20 mm) of insulation from each end.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. Install shade onto fitters by fastening with spacer tube and counter ring. Use supplied wrench to tighten counter ring.
5. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.

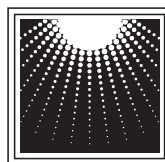

MURRAY
F E I S S
Generation Brands™